

## EXHAUST EMISSION CONTROL

### RAM TUBE

#### Remove and refit

19.10.21

#### Removing

1. Remove bolts and washers securing ram tube to cross member.
2. Disconnect flexible pipe.
3. Withdraw ram tube.

#### Refitting

Reverse operations 1 to 3.

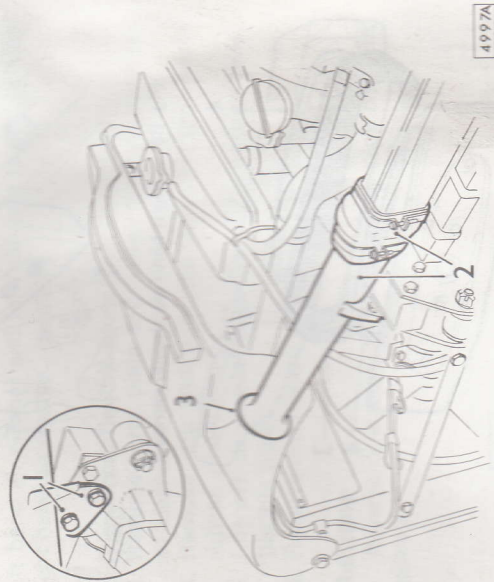


Fig. 91 Ram tube removal

### CARBURETTOR BALANCE PIPE

#### Remove and refit

19.15.22

#### Removing

1. Remove bolts screws and washer securing heat shields to inlet manifold; lift off heat shields.
2. Disconnect balance pipe from carburettors.
3. Release clips securing by-pass valve inhibitor pipes.
4. Disconnect balance pipes from crankcase breather pipe.
5. Release clips retaining pipes; withdraw pipes.
6. Examine rubber connecting hoses for cracks, splits etc., renew any showing signs of damage.

#### Refitting

Reverse operations 1 to 5.

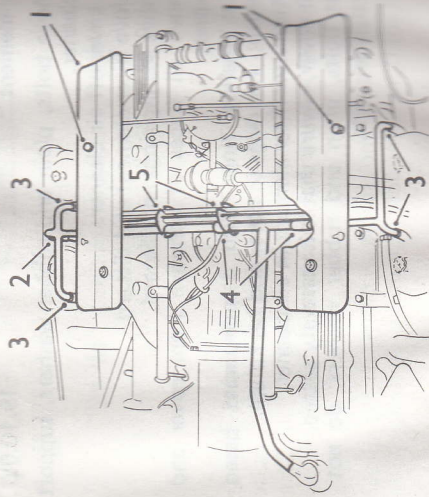


Fig. 92 Carburettor balance pipe removal.