


Published: 17-Feb-2013

Electronic Engine Controls - V8 S/C 5.0L Petrol - Engine Control Module (ECM) Removal and Installation


Removal

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).


2.

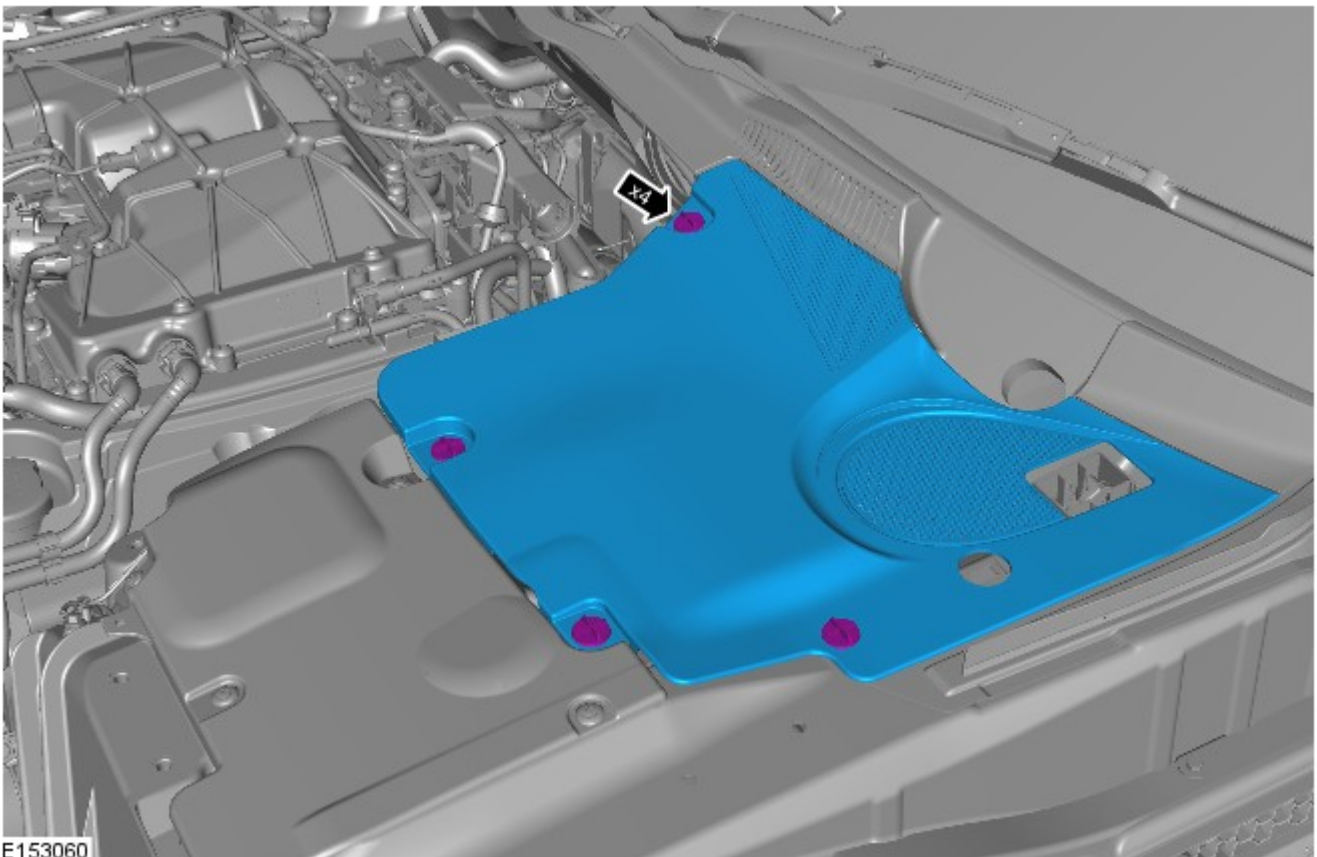


3. Torque: 10 Nm

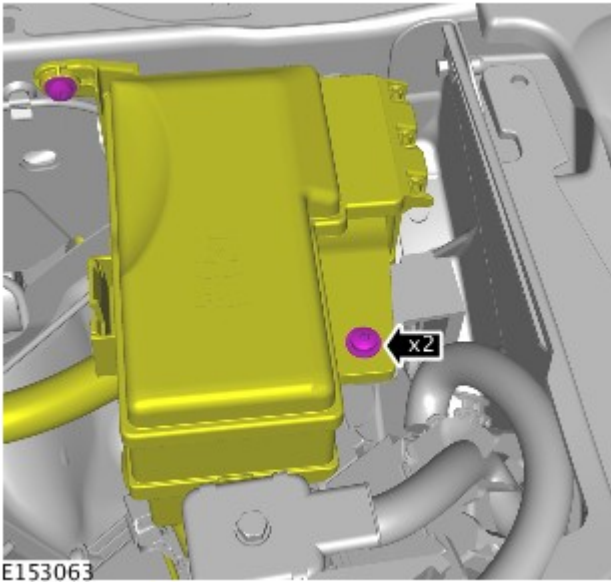


4. Torque: 10 Nm

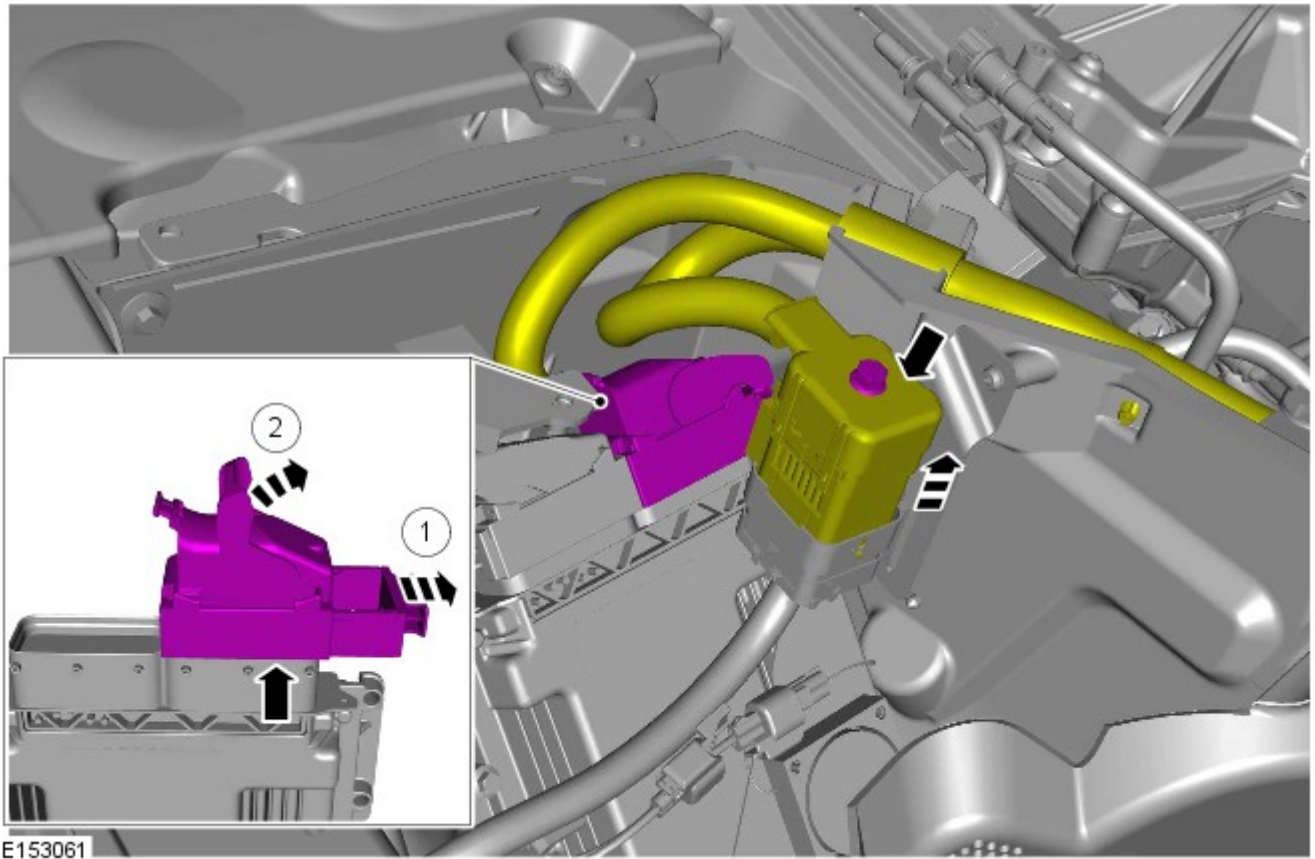


5. Torque: 6 Nm

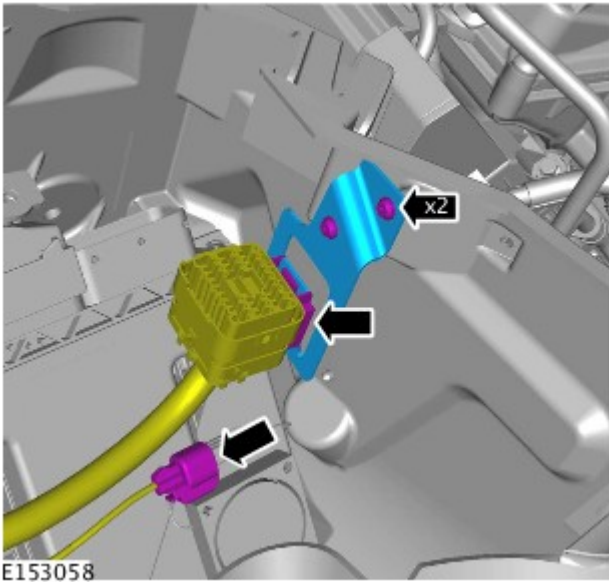

6. Torque: 9 Nm

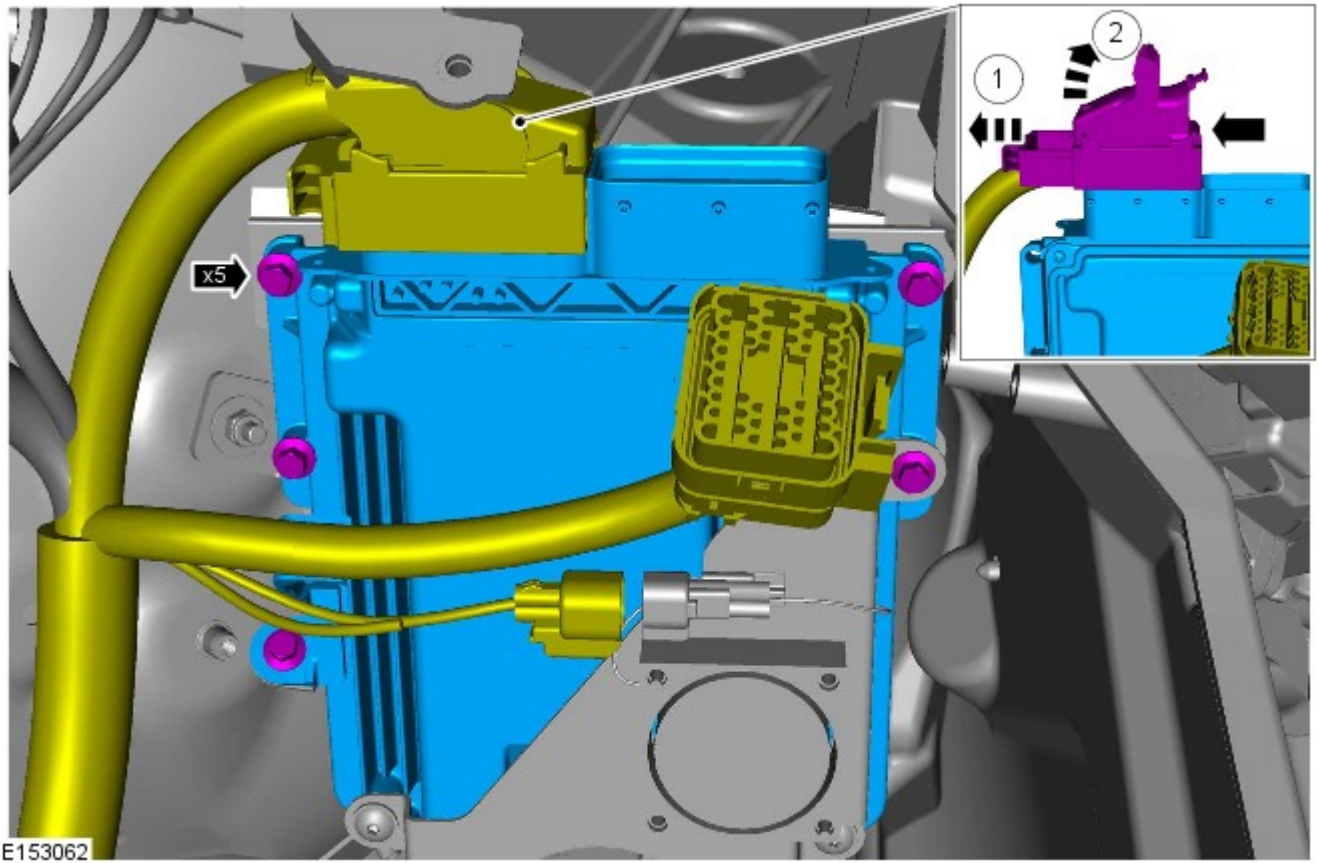

7. Torque: 7 Nm

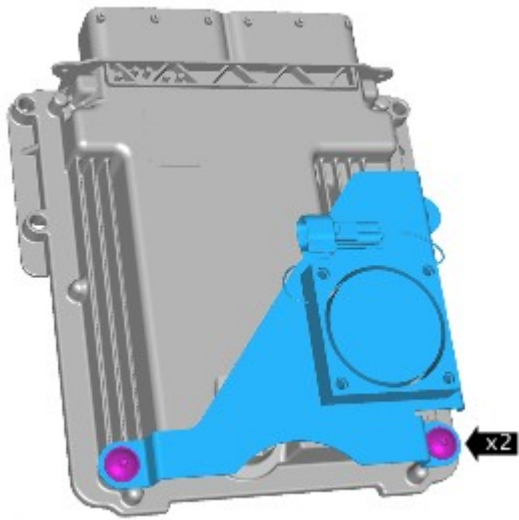

E153059

Installation

1. To install, reverse the removal procedure.
2. Configure the engine control module (ECM) using the diagnostic tool.