

Published: 28-Feb-2013

Climate Control - Blower Motor


Removal and Installation

Removal




NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
- 2.

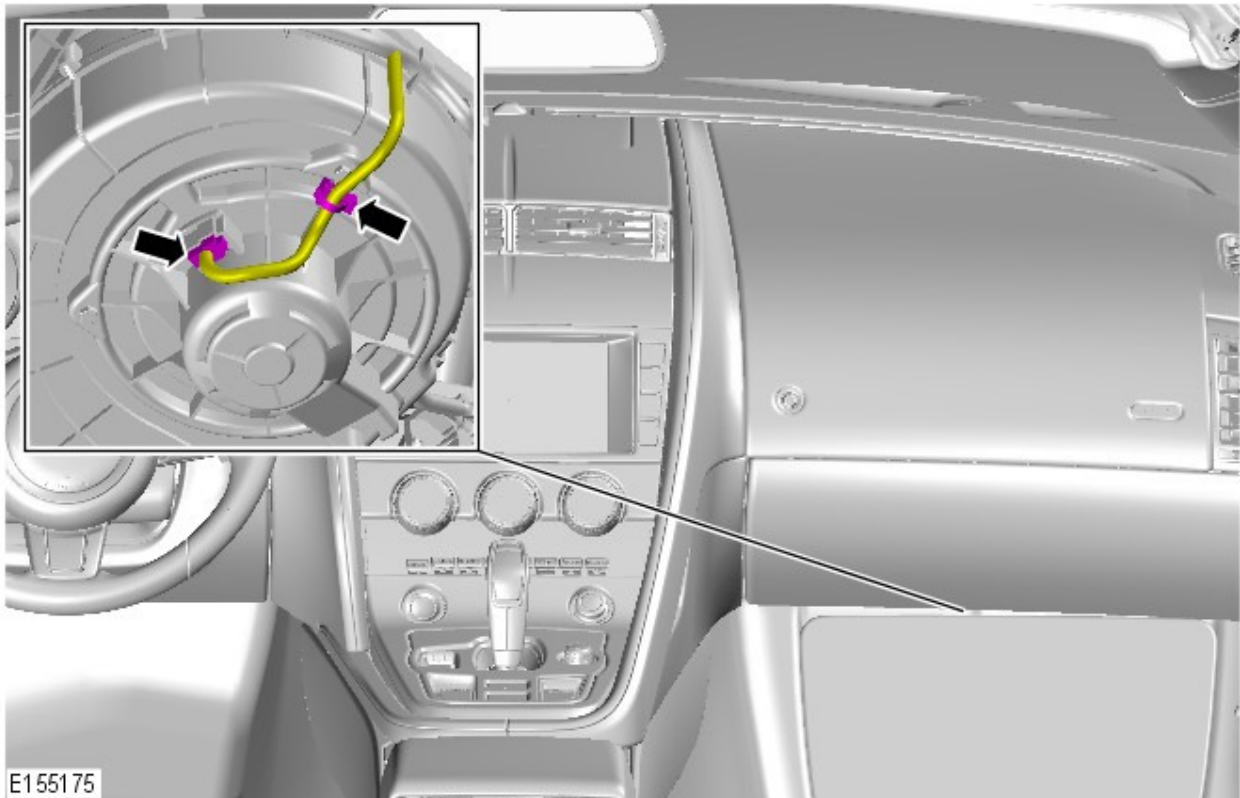

- 3.

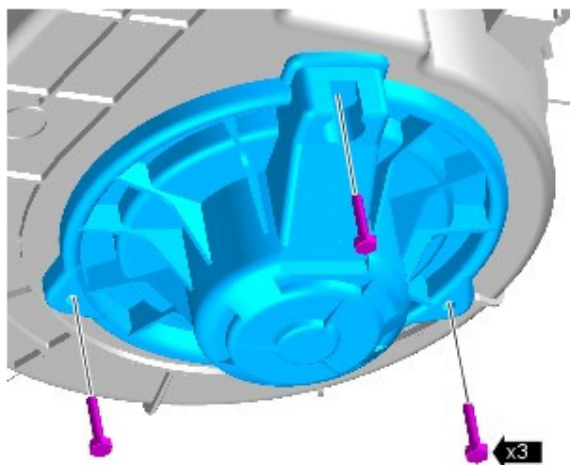

Installation

1. To install, reverse the removal procedure.