



⚠ CAUTIONS:

- Be prepared to collect escaping coolant.
- Make sure that all openings are sealed. Use new blanking caps.

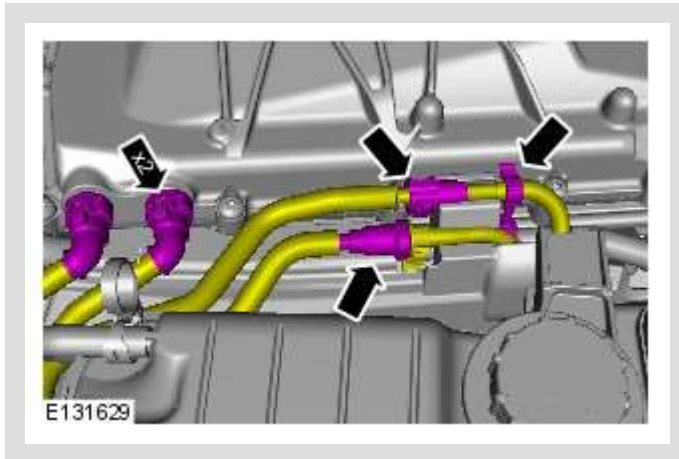

3.

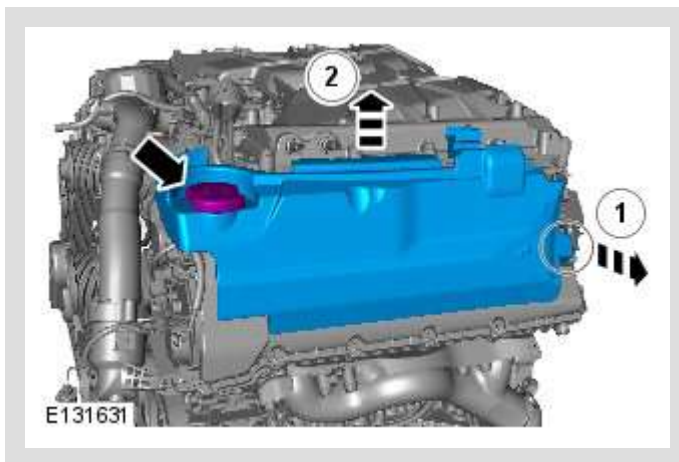

4.

⚠ CAUTION:

Carefully remove the ignition coil-on-plug(s).