

2015.0 F-TYPE (X152), 303-01

ENGINE - V6 S/C 3.0L PETROL

ENGINE MOUNT LH (G1584107)

REMOVAL AND INSTALLATION

12.45.01	ENGINE MOUNTING - LEFT HAND - RENEW	RIGHT HAND DRIVE	0.7	USED WITHINS	
----------	-------------------------------------	------------------	-----	--------------	--

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

All vehicles

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

2.


⚠ WARNING:

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Refer to: [Air Deflector](#) (501-02 Front End Body Panels, Removal and Installation).

4.

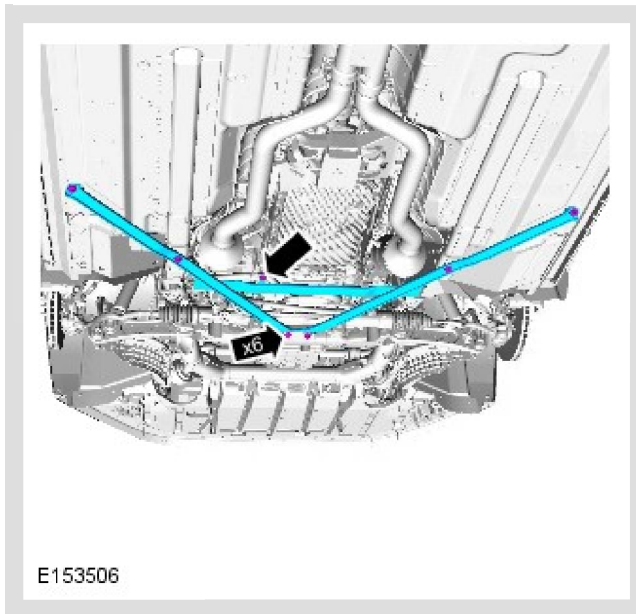


Torque: 55 Nm

Left-hand drive vehicles

1.


⚠ CAUTIONS:

- Discard the bolts.
- Make sure that new bolts are installed.

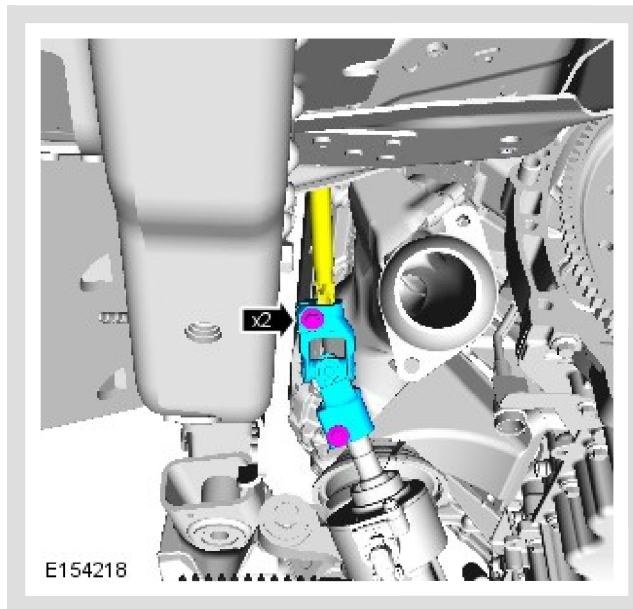

Torque: 35 Nm

2.

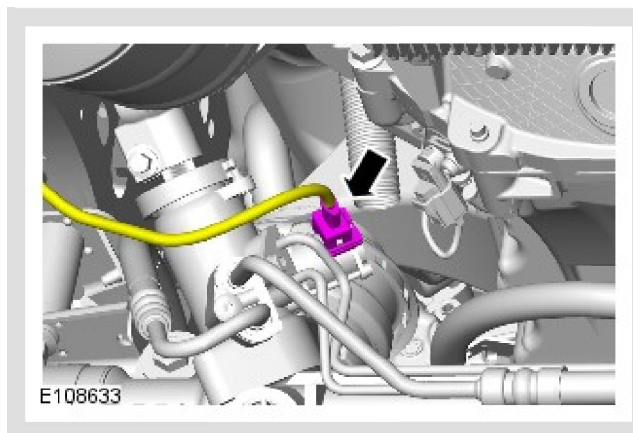


3.

⚠ **CAUTION:**

Make sure that the component is not suspended by the fluid hoses.

 **NOTE:**


Make sure to support the steering gear.

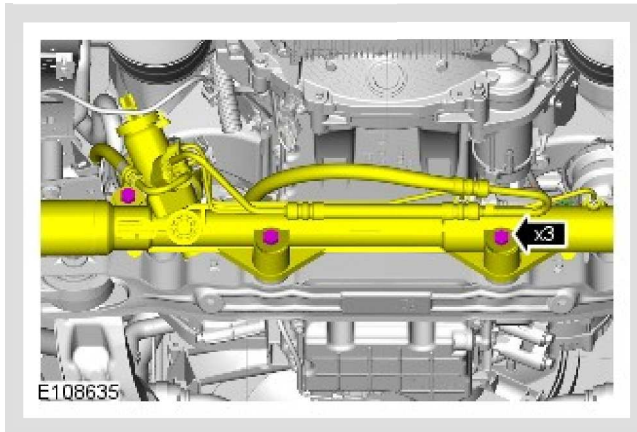

Torque: 100 Nm


All vehicles

1.

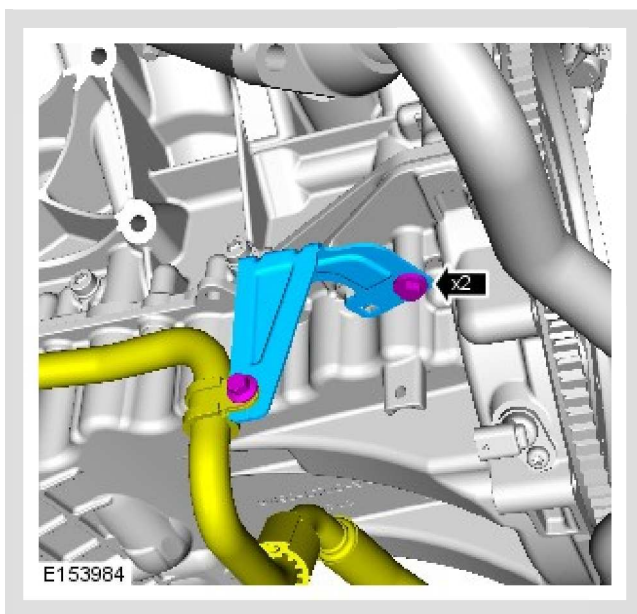

Torque: 10 Nm

2.

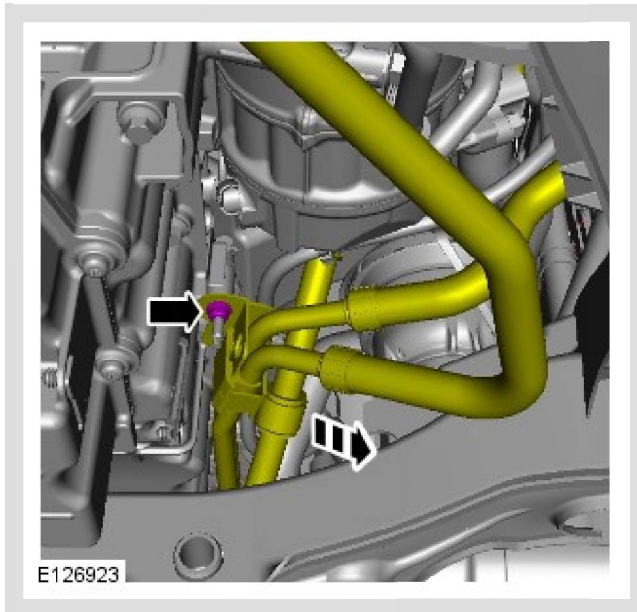


Torque: 10 Nm

3.

 **NOTES:**

- Remove and discard the nut.
- Make sure that a new nut is installed.

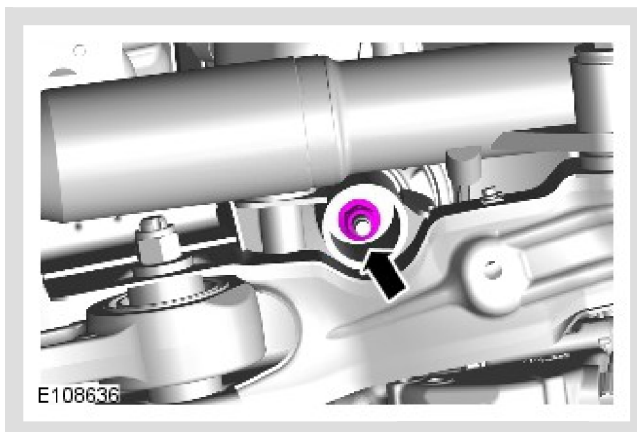


Torque: 63 Nm




4.

ⓘ CAUTIONS:

- Support the engine on a jack. The angle may need to be adjusted during this procedure.
- Use a wooden block to protect the oil pan when supporting the engine.

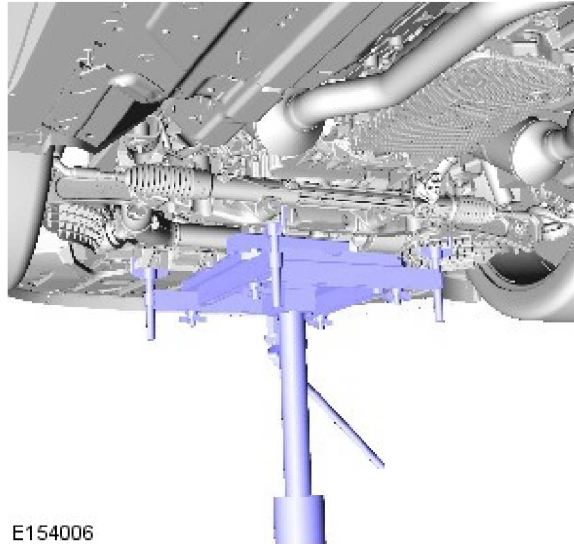

5.

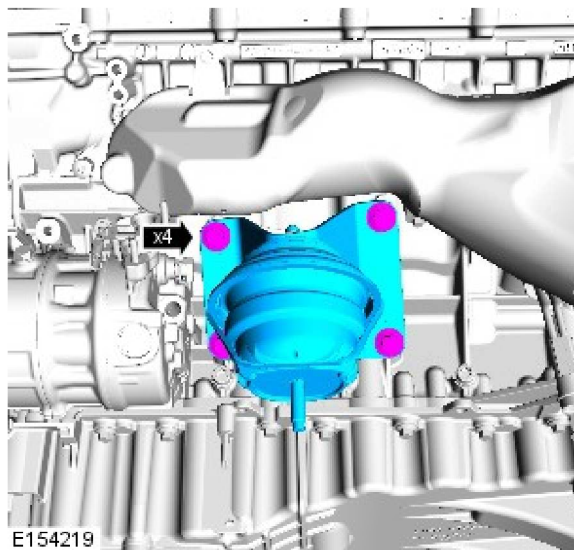


Torque: 48 Nm

6.

 NOTE:

Do not disassemble further if the component is removed for access only.

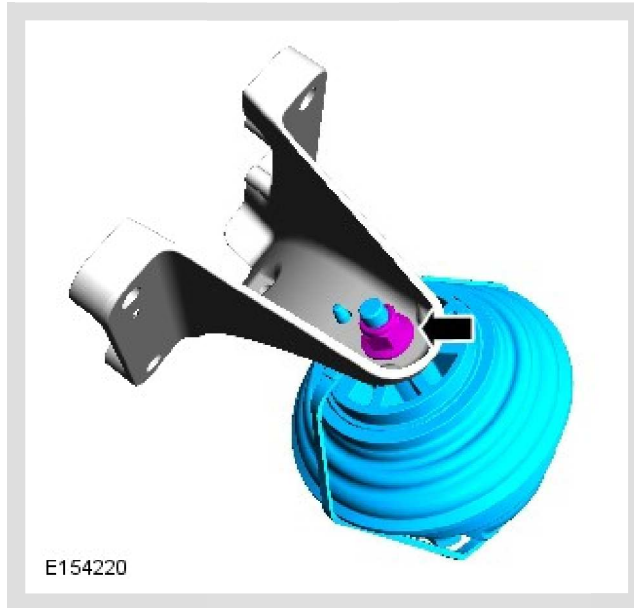

 NOTES:

Remove and discard the nut.
Make sure that a new nut is
installed.

Torque: 48 Nm

INSTALLATION

1. To install, reverse the removal procedure.

2015.0 F-TYPE (X152), 501-02

FRONT END BODY PANELS

AIR DEFLECTOR (G1580212)

REMOVAL AND INSTALLATION

76.11.41	ENGINE UNDERTRAY - RENEW	ALL DERIVATIVES	0.2	USED WITHINS	
----------	--------------------------------	--------------------	-----	-----------------	--

76.11.41	ENGINE UNDERTRAY - RENEW	PROJECT 7	0.2	USED WITHINS	
----------	--------------------------------	-----------	-----	-----------------	--

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

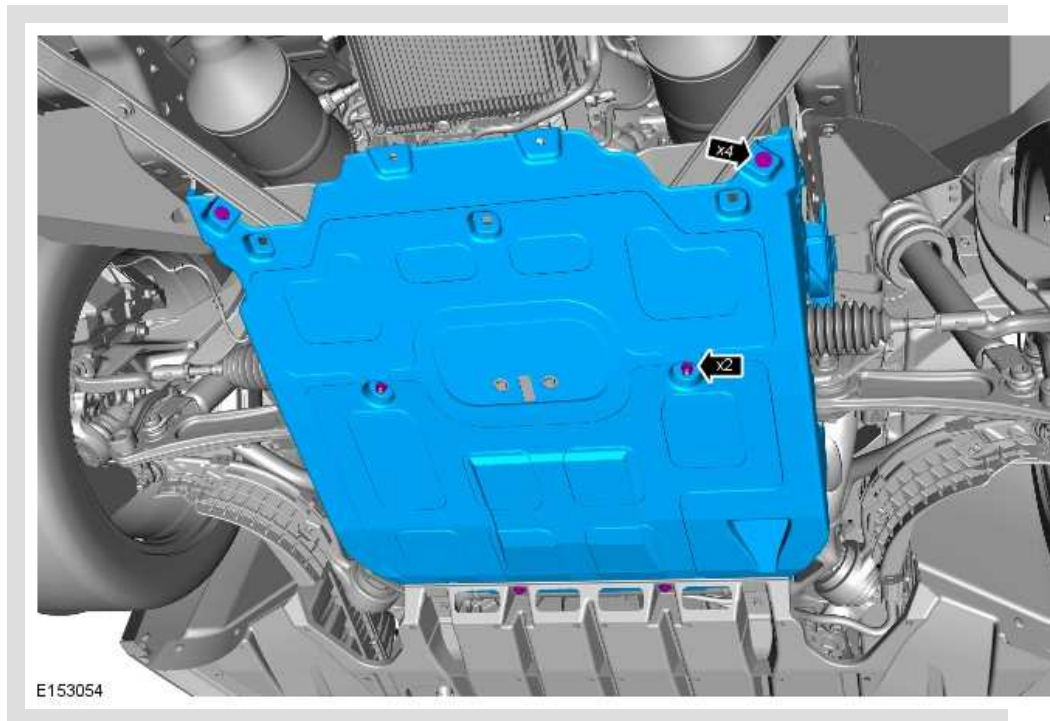

Torque:

Nuts and rear bolts **4.1 Nm**

Front bolts **9 Nm**

INSTALLATION

1. To install, reverse the removal procedure.

BATTERY DISCONNECT AND CONNECT (G1579511)

GENERAL PROCEDURES

86.15.15	BATTERY DISCONNECTION AND RECONNECTION PROCEDURE **** DO NOT ISSUE ****	ALL DERIVATIVES	0.2	USED WITHINS
----------	--	----------------------------	------------	-------------------------


NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- If a new battery is installed, the battery monitoring system (BMS) must be reset using Jaguar approved diagnostic equipment.


1. Refer to: [Battery Care Requirements](#) (414-00 Battery and Charging System - General Information, Description and Operation).

2. Obtain and record the audio unit preset radio frequencies.


3.

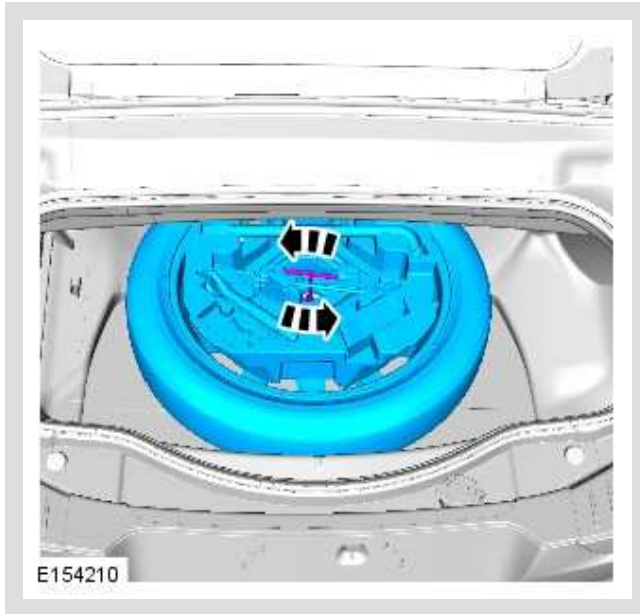

4.

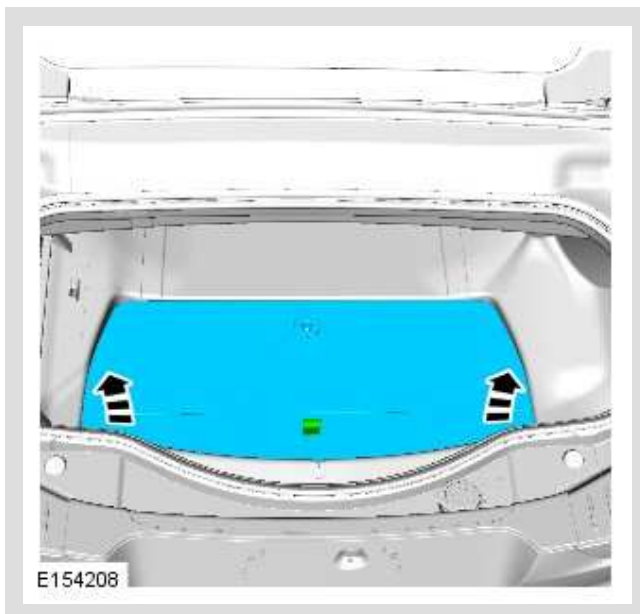


5.

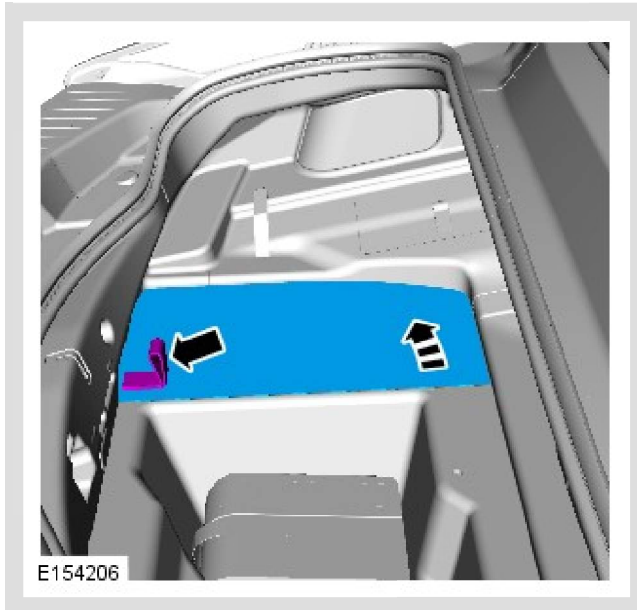

6.


ⓘ CAUTION:

Take extra care not to damage the wiring harnesses.

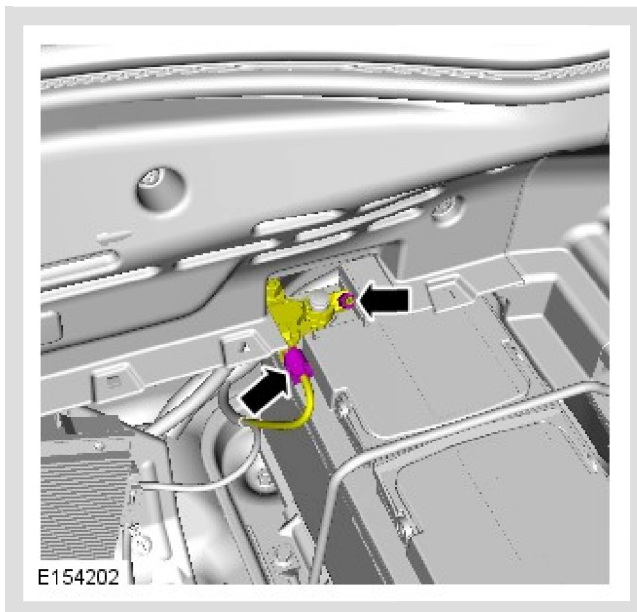

Torque: 6 Nm

7.

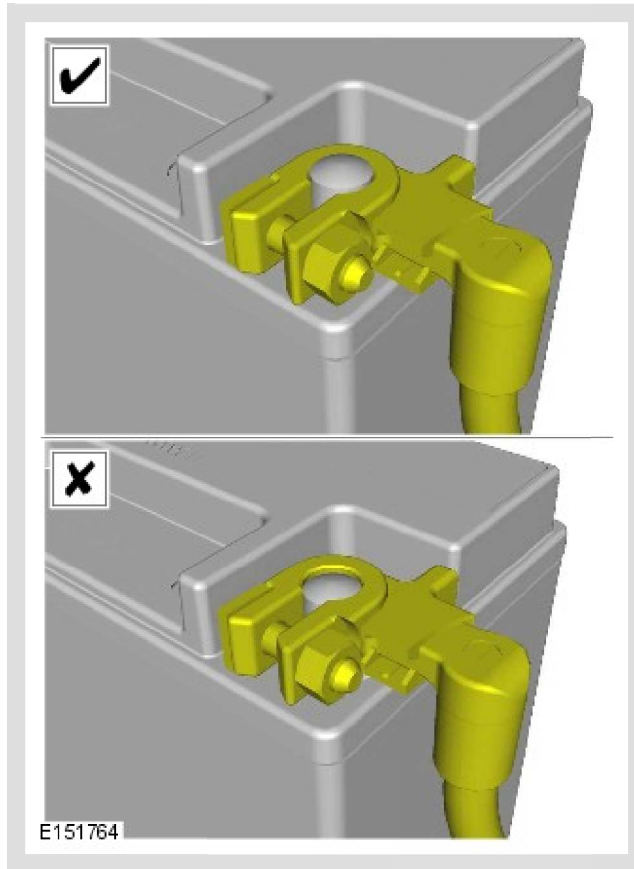

8. To install, reverse the removal procedure.

9.  **NOTE:**

This step is only necessary when installing a new battery.

Using Jaguar approved diagnostic equipment, reset the battery monitoring system (BMS).

10. Door Window Motor Initialization

11. Enter the audio unit preset radio frequencies.

12. Reset the clock to the correct time.



13. Start the engine and allow to idle until the engine reaches normal operating temperature.

14. Switch the engine off.

2015.0 F-TYPE (X152), 303-01

ENGINE - V6 S/C 3.0L PETROL

ENGINE MOUNT RH (G1584108)

REMOVAL AND INSTALLATION

12.45.03	ENGINE MOUNTING - RIGHT HAND - RENEW	RIGHT HAND DRIVE	0.8	USED WITHINS	
----------	--------------------------------------	------------------	-----	--------------	--

REMOVAL

NOTES:

- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

All vehicles

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).


2.

⚠ WARNING:

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

3. Refer to: [Air Deflector](#) (501-02 Front End Body Panels, Removal and Installation).

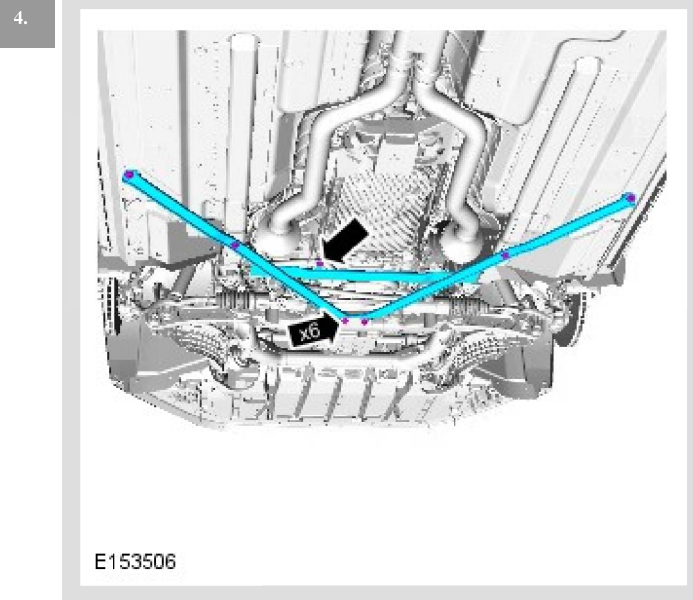


Torque: 55 Nm

Right-hand drive vehicles


1. **⚠ CAUTIONS:**

- Discard the bolts.
- Make sure that new bolts are installed.

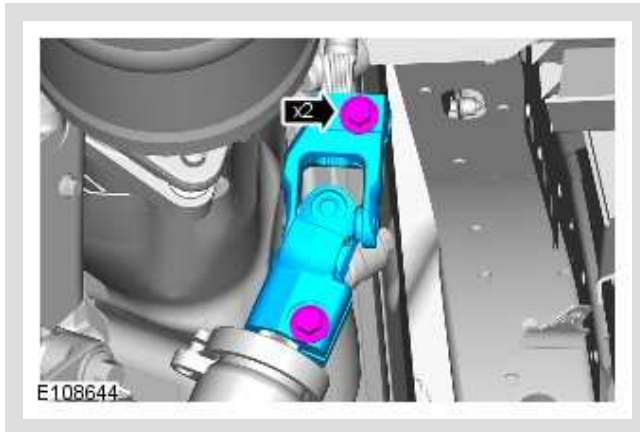


Torque: 35 Nm

2.

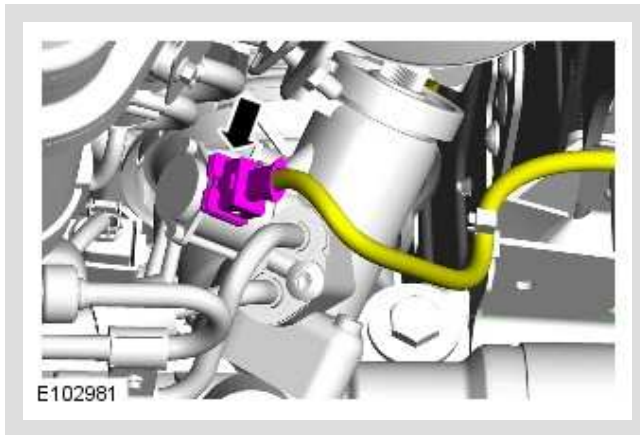

3.

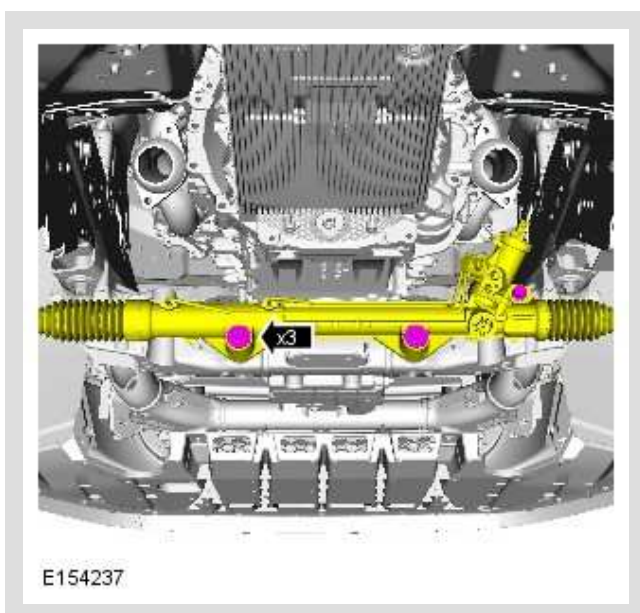

Torque: 100 Nm


All vehicles

1.



NOTES:

- Remove and discard the nut.
- Make sure that a new nut is installed.

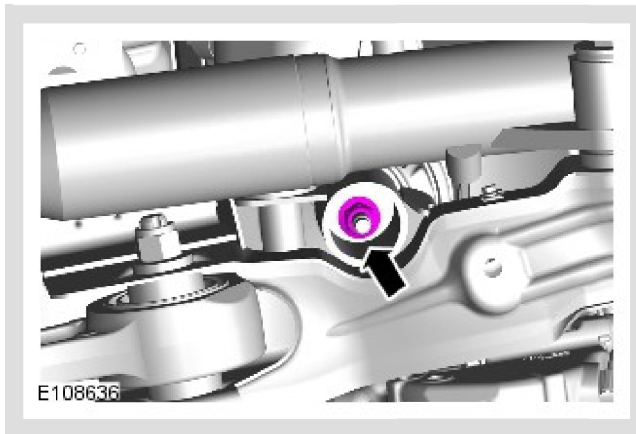


Torque: 63 Nm

2.




CAUTIONS:

- Support the engine on a jack. The angle may need to be adjusted during this procedure.
- Use a wooden block to protect the oil pan when supporting the engine.

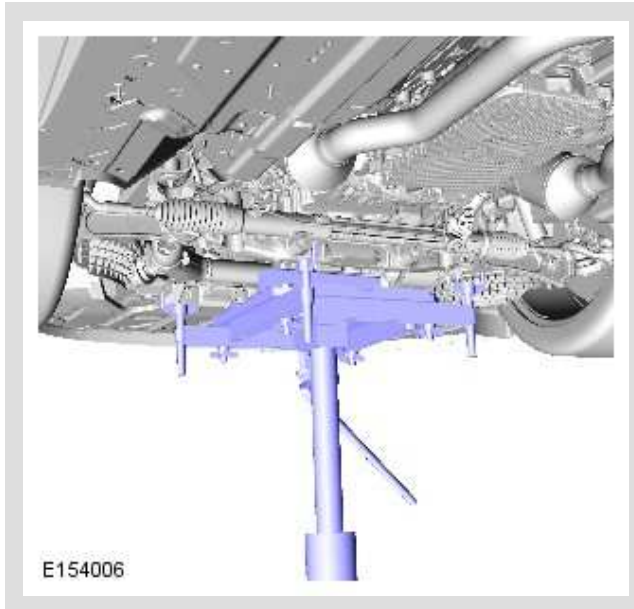


3.

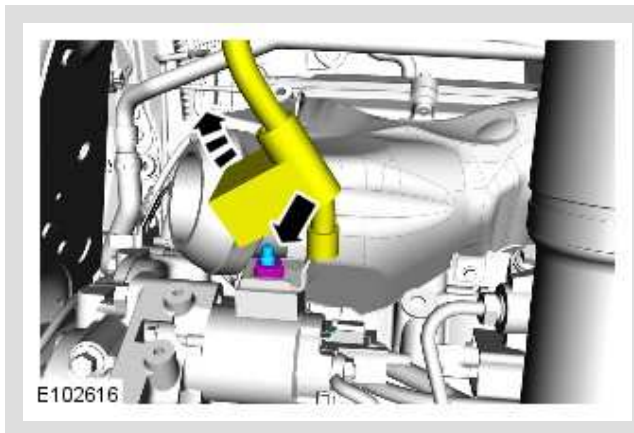

Torque: 12 Nm

4.

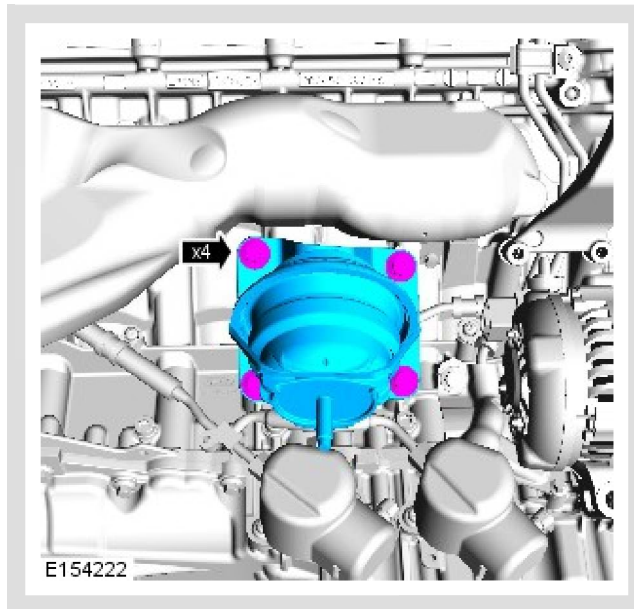


Torque: 48 Nm

5.

 **NOTES:**

- Do not disassemble further if the component is removed for access only.
- Remove and discard the nut.
- Make sure that a new nut is installed.

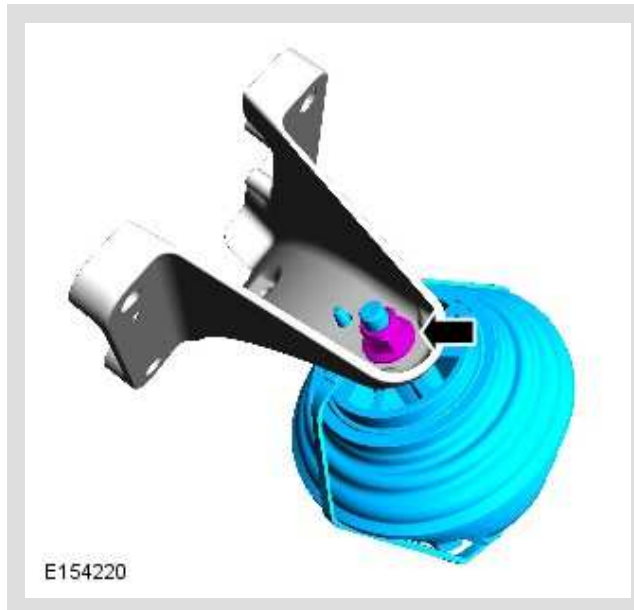

Torque: 48 Nm

INSTALLATION

1. To install, reverse the removal procedure.

2015.0 F-TYPE (X152), 501-02

FRONT END BODY PANELS

AIR DEFLECTOR (G1580212)

REMOVAL AND INSTALLATION

76.11.41	ENGINE UNDERTRAY - RENEW	ALL DERIVATIVES	0.2	USED WITHINS
----------	--------------------------------	--------------------	-----	-----------------

76.11.41	ENGINE UNDERTRAY - RENEW	PROJECT 7	0.2	USED WITHINS
----------	--------------------------------	-----------	-----	-----------------

REMOVAL

NOTE:

Removal steps in this procedure may contain installation details.


1.

WARNING:

Make sure to support the vehicle with axle stands.

Raise and support the vehicle.

2.

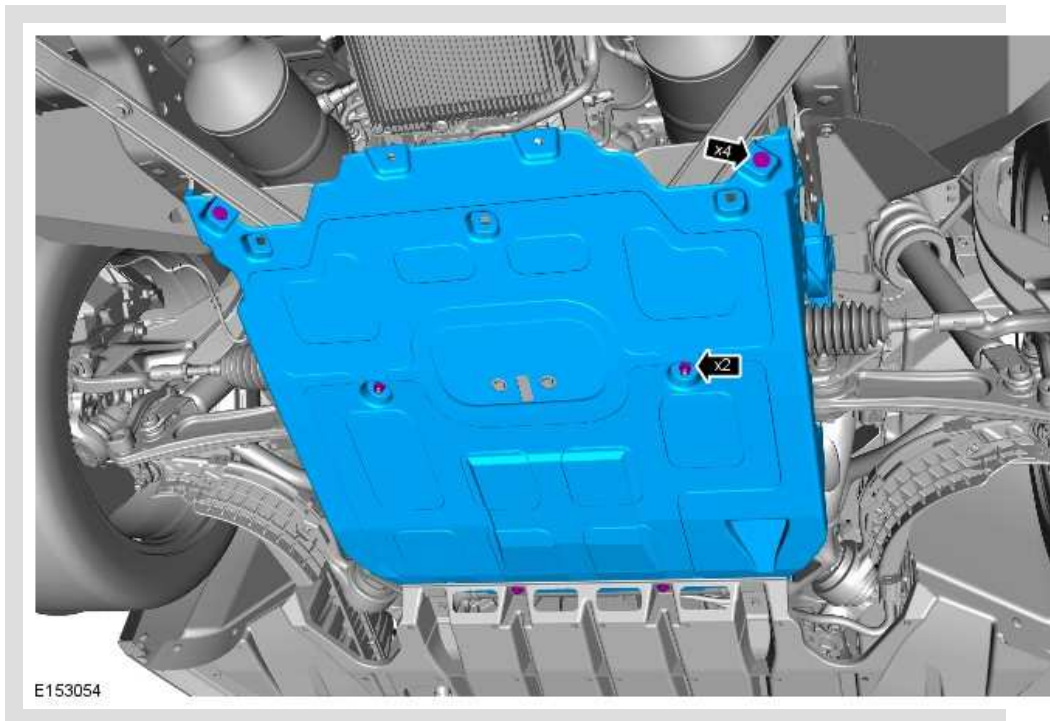

Torque:

Nuts and rear bolts **4.1 Nm**

Front bolts **9 Nm**

INSTALLATION

1. To install, reverse the removal procedure.