

2015.0 F-TYPE (X152), 204-01

FRONT SUSPENSION

FRONT LOWER CONTROL ARM (01380047)

REMOVAL AND INSTALLATION

60.35.53	FORWARD LOWER CONTROL ARM - RENEW	ALL DERIVATIVES	1.1	USED WITHINS
----------	-----------------------------------	-----------------	-----	--------------

REMOVAL

CAUTION:

Do not use air tools to install the nuts. Failure to follow this instruction may result in damage to the component.

NOTES:

- Removal steps in this procedure may contain installation details.
- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.
- RH illustration shown, LH is similar

1

CAUTION:

Discard the nut.

NOTE:

Note the fitted position.



Torque: **183 Nm**

NOTE:

Do not disassemble further if the component is removed for access only.

2

WARNING:

Make sure to support the vehicle with axle stands.


Raise and support the vehicle.

Remove the front wheel and tire.
Refer to: [Wheel and Tire](#) (204-04 Wheels and Tires, Removal and Installation).

Refer to: [Air Deflector](#) (501-02 Front End Body Panels, Removal and Installation).


CAUTION:

Discard the nut and bolt.

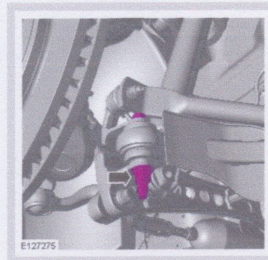

Torque:
Stage 1: **60 Nm**
Stage 2: **135°**

3

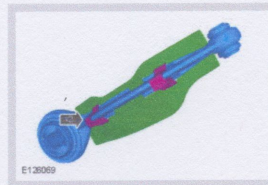

NOTE:

Do not disassemble further if the component is removed for access only.

INSTALLATION

CAUTION:

The final tightening of the suspension components must be carried out with the vehicle on its wheels

CAUTION:

Make sure that new nuts are installed.

4