

2015.0 F-TYPE (X152), 413-06

HORN

**HORN** (G1580303)

## REMOVAL AND INSTALLATION

86.30.02

HORN -  
RENEW

ALL  
DERIVATIVES

0.2

USED  
WITHINS


### REMOVAL

#### NOTES:


- Some components shown removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

2.

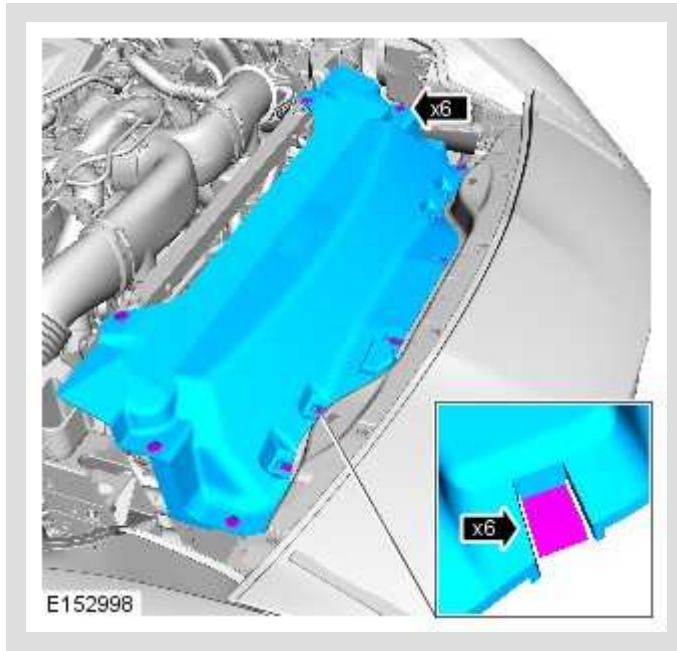

3.

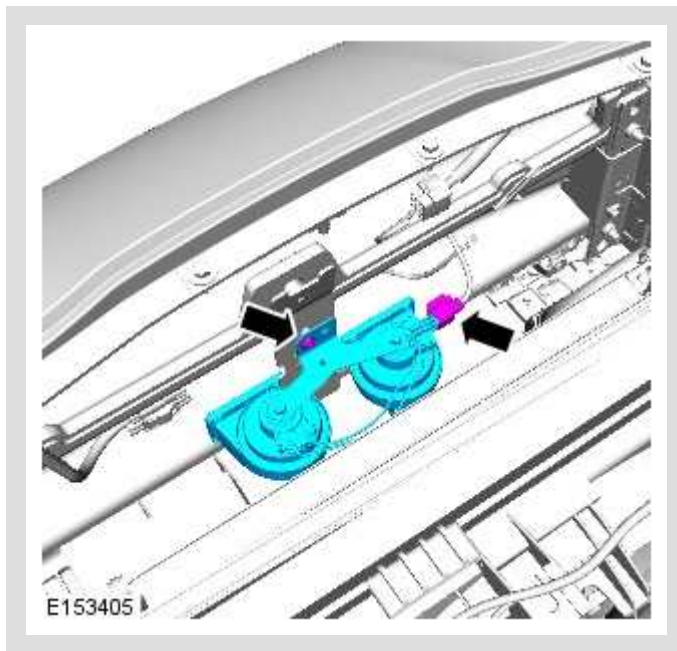

**Torque: 20 Nm**

## INSTALLATION

1. To install, reverse the removal procedure.

2015.0 F-TYPE (X152), 414-01

BATTERY, MOUNTING AND CABLES

## BATTERY DISCONNECT AND CONNECT (G1579511)

### GENERAL PROCEDURES

86.15.15	BATTERY DISCONNECTION AND RECONNECTION PROCEDURE **** DO NOT ISSUE ****	ALL DERIVATIVES	0.2	USED WITHINS
----------	---	--------------------	-----	-----------------

### NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Removal steps in this procedure may contain installation details.
- If a new battery is installed, the battery monitoring system (BMS) must be reset using Jaguar approved diagnostic equipment.

1.


Refer to: [Battery Care Requirements](#) (414-00 Battery and Charging System - General Information, Description and Operation).

2. Obtain and record the audio unit preset radio frequencies.


3.

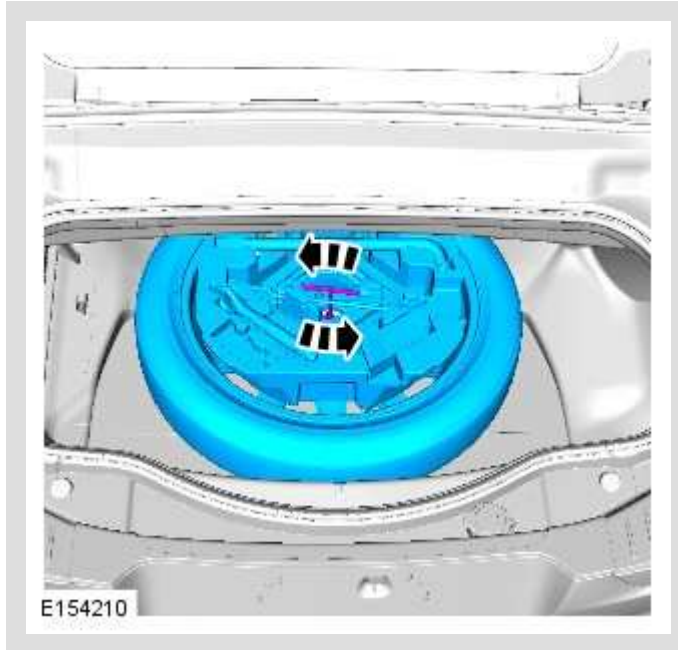


4.

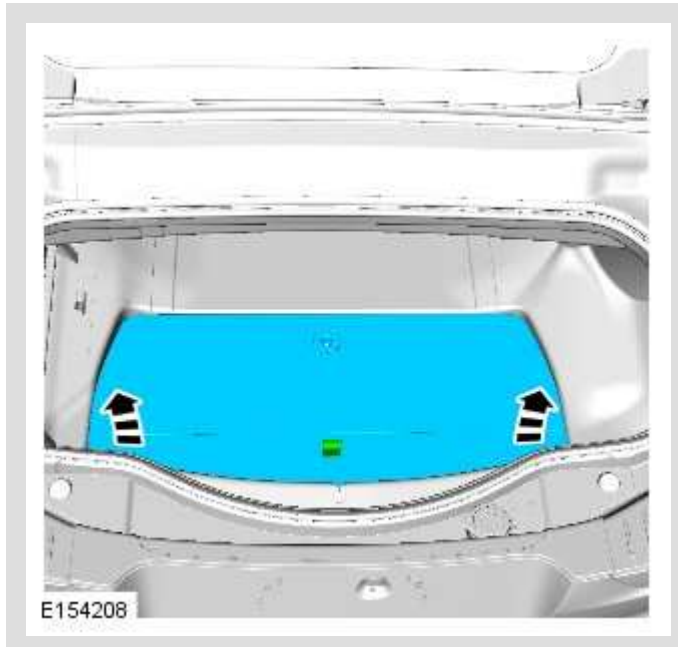


5.

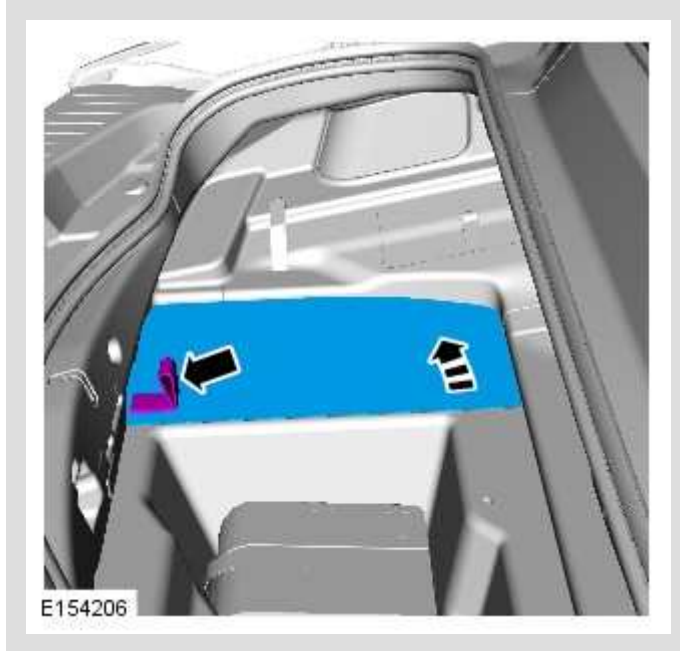

6. **ⓘ CAUTION:**  
Take extra care not to damage the wiring harnesses.

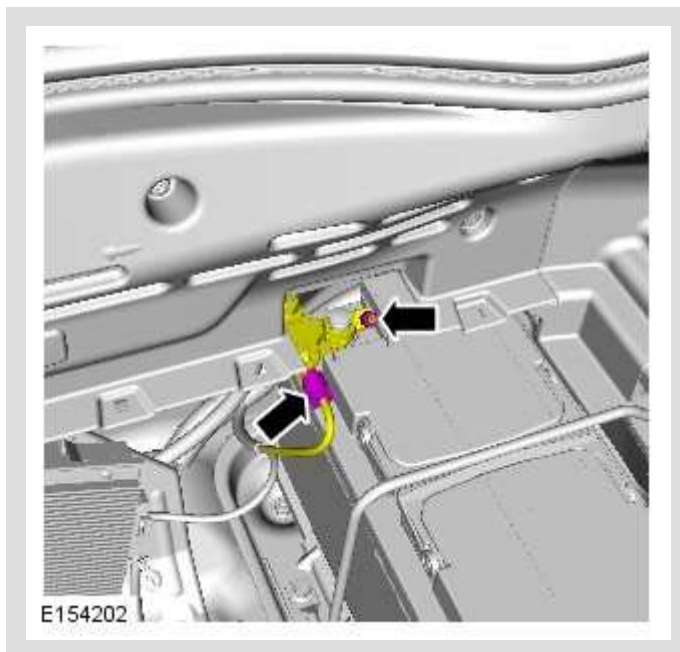

Torque: **6 Nm**

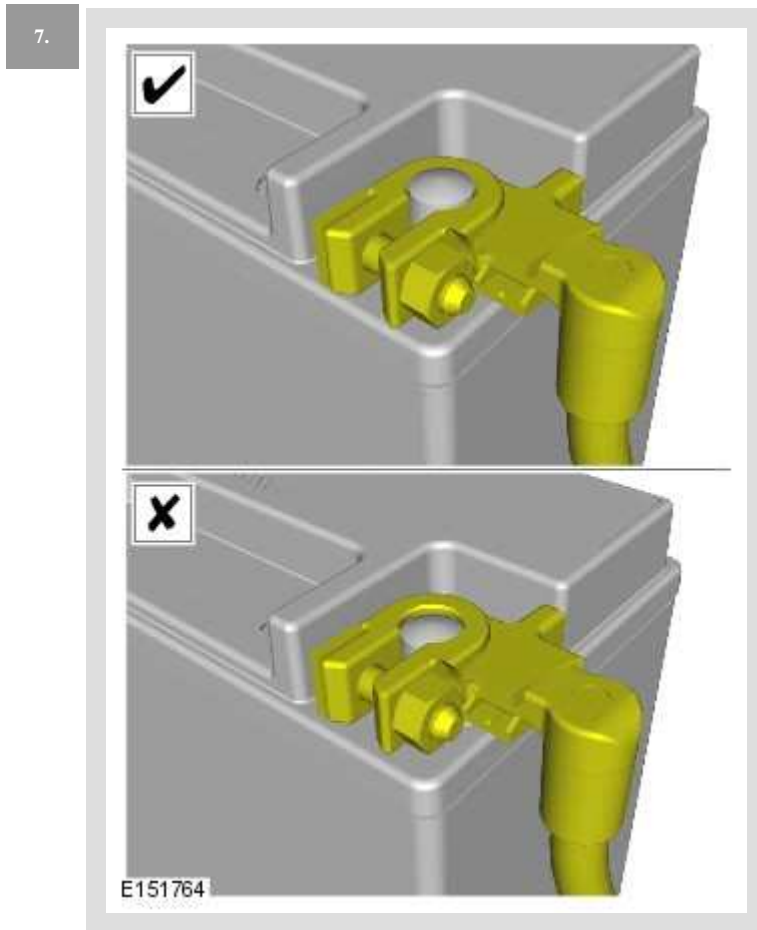

8. To install, reverse the removal procedure.

9.  **NOTE:**

This step is only necessary when installing a new battery.

Using Jaguar approved diagnostic equipment, reset the battery monitoring system (BMS).

10. Door Window Motor Initialization

11. Enter the audio unit preset radio frequencies.

12. Reset the clock to the correct time.

13. Start the engine and allow to idle until the engine reaches normal operating temperature.

14. Switch the engine off.

2015.0 F-TYPE (X152), 413-06

## HORN

### SPECIFICATIONS

DESCRIPTION	NM	LB-FT	LB-IN
Vehicle horn retaining bolt	20	15	-