

2015.0 F-TYPE (X152), 303-01


ENGINE - V6 S/C 3.0L PETROL

CRANKSHAFT FRONT SEAL (G1584102)

REMOVAL AND INSTALLATION

12.21.14	CRANKSHAFT FRONT OIL SEAL - RENEW	ALL DERIVATIVES	3.8	USED WITHINS
----------	--	--------------------	-----	-----------------

SPECIAL TOOL(S)

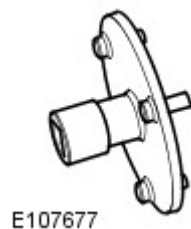

303-1434

Remover/Installer,
Front Crankshaft Seal

REMOVAL


 **NOTES:**

- Removal steps in this procedure may contain installation details.
- Some illustrations may show the engine removed for clarity.
- Some variation in the illustrations may occur, but the essential information is always correct.

1. Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

2. Refer to: [Crankshaft Pulley](#) (303-01, Removal and Installation).

3.

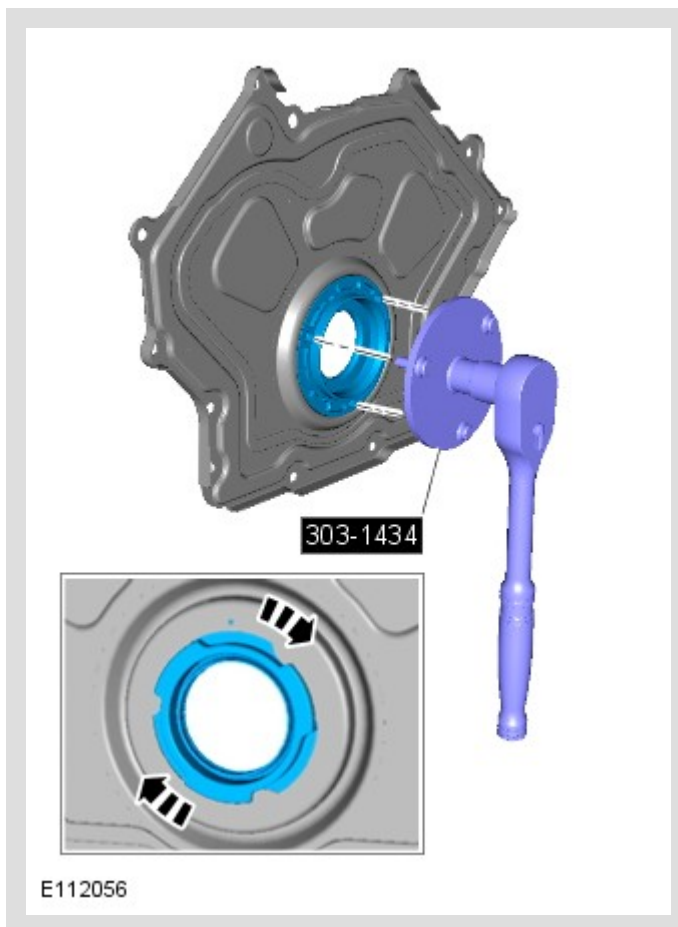

Special Tool(s): [303-1434](#)

Torque: **26 Nm**

INSTALLATION

1.

⚠ CAUTIONS:

- Do not over tighten the crankshaft front seal. Failure to follow this instruction may result in damage to the vehicle.
- Take extra care not to damage the seal.

To install, reverse the removal procedure.

2015.0 F-TYPE (X152), 414-01

BATTERY, MOUNTING AND CABLES

BATTERY DISCONNECT AND CONNECT (G1579511)

GENERAL PROCEDURES

86.15.15	BATTERY DISCONNECTION AND RECONNECTION PROCEDURE **** DO NOT ISSUE ****	ALL DERIVATIVES	0.2	USED WITHINS
----------	---	--------------------	-----	-----------------