2015.0 F-TYPE (X152), 303-01

ENGINE - V6 S/C 3.0L PETROL

CYLINDER HEAD LH (G1584105)

REMOVAL AND INSTALLATION

12.29.02	CYLINDER HEAD GASKET - LEFT HAND - RENEW	RIGHT HAND DRIVE, 3000 CC, AJ V6 (AJ126)	19.8	USED WITHINS	
12.29.11	CYLINDER HEAD - LEFT HAND - RENEW	RIGHT HAND DRIVE, 3000 CC, AJ V6 (AJ126)	19.8	USED WITHINS	
12.29.43	CAMSHAFT COVER - LEFT HAND - RENEW	3000 CC, AJ V6 (AJ126)	5.7	USED WITHINS	

SPECIAL TOOL(S)

I		



REMOVAL

\triangle 1

NOTES:


- Some variation in the illustrations may occur, but the essential information is always correct.
- Engine shown removed for clarity.
- Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).

Do not work on or under a vehicle supported only by a jack. Always support the vehicle on safety stands.

Raise and support the vehicle.

- Refer to: Exhaust Manifold LH (303-01A Engine V6 S/C 3.0L Petrol, Removal and Installation).
- 4. Refer to: Camshaft LH (303-01A Engine V6 S/C 3.0L Petrol, Removal and Installation).




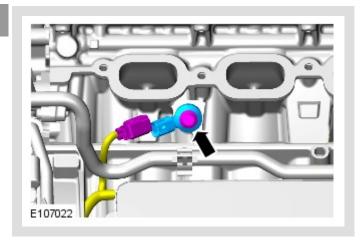


Λ

NOTE:


Clamp the hose to minimize coolant loss.

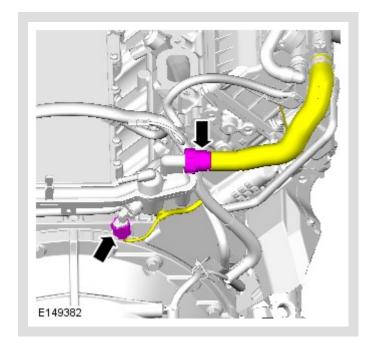


- Be prepared to collect escaping coolant.
- Discard the seals.

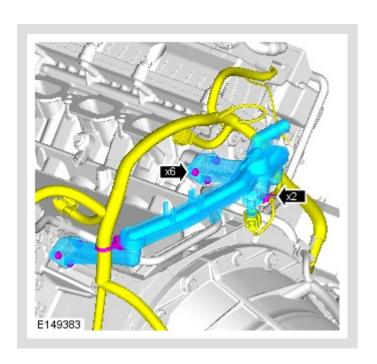

Q

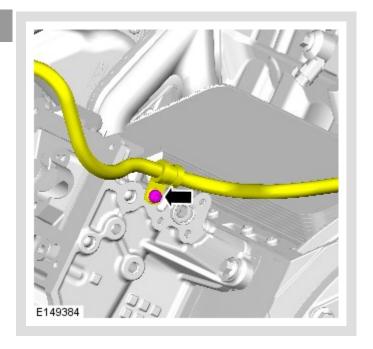


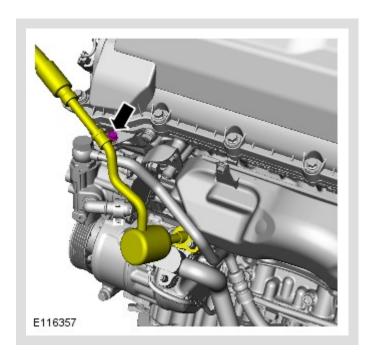


10.




- If a new cylinder head has been installed then new tappets must be installed.
- If the cylinder head is being removed without a new component being installed, the tappets must be installed in their original positions.

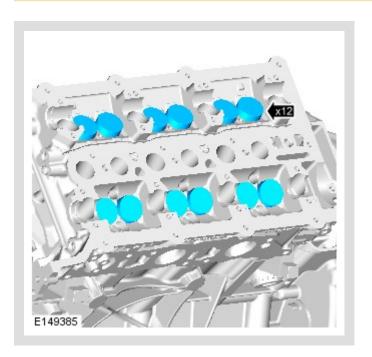

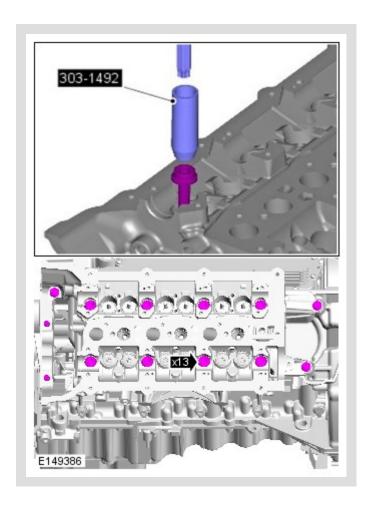

Special Tool(s): 303-1492

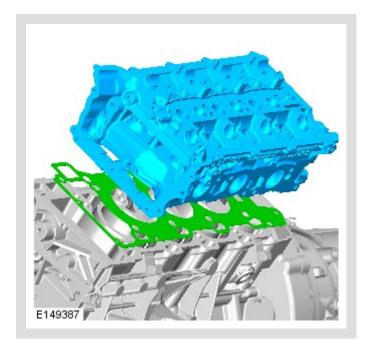

INSTALLATION

1.

① CAUTION:

An acceptable flatness of the cylinder head is 0.1mm.

Check cylinder head face for distortion, across the center and from corner to corner.

2


Make sure care is taken when handling the cylinder head gasket.

- The head gasket must be installed over the cylinder block dowels.
- Make sure that the mating faces are clean and free of foreign material.

\wedge

NOTE:

Install a new cylinder head gasket.

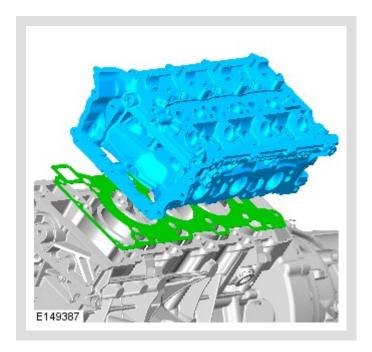

3.


① CAUTION:

Make sure that new cylinder head bolts are installed.

\wedge

NOTE:

Tighten the bolts in the indicated sequence.

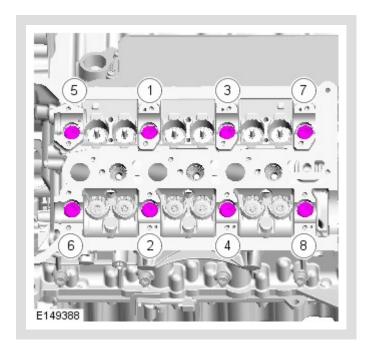


Torque: 20 Nm

\wedge

NOTE:


Tighten the bolts in the indicated sequence.

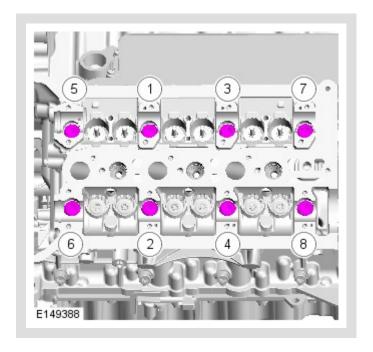

Torque: 35 Nm


△ NOTE:

Slacken the bolts in the sequence shown.

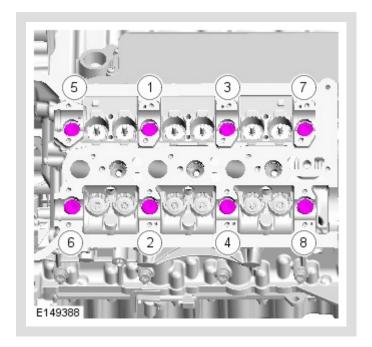

△ NOTE:


Tighten the bolts in the indicated sequence.

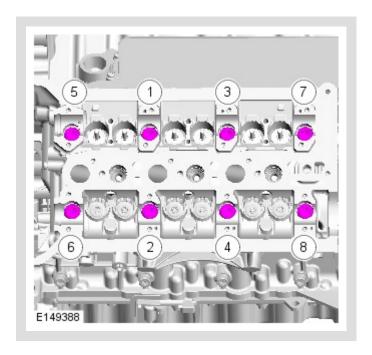

Torque: 35 Nm



Tighten the bolts in the indicated sequence.

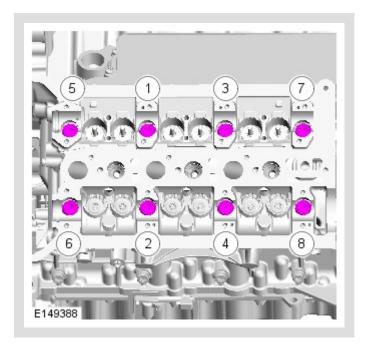


Tighten the bolts 1 to 8, a further 90 degrees.

8.

Δ

NOTE:

Tighten the bolts in the indicated sequence.

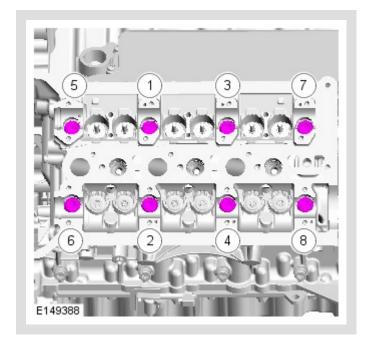


Tighten the bolts 1 to 8, a further 120 degrees.

9.

\wedge

NOTE:

Tighten the bolts in the indicated sequence.

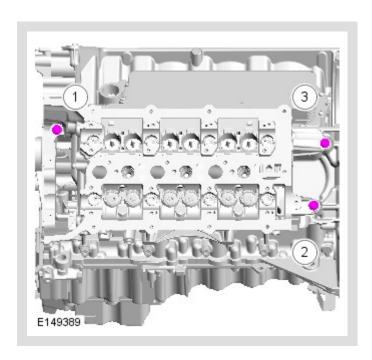


Torque: 25 Nm

10.

Δ


NOTE:

Tighten the bolts in the indicated sequence.

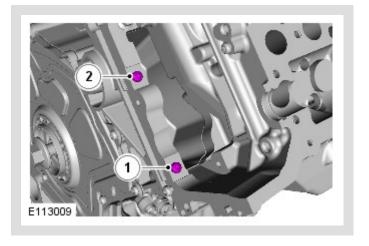


Torque: 12 Nm

- If a new cylinder head has been installed then new tappets must be installed.
- If the cylinder head is being removed without a new component being installed, the tappets must be installed in their original positions.

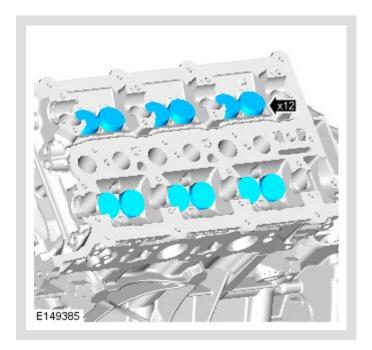

Lubricate the valve tappets with clean engine oil.

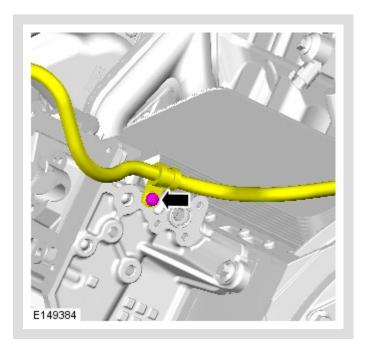

Torque: 10 Nm


13.

① CAUTION:


Install the new seals.




Torque: 10 Nm

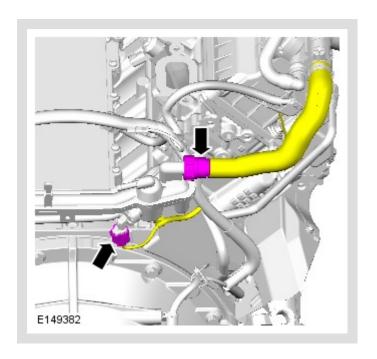

15.

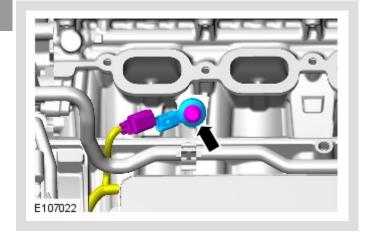


Torque: 20 Nm

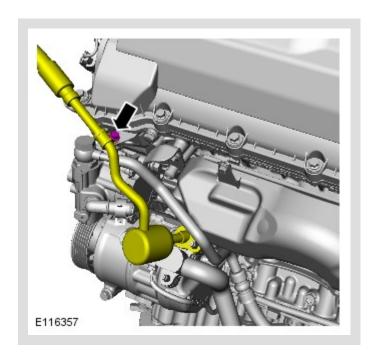

Torque: 12 Nm



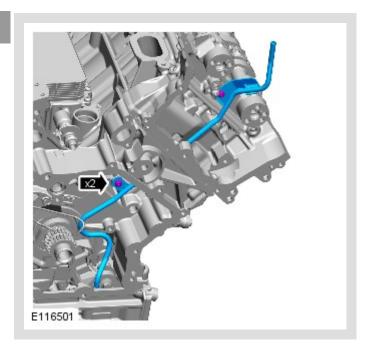

Torque: 12 Nm

- Refer to: Camshaft LH (303-01A Engine V6 S/C 3.0L Petrol, Removal and Installation).
- Refer to: Exhaust Manifold LH (303-01A Engine V6 S/C 3.0L Petrol, Removal and Installation).
- Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).

2015.0 F-TYPE (X152), 303-01

ENGINE - V6 S/C 3.0L PETROL

CAMSHAFT LH (G1584100)

REMOVAL AND INSTALLATION

12.13.01	CAMSHAFT - ENGINE SET - RENEW	3000 CC, AJ V6 (AJ126)	20.1	USED WITHINS	
12.13.19	CAMSHAFT - BANK 2 SET - RENEW	3000 CC, AJ V6 (AJ126)	17.8	USED WITHINS	

REMOVAL

① CAUTION: