

## Clock

### CLOCK ADJUSTMENT

The position of the digital clock depends on the equipment fitted to the vehicle.

If a touch-screen is fitted to the vehicle, the clock will be incorporated in the touch-screen display.

If the vehicle is not equipped with a touch-screen, the clock is included in the audio display.

#### Note:

- For more information concerning the operation of the audio system controls, refer to the audio systems handbook.
- For more information concerning the operation of the touch-screen, refer to the touch-screen display handbook.

#### Vehicles without touch-screen



JAG0805

If the vehicle is not fitted with a touch-screen, adjust the clock using the audio system controls as follows:

1. Press and hold **MODE** until **TA VOLUME** is displayed.
2. Repeatedly press **MODE** until **CLOCK SET** is displayed.
3. To select 12 or 24 hour format, press the seek up/seek down keys.
4. Press **MODE** to continue.

5. If 12 hour is selected, use # to denote AM or PM.
6. Use the key pad to enter the time in four digit format.
7. To exit, press and hold **MODE** until the display reverts to audio mode.

#### Vehicles with touch-screen



JAG0804

If the vehicle is fitted with a touch-screen, the clock is adjusted as follows:

1. Press the **MENU** button on the touch-screen control panel. The system menu screen will be displayed.
2. Touch the **System Setup** button on the **MENU** screen.
3. Touch the **Set Clock** button on the **SYSTEM SETUP** screen.
4. Clock adjustment is made by touching the hour or minute, up or down arrow buttons.
5. Touch the **12/24** button to select twelve or twenty-four hour display.
6. Confirm your setting by touching **Set**.