


## Radiator 26.40.01

### Removal

1. Drain the cooling system. For additional information, refer to <<Cooling System Draining, Filling and Bleeding>>
2. Reclaim the air conditioning refrigerant. For additional information, refer to <<412-00>>
3. Remove the motor and shroud. For additional information, refer to <<Motor and Shroud>>

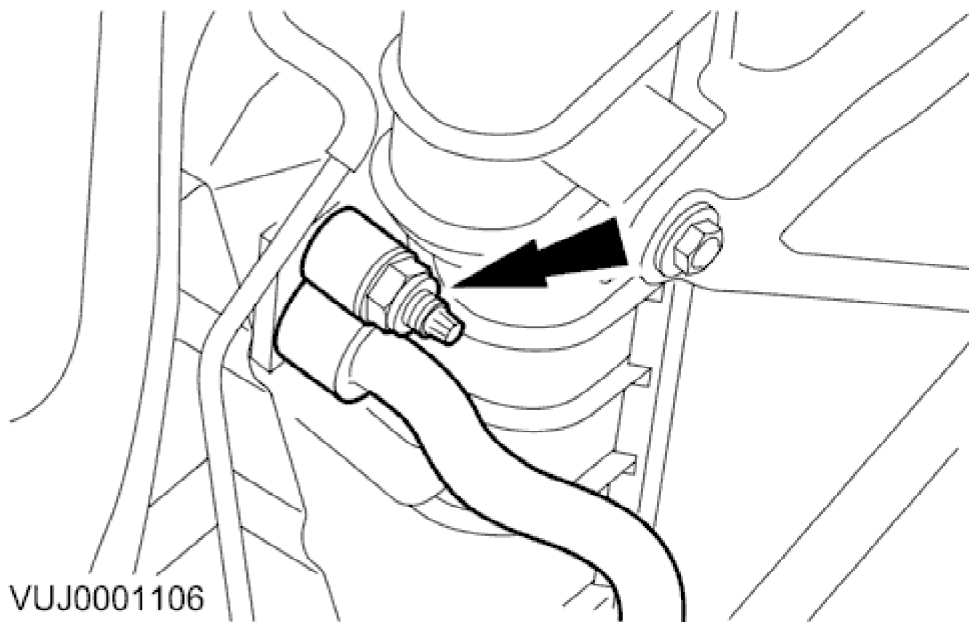


#### 4. **NOTE:**

Seal the line and the evaporator with plugs.


Detach the air conditioning line.

5. Raise the vehicle.

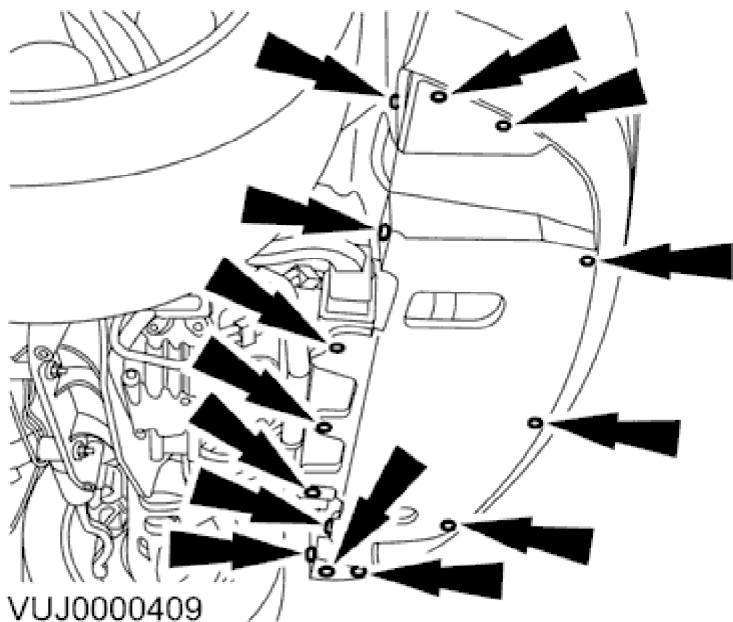

VUJ0000409

6. Remove the lower radiator splash shield.

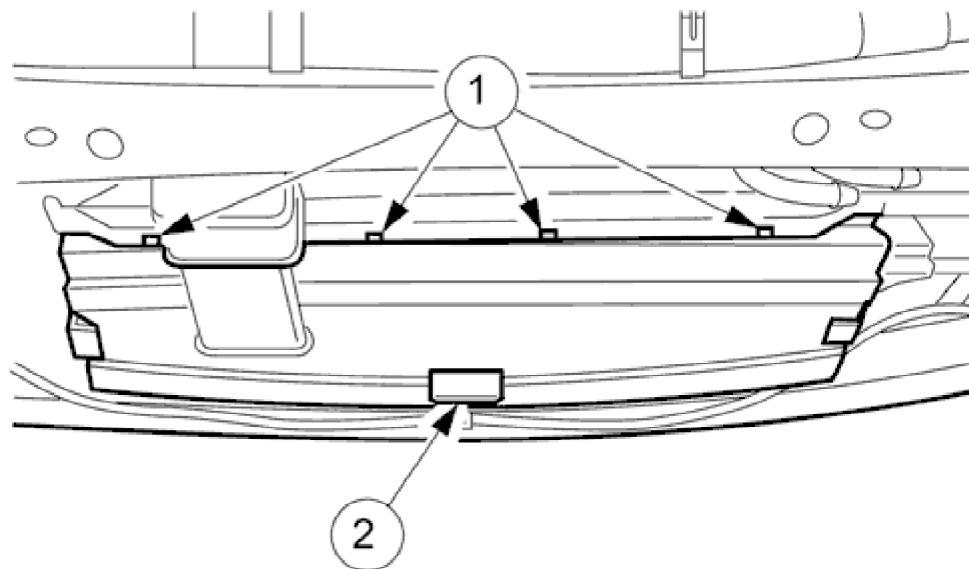


VUJ0001082

7. **NOTE:**

The splash shield is equipped with hinges which should be treated with care on removal.

Remove the radiator splash shield.

1. Detach the securing clips.
2. Remove the radiator splash shield.

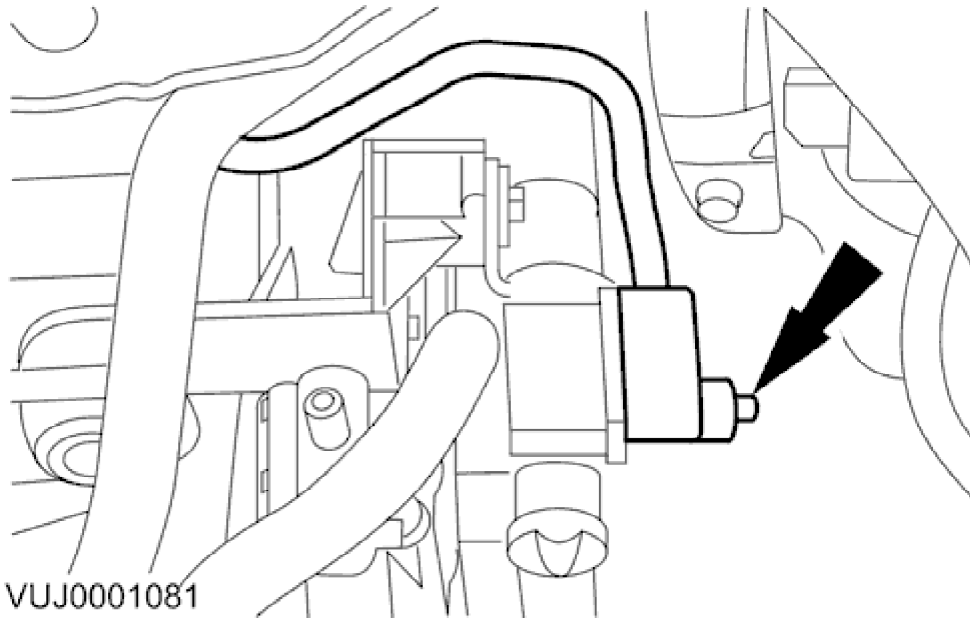


VUJ0001081

8. **NOTE:**

Seal the line and the evaporator with plugs


Detach the air conditioning line.

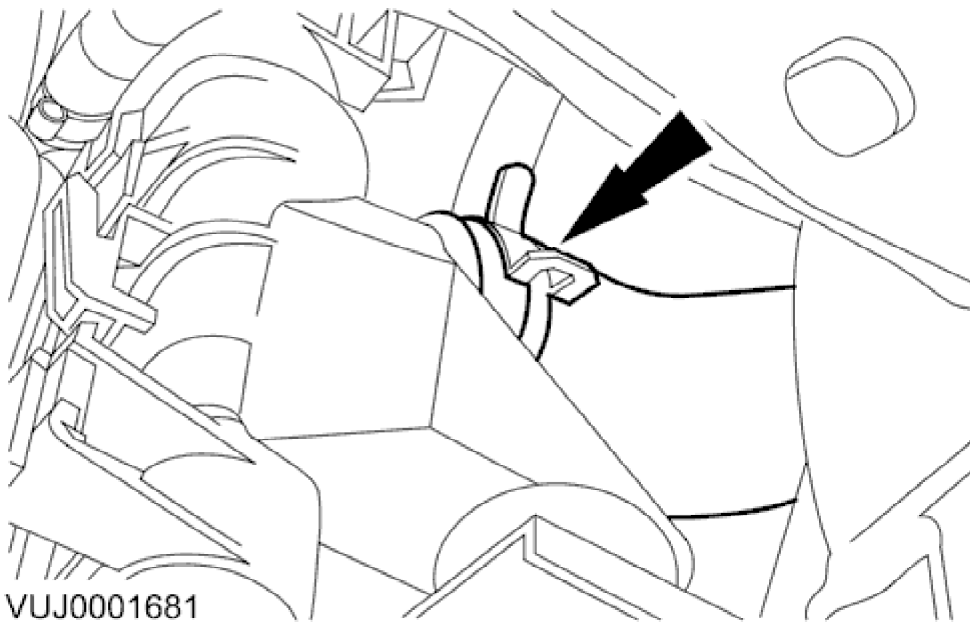

VUJ0001681


9. Detach the lower coolant hose.

## 2000 S-TYPE - Engine Cooling - 303-03

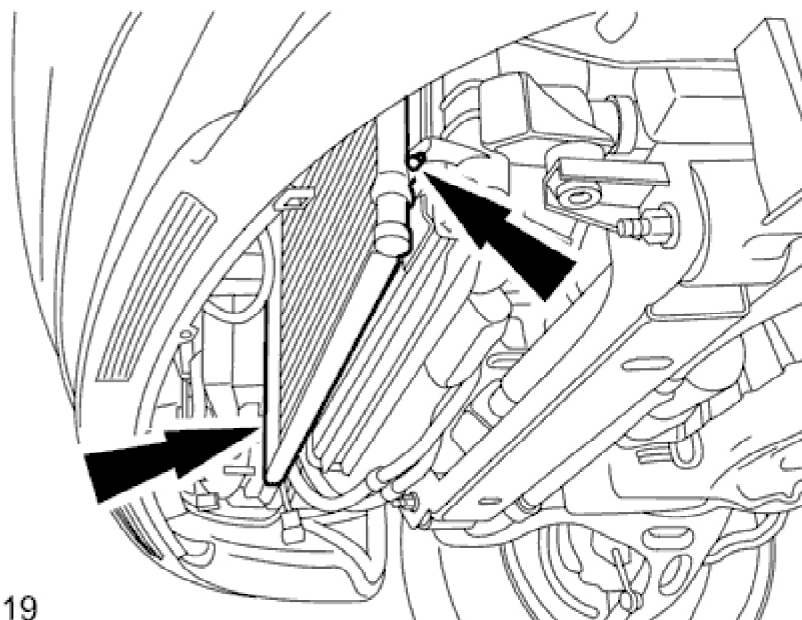

VUJ0001719

10. Remove the air conditioning condenser.
  - Remove the securing screws.

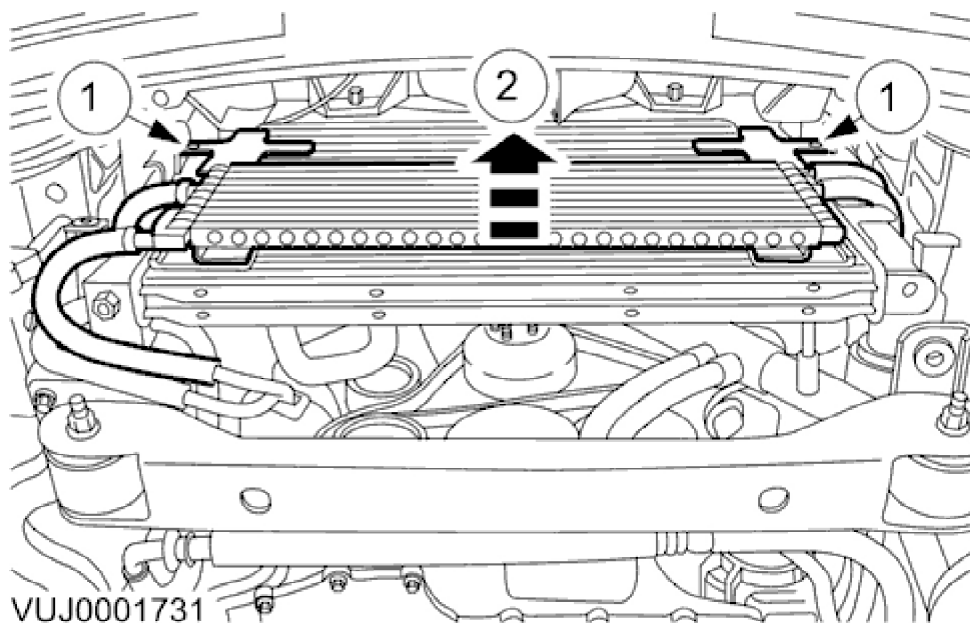

VUJ0001731


11. **NOTE:**  
Vehicles with manual transmission, cable tie the cooling radiator.

Detach the automatic transmission/power steering cooler.


1. Remove the securing screws.
2. Detach the automatic transmission/power steering cooler.

12. Lower the vehicle.

## 2000 S-TYPE - Engine Cooling - 303-03

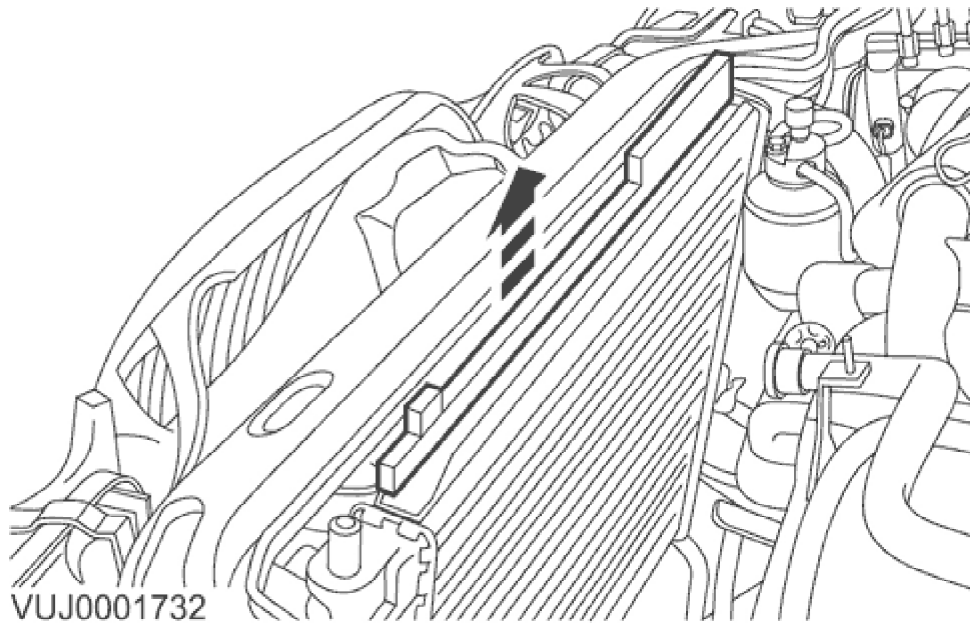

13. Remove the radiator foam trim.

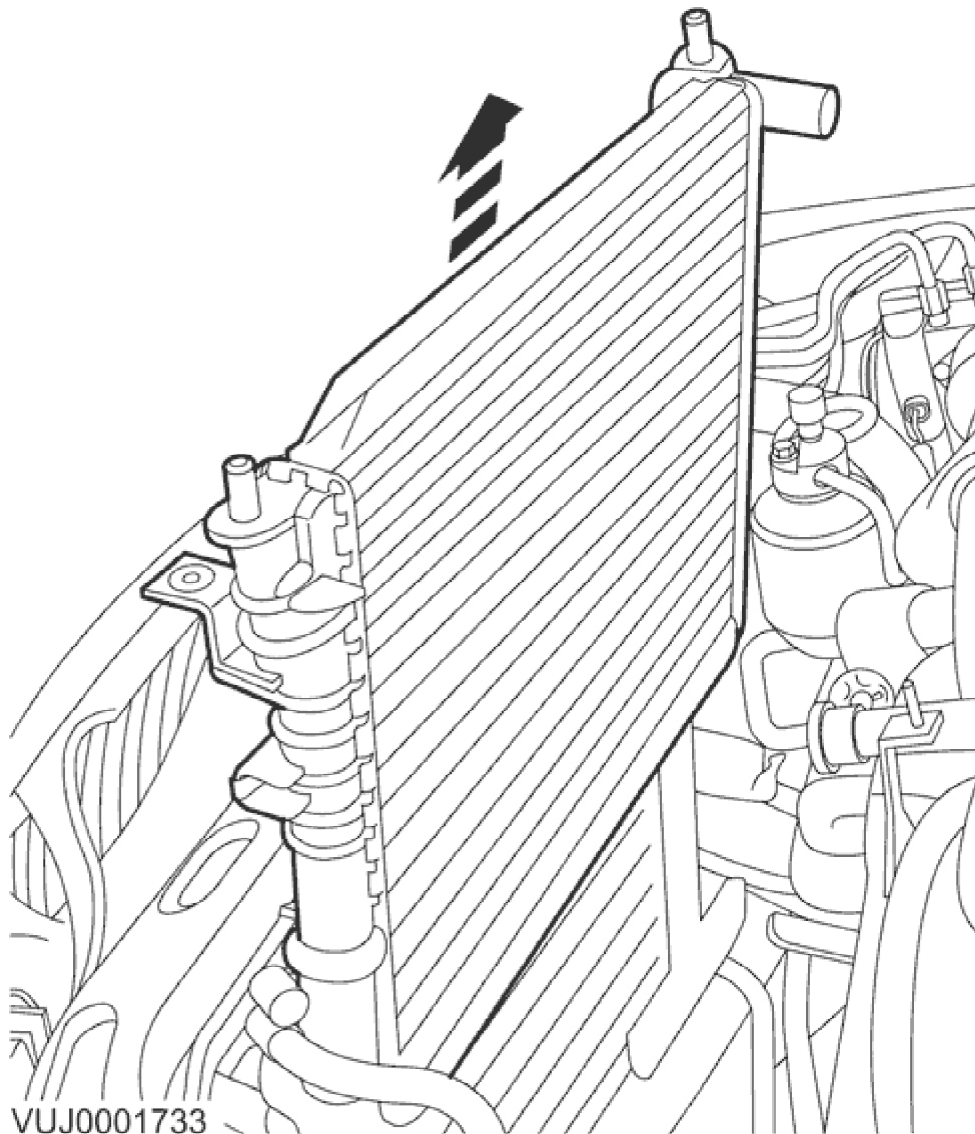


VUJ0001733

14. Remove the radiator.

### Installation

## 2000 S-TYPE - Engine Cooling - 303-03

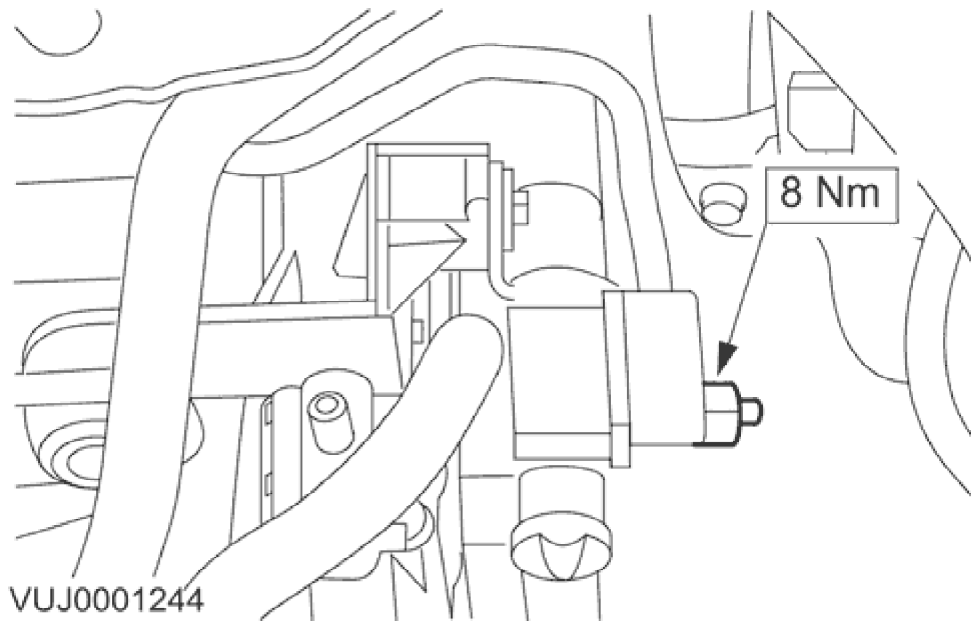

1. To install, reverse the removal procedure.

