


Quick Overview

Occupancy Sensing

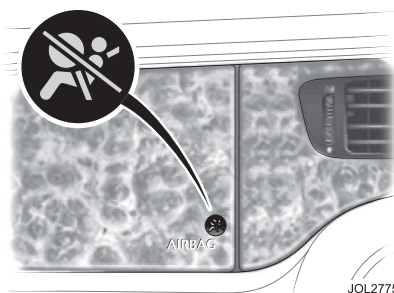

The front passenger seat is equipped with a sensor that determines the occupancy status by measuring the weight on the cushion and changes the passenger airbag deployment status.

An indicator light is located on the passenger fascia and illuminates a symbol denoting passenger airbag deactivation.

- Seat with low weight occupant/object - airbag deactivated - indicator light **ON**.
- Seat with heavy occupant/object - airbag activated - indicator light **OFF**.
- * Seat completely empty - airbag deactivated - indicator light **OFF**.

* It is possible to receive an intermittent indicator light with an empty seat condition. This is part of the system adaptive behaviour and does not affect the status of the passenger airbag deployment.

However, if the indicator light becomes permanently illuminated when the seat is definitely empty, then consult your nearest Jaguar Dealer/ Authorised Repairer immediately.

Parkbrake



To apply parkbrake: Pull the parkbrake switch up and release. The warning light in the instrument cluster will illuminate.



To release parkbrake: The ignition switch must be in position 'II', apply the footbrake and push the parkbrake switch down.

Note: The parkbrake automatically applies when the ignition key is removed.

Auto transmission

The parkbrake is automatically released when the gear selector is moved from 'P' or by pressing the accelerator pedal when in gear.

Manual transmission

The parkbrake is only released via the parkbrake switch or by driving the vehicle away with the accelerator depressed.

For full operating details, see page 132.