

5. Remove the engine coolant temperature (ECT) sensor electrical connector.

1. Disconnect the ECT sensor electrical connector.

2. Remove the ECT sensor.

- Remove and discard the ECT sealing washer.

Installation


All vehicles

1. To install, reverse the removal procedure.

- Install a new ECT sealing washer.
- Fill the cooling system up to the MAX mark on the coolant expansion tank.

Vehicles with supercharger

2. Tighten to 17 Nm.

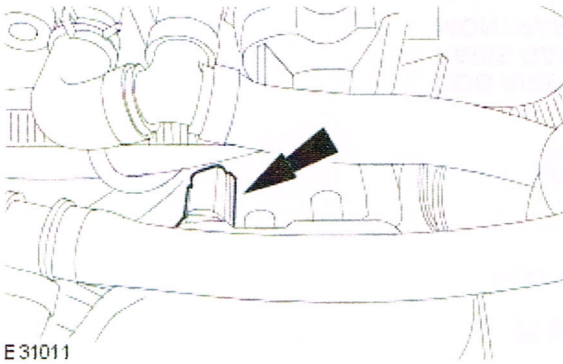

Vehicles without supercharger

3. Tighten to 17 Nm.

