

Lifting

Lifting Points—Twin-Post Hoist and Floor Jack



CAUTION:

Do not allow the hoist adapters to contact the steering linkage, suspension arms, stabilizer bar, rear subframe stabilizer brackets or to compress the lower suspension arm stabilizer bar insulator. Damage to the suspension, exhaust and steering linkage components may occur if care is not exercised when positioning the hoist adapters of two-post hoists prior to lifting the vehicle.






CAUTION:

Never use the differential housing as a lift point. Damage to the differential housing and cover may occur.



CAUTION:

When using a floor jack, a cushioned pad must be utilized to avoid body damage.

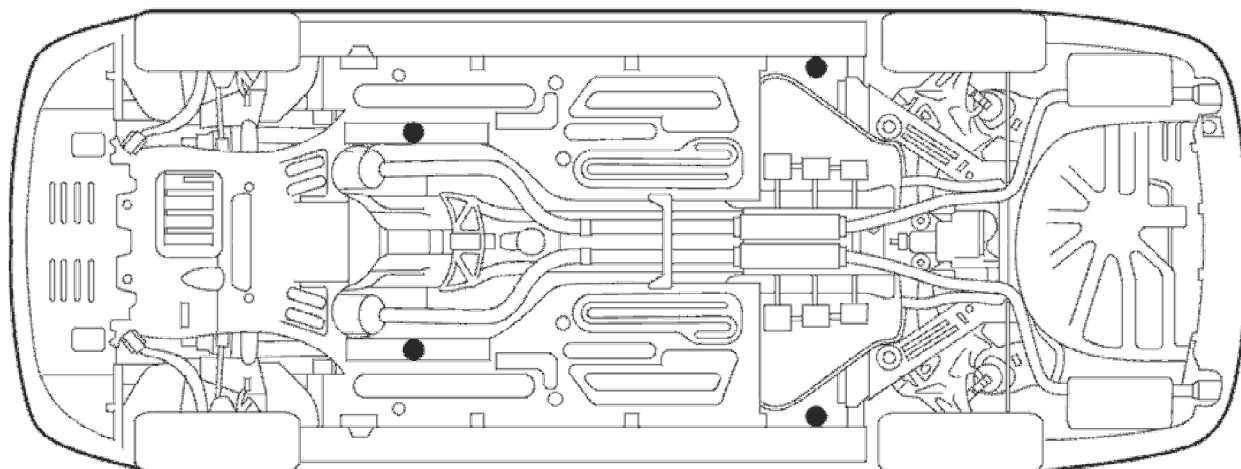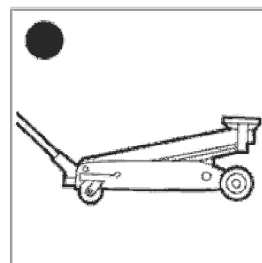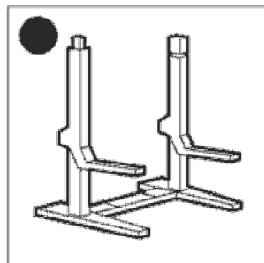

E30331