

Upper Arm RH 60.35.42


Removal

- 1. Remove the shock absorber and spring assembly. << Shock Absorber and Spring Assembly>>
- 2. Remove the cabin air filter. <<412-01>>

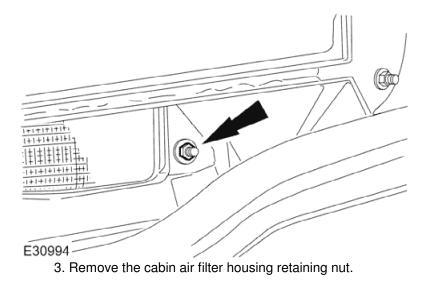


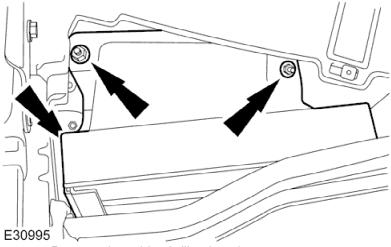


4. Remove the cabin air filter housing.

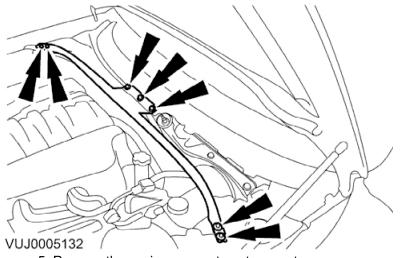


5. Remove the engine compartment support.

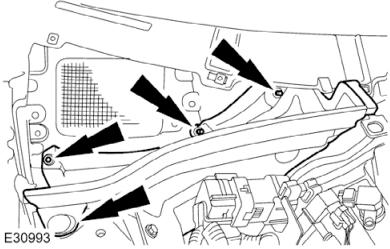



6. Remove the engine compartment panel.

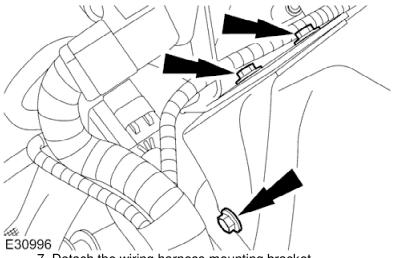


7. Detach the wiring harness mounting bracket.

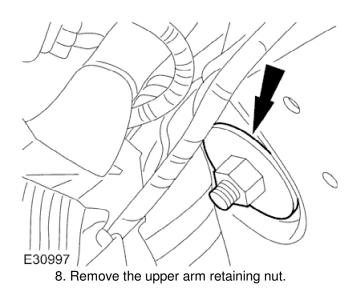


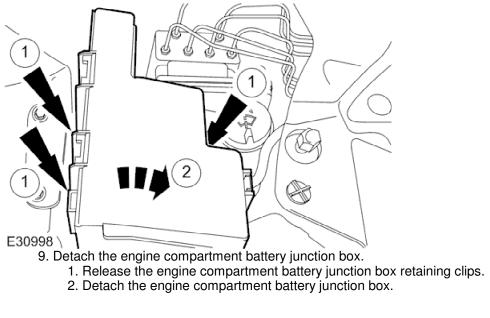

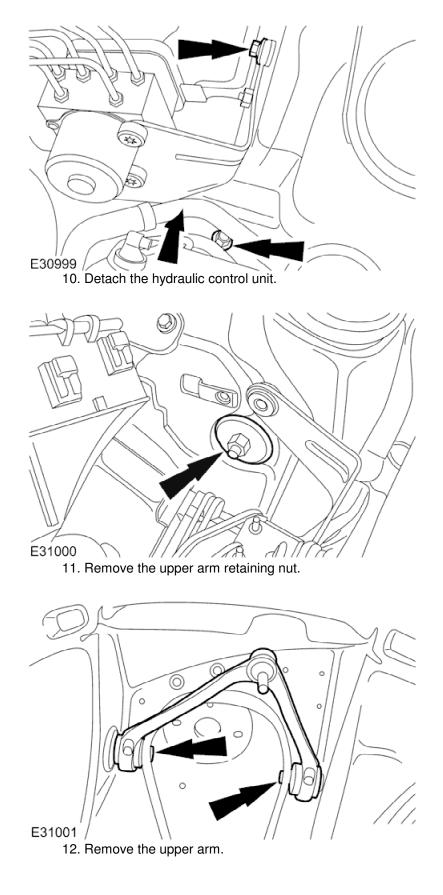


Installation

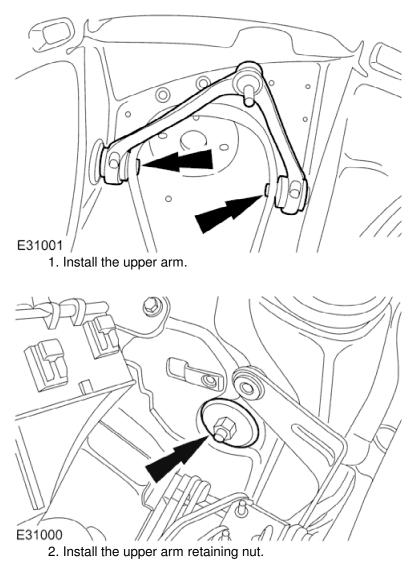

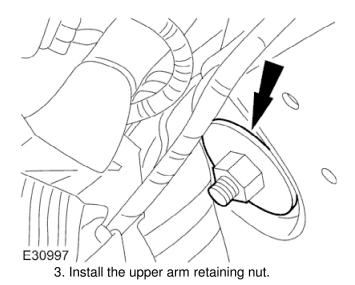


4. Install the shock absorber and spring assembly. << Shock Absorber and Spring Assembly>>

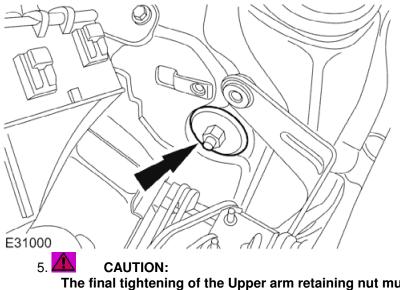


The final tightening of the Upper arm retaining nut must be carried out with the vehicle on its wheels.


Tighten to 47 Nm.

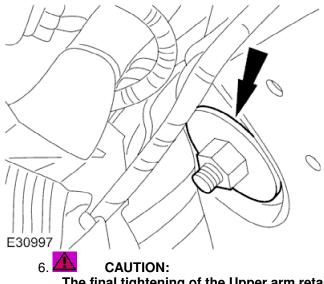


CAUTION: The final tightening of the Upper arm retaining nut must be carried out with the vehicle on its wheels.


Tighten to 47 Nm.

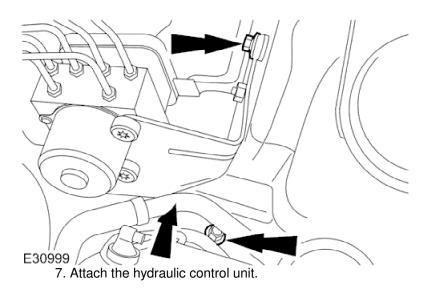

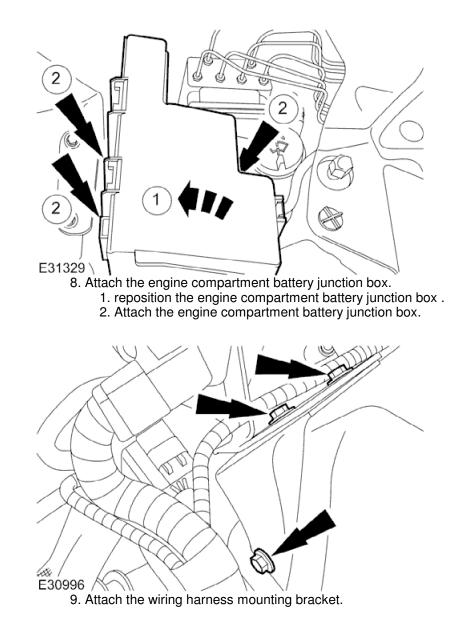

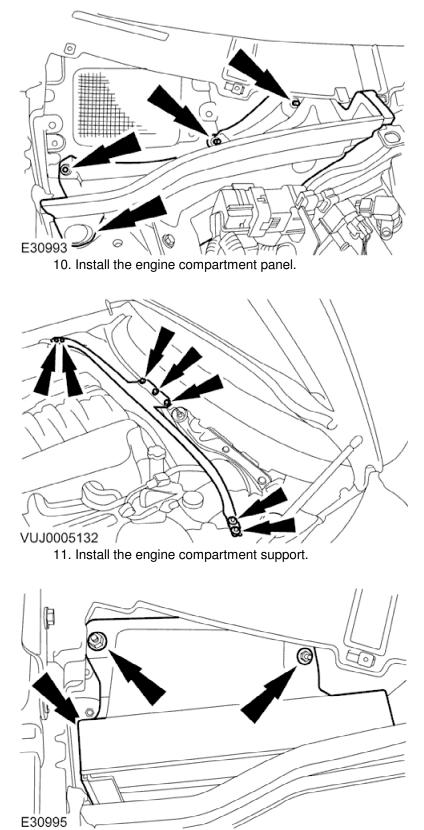

12. Install the cabin air filter housing.

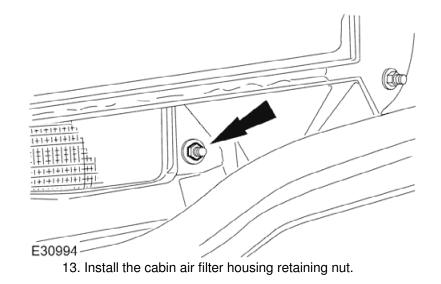

14. Install the cabin air filter. <<412-01>>