

Shock Absorber and Spring Assembly 60.30.02

Removal

1. Remove the wheel and tire. <<204-04>>

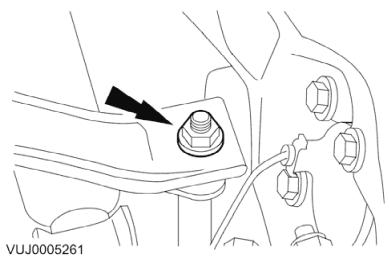


2. Remove the stabilizer bar link retaining nut.

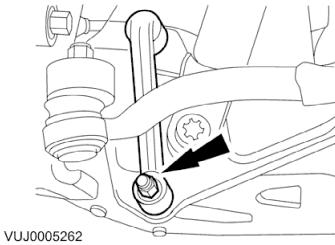


3. Remove the stabilizer bar link.

2016-10-06

1

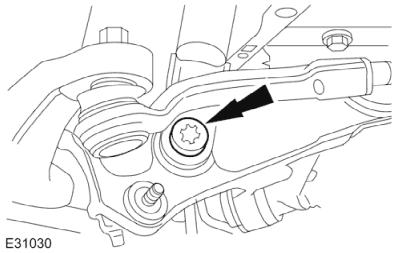

4. Detach the shock absorber.

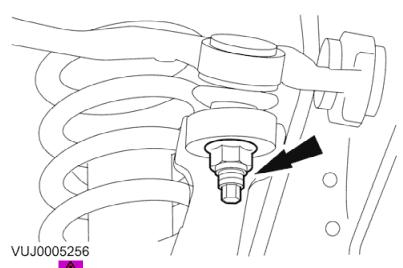


5. **CAUTION:**

Make sure the wheel knuckle is supported. Failure to follow these instructions may result in damage to the vehicle.


Detach the upper arm.

6. Lower the vehicle.


2 2016-10-06

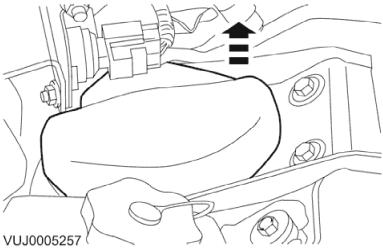

7. Remove the shock absorber and spring assembly mounting cover plate.

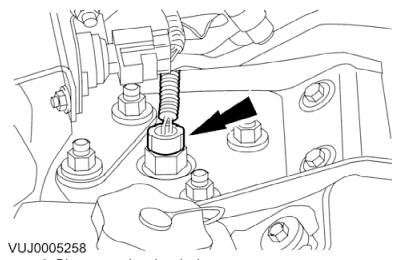


8. Disconnect the electrical connector.

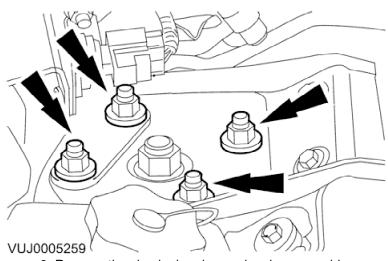


9. Remove the shock absorber and spring assembly.

3 2016-10-06

Installation

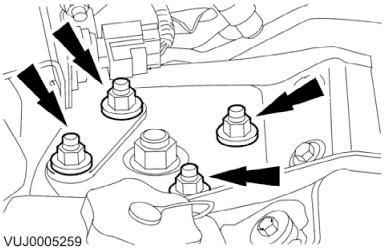


Install the shock absorber and spring assembly.
 Tighten to 27 Nm.

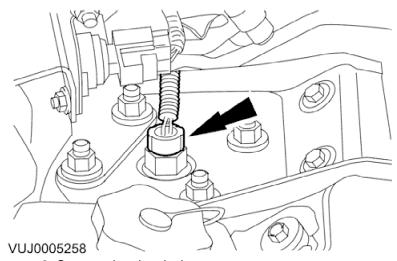


2. Connect the electrical connector.

2016-10-06

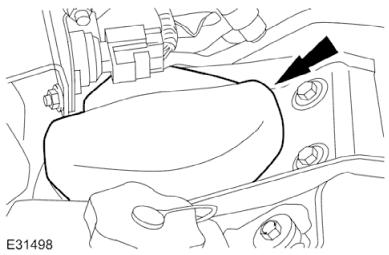

3. Install the shock absorber and spring assembly mounting cover plate.

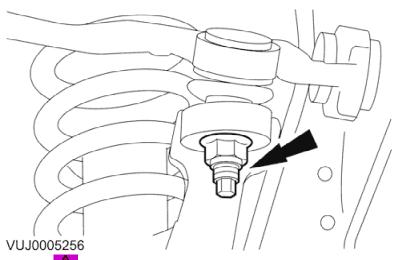


CAUTION:


Make sure the wheel knuckle is supported. Failure to follow these instructions may result in damage to the vehicle.

Attach the upper arm.
1. Tighten to 90 Nm.


5 2016-10-06

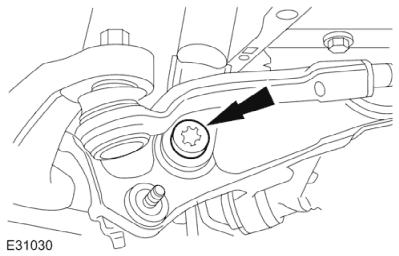

- 5. Attach the shock absorber.Tighten to 175 Nm.

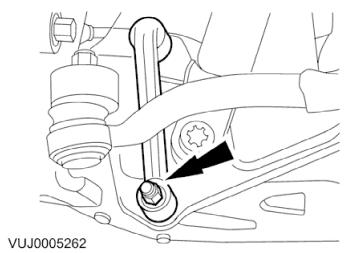


6. Install the stabilizer bar link.

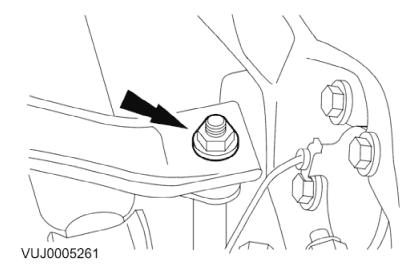

6 2016-10-06

- 7. Attach the stabilizer bar link.
 - Tighten to 47 Nm.
- 8. Install the wheel and tire assembly. <<204-04>>

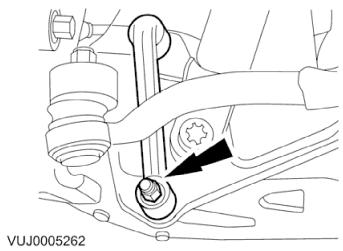

9. Tighten to 70 Nm.

7 2016-10-06