



### Interior Lamp 86.45.02

#### Removal

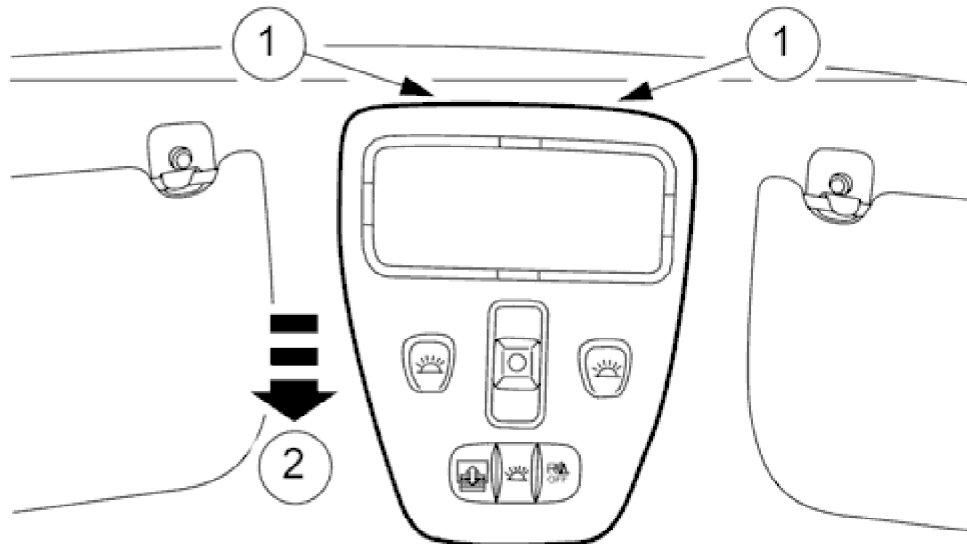

VUJ0000941

1. Detach the interior lamp unit.
  1. Unclip the interior light unit.
  2. Detach the interior lamp unit.

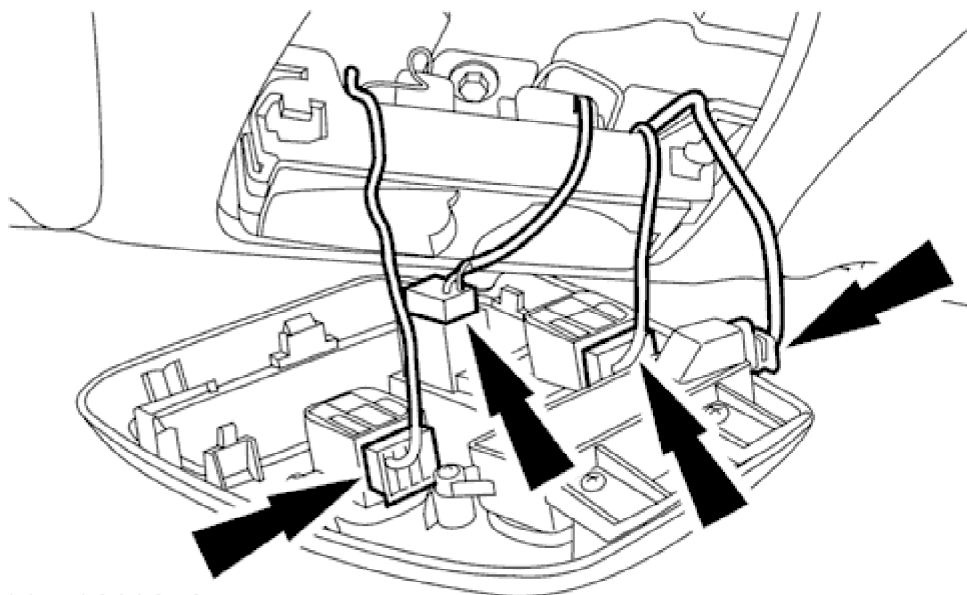

VUJ0000940

2. Remove the interior lamp.

#### Installation

1. To install, reverse the removal procedure.