


## Accessory Drive Belt 2.5L/3.0L Removal

1. Disconnect the battery ground cable.
2. Remove the air deflector.

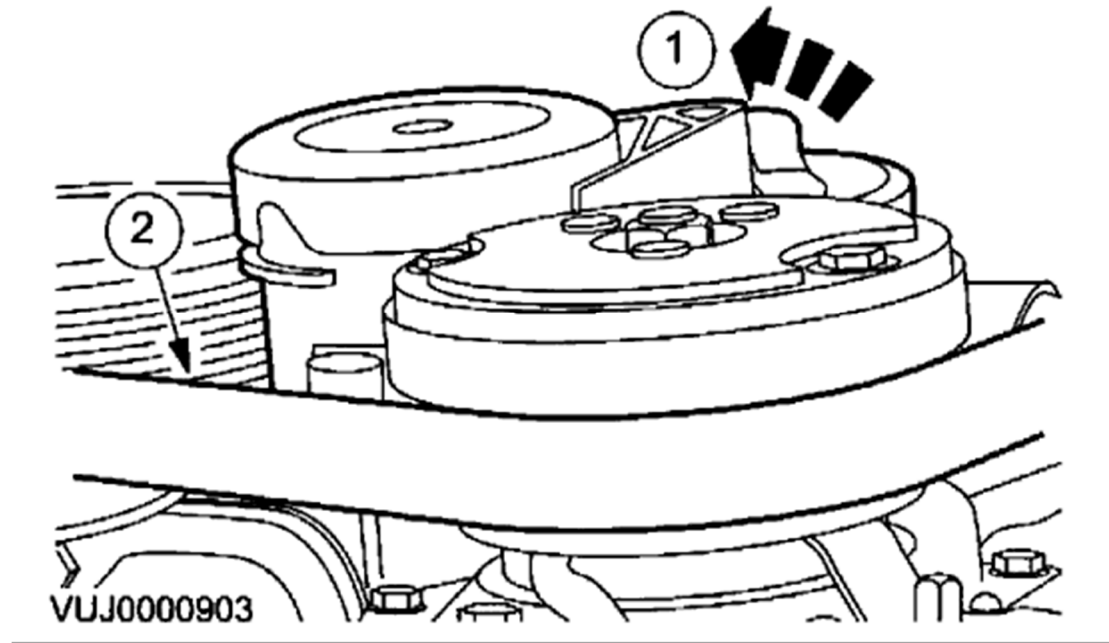

3. Remove the accessory drive belt.
  1. Rotate the accessory drive belt tensioner counter-clockwise.
    - Use a 3/8 inch square drive bar to rotate the accessory drive belt tensioner.
  2. Remove the accessory drive belt.

## Installation

1. To install, reverse the removal procedure.