


# Instrument Panel and Console - Overhead Console

Removal and Installation


## Removal

1. Detach the overhead console.

- Remove the screw.


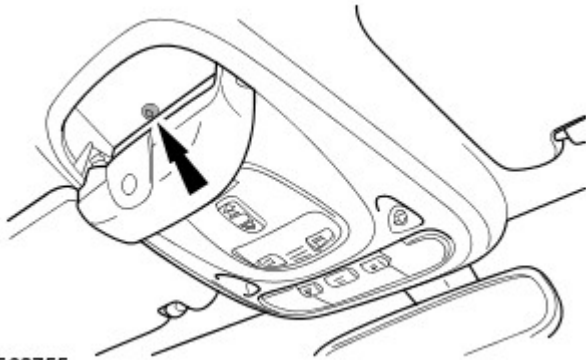


E60755

2.  **CAUTION:** Make sure the overhead console retaining tangs are released in the order shown. Failure to follow this instruction may result in damage to the component.

Detach the overhead console.


1. Release the overhead console front retaining tangs.
2. Release the overhead console center retaining tangs.
3. Detach the overhead console.

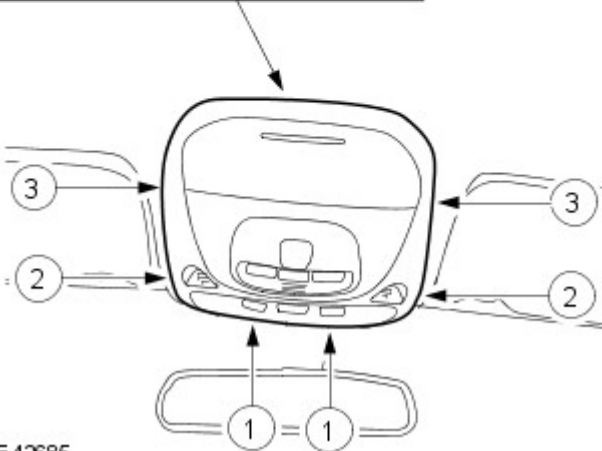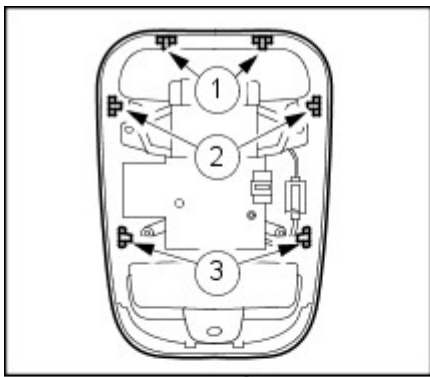

E 42685

3. Remove the overhead console.

- Disconnect the electrical connector.

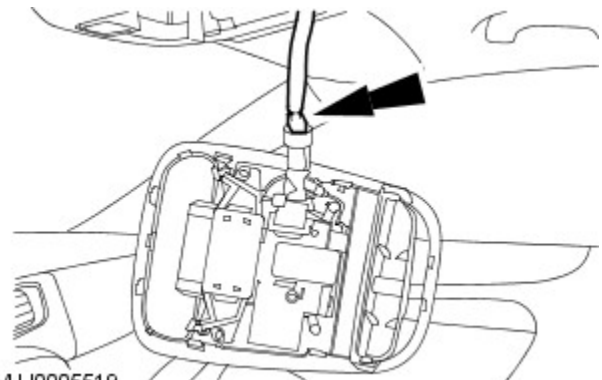

VUJ0005519