

## Security and locks 2-7

Vehicle locking and unlocking	To unlock the vehicle and disarm the alarm system	To lock the vehicle and disarm the alarm system	Global closing
<p><b>To lock the vehicle and set alarm</b></p> <ul style="list-style-type: none"><li>Press the lock button on the key-ring transmitter, or</li><li>Put the key in the driver's door lock, turn the key clockwise and release.</li></ul> <p>The direction indicators will flash once, the security light on the top of the fascia will start flashing and, after twenty seconds, the alarm will be set.</p>	<p><b>To unlock the vehicle and disarm the alarm system</b></p> <ul style="list-style-type: none"><li>Press the unlock button on the key-ring transmitter, once to unlock the driver's door and then press again to unlock the passenger doors.</li></ul> <p>This unlocks all doors and the luggage compartment.</p> <ul style="list-style-type: none"><li>Put the key in the driver's door lock, turn the key anti-clockwise and release.</li></ul> <p>If a door, the hood or the luggage compartment lid are open and an attempt is made to lock the vehicle, the direction indicators will flash five times as a warning that the vehicle is not secure.</p>	<p><b>To unlock the vehicle and disarm the alarm system</b></p> <ul style="list-style-type: none"><li>Press the unlock button on the key-ring transmitter, once to unlock the driver's door and then press again to unlock the passenger doors.</li></ul> <p>This unlocks all doors and the luggage compartment.</p> <ul style="list-style-type: none"><li>Put the key in the driver's door lock, turn the key anti-clockwise and release.</li></ul> <p>If a door, the hood or the luggage compartment lid are open and an attempt is made to lock the vehicle, the direction indicators will flash five times as a warning that the vehicle is not secure.</p>	<p><b>! WARNING:</b> Ensure that all occupants are kept clear of the windows and sunroof aperture.</p> <p>Using the key in the driver's door, lock the vehicle and hold in this position to close all the windows (and sunroof, if fitted).</p> <p><b>Global opening</b> Press and hold the key-ring transmitter unlock button, or use the key to unlock the vehicle and hold in this position to open all the windows (and sunroof, if fitted).</p>