

## 7.0 TESTING (Auto-dimming Mirror only)

- 7.1 Reconnect the negative battery cable.
- 7.2 Turn the ignition switch to ON.
- 7.3 With the vehicle in a fairly well lit area, perform the following:
  - Verify that Auto-dimming feature is on. Auto dimming is enabled when green LED is on. Push in left switch to turn auto-dimming ON/OFF. Refer to section 9, "OPERATION", for additional instructions if needed.
  - Cover the forward-looking lightcell located below the wire harness connection on the back of the mirror (a dark cloth or towel will work).
  - After a few seconds, the mirror will begin to darken (the time may vary with ambient light levels).
  - Remove the cover from the forward lightcell and the mirror will begin to clear.
  - The test is now complete.

## 8.0 FINAL ASSEMBLY

- Reinstall all removed components.
- Re-enter the security code and customer programmed radio stations.
- Place the operation instruction card in the vehicle glove box in the vehicle owner's manual.

## 9.0 OPERATION

- 9.1 Lighted Mirror - (Part Number 36000)
  - Pressing button under left side of mirror will turn on/off left map lamp.
  - Pressing button under right side of mirror will turn on/off right map lamp.
- 9.2 AUTO-DIMMING MIRROR - (Part Numbers 36100, 36101)
  - Push in center button to turn auto-dimming on/off.
  - Auto-dimming is enabled when Green LED is on.
- 9.3 AUTO-DIMMING MIRROR WITH COMPASS – (Part Numbers 36200, 36201)
  - Press Left button to turn on/off Auto-dimming feature.
  - Auto-dimming is enabled when Green LED is on.
  - Press the Right button to turn Compass display on/off.
- 9.4 AUTO-DIMMING MIRROR WITH COMPASS AND MAP LAMPS - (Part Numbers 36300, 36301)
  - Press left button once to turn on/off left map lamp.
  - Press left button and hold for 4 seconds to turn on/off Auto-dimming feature. Auto-dimming feature is on when Green LED is on.
  - Press left button and hold for 8 seconds times to calibrate compass.
  - Press right button once to turn on/off right map lamp.
  - Press right button for 4 seconds to turn compass display on/off.
  - Press right button and hold for 8 seconds to set the compass zone.

## 10.0 COMPASS OPERATION – (Part Numbers 36200, 36201, 36300, 36301)

- 10.1 Compass Zone Adjustment - **NOTE:** The zone setting is factory preset to Zone 8. Refer to Compass Calibration Zone Map (See Fig. 10.1) to verify the correct compass zone setting for your geographical location.
- 10.2 To change the zone setting,
  - Push and hold the right button until "ZONE" appears in the display.
  - Push same button repeatedly until the desired compass zone number is shown. The display will change back to the compass direction after three seconds if the button is not activated.