

## **Roof Opening Panel Rear Drain Hose (76.82.22)**

## Removal


- 1. Remove the rear <u>bumper</u> cover.
- 2. Remove the roof opening rear drain hose grommet.

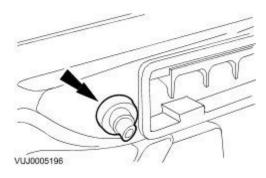


- 3. Reposition the luggage compartment floor covering.
- 1. Detach the luggage compartment floor covering.
- 2. Reposition the luggage compartment floor covering.

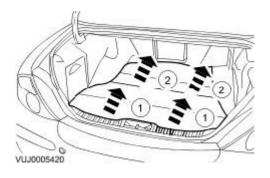

- 4. Detach the luggage compartment side <u>trim panel</u>.
- 1. Remove the luggage compartment side <u>trim panel</u> retaining clip.
- 2. Detach the luggage compartment side <u>trim panel</u>.

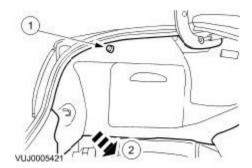


5. Detach the roof opening panel rear drain hose retaining clip.

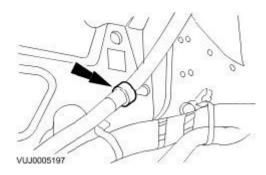


- 6. Remove the parcel shelf.
- 7. Remove both A-pillar trim panels.
- 8. Remove both B-pillar upper trim panels.
- 9. Remove both sun visors.
- 10. **NOTE:** Left-hand shown, right-hand similar. Remove the <u>sun visor</u> retaining clip.




- 11. Remove the overhead console.
- 12. **NOTE:** Left-hand shown, right-hand similar. Detach the rear passenger assist handle retaining screw covers.

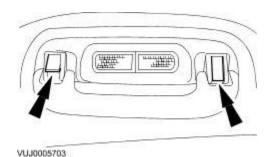


13. **NOTE:** Left-hand shown, right-hand similar. Detach the rear passenger assist handle.

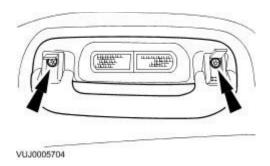


- 14. **NOTE:** Left-hand shown, right-hand similar. Remove the rear passenger assist handle.
  - Disconnect the electrical connector.

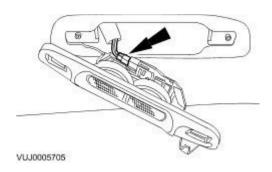


15. **NOTE:** Left-hand shown, right-hand similar. Detach the front passenger assist handle retaining screw covers.

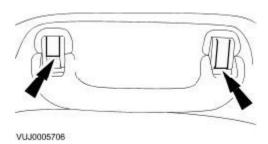


16. **NOTE:** Left-hand shown, right-hand similar. Remove the front passenger assist handle.

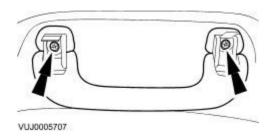


## 17. Detach the <u>headliner</u>.

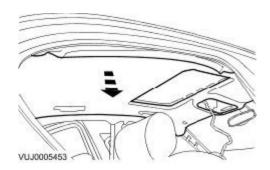

18. Detach the roof opening panel rear drain hose retaining clips.

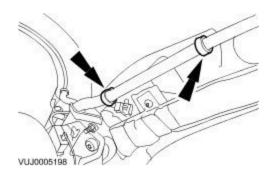

19. Remove the roof opening panel rear drain hose.

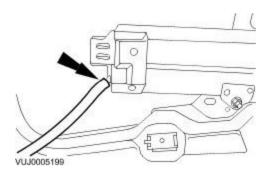

## Installation

1. To install, reverse the removal procedure.