



Supercharger Belt (18.50.08)

Removal

- 1 . Disconnect the battery ground cable.
For additional information, refer to [Battery Disconnect and Connect](#)
- 2 . Remove the air cleaner outlet pipe.
For additional information, refer to [Air Cleaner Outlet Pipe \(19.10.31\)](#)
- 3 . Detach the supercharger belt.
 - 1) Use a 1/2 inch square drive bar to rotate the supercharger belt tensioner.
 - 2) Detach the supercharger belt.

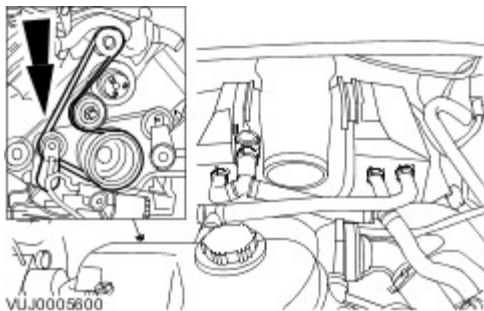


- 4 . Remove the air deflector.
For additional information, refer to [Air Deflector \(76.11.41\)](#)
- 5 . Reposition the supercharger belt tensioner.
 - 1) Loosen the supercharger belt tensioner retaining bolt.
 - 2) Reposition the supercharger belt tensioner.

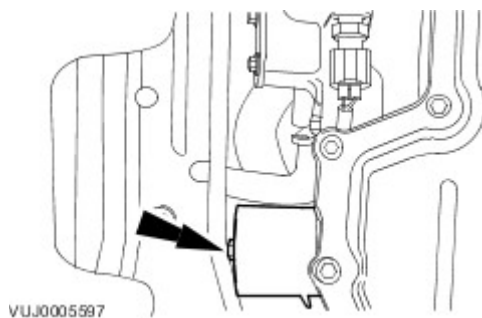


- 6 . Lower the vehicle.
- 7 . Remove the supercharger belt.

Installation

1 . To install, reverse the removal procedure.

 Tighten to 40 Nm.

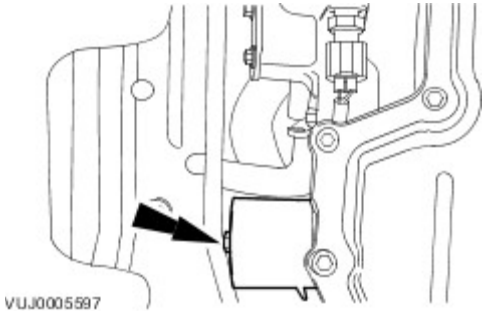

VUJ0005597