

Automatic Transmission/Transaxle - Transmission Fluid Drain and Refill


General Procedures

Draining

1. Raise and support the vehicle.
For additional information, refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** Set vehicle as close to level as possible.

Place a suitable drain pan under the transmission.

3. Remove the transmission filler plug.

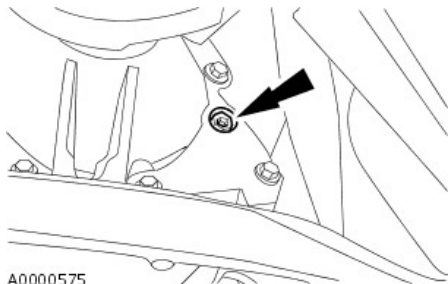


A0000575




VUJ0000947



VUJ0000947

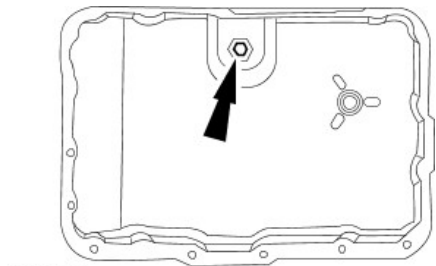

A0000782

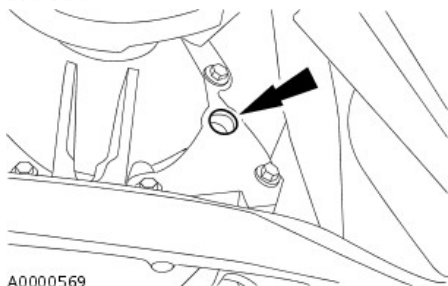

A0000569

4. **CAUTION:** If the automatic transmission fluid is very dirty or it contains metallic particles, then along with a new transmission, install a new automatic transmission fluid cooler and lines.

Remove the transmission drain plug assembly and allow the fluid to drain.

Filling

1. **NOTE:** Fit a new drain plug O- ring seal.

Install the transmission drain plug assembly.

- Tighten to 26 Nm.

2. **NOTE:** It will be necessary to hold the drain plug (larger plug) with a wrench when removing the fluid level indicator plug.

Remove the transmission fluid level indicator plug from the center of the transmission drain plug assembly.

3. Fill the transmission with fluid.

- Use WSS-M2C 202B Automatic transmission fluid or equivalent meeting Jaguar specification.

<p>Fluid type: Jaguar P/N JLM21044 or MERCON V XT-5-QM</p>

4. **NOTE:** With the transmission in the PARK position and the engine running, remove the fluid level indicator plug.

• **NOTE:** The transmission must be at the correct operating temperature to carry out a true measurement of the fluid level.

• **NOTE:** Wait approximately one minute. When the fluid comes out as a thin stream or a drip, it

is at the correct level.

Allow the fluid to drain through the fluid level indicator plug. When the fluid flows as a thin stream or a drip, it is at the correct level.
For additional information, refer to: [Transmission Fluid Level Check](#) (307-01 Automatic Transmission/Transaxle, General Procedures).


5. NOTE: It will be necessary to hold the drain plug (larger plug) with a wrench when tightening the fluid level indicator plug.

Install the transmission fluid level plug.


- Tighten to 10 Nm.

6. Install the filler plug.

- Tighten to 20 Nm.

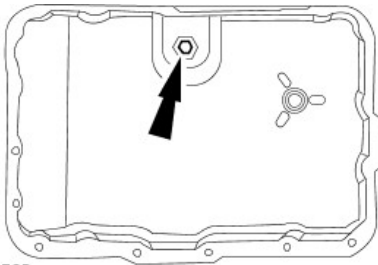

A0000782

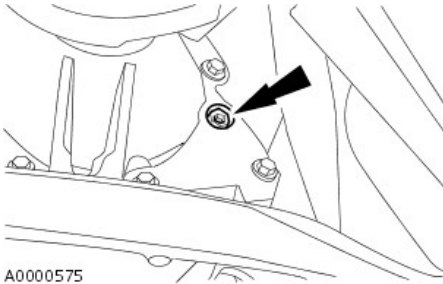

A0000575