



On/Off and volume control

Press the control knob to switch the radio on, press again to switch off. Turn the control knob clockwise to increase or counter-clockwise to decrease volume.

Any volume setting made whilst in audio, phone, or voice activation mode, will be memorised for that system.

Automatic volume control (AVC)

This maintains radio volume at a level sufficient to overcome road noise as vehicle speed increases or decreases. To activate AVC, press and hold the volume control knob until AVC is displayed. To de-activate AVC, momentarily press the volume control knob again. The level of AVC control can be adjusted by turning the volume control knob whilst in AVC ON mode. When AVC is ON, manual adjustment of volume will override the AVC setting.



MODE button

The **MODE** button functions at two levels and is primarily used to adjust sound quality to personal preference.

In addition, it is used to adjust Voice Activation volume, select Voice Activation Training and to set the audio display clock.

Mode level 1

Repeatedly press and release the **MODE** button to scroll through the following modes:

- BASS** Increase/decrease.
- TREBLE** Increase/decrease.
- BALANCE** Left to right.
- FADE** Front to rear.
- SUB LEVEL** (S-TYPE Premium audio system only) Increase/decrease subwoofers.

DSP Setting Seating Positions

With a mode selected, adjust the volume control knob to the desired level. After approximately five seconds the audio system will return to normal volume control mode.

Digital Signal Processing – DSP (S-TYPE Premium Audio System only)

DSP facilitates optimisation of sound for specific seating positions. To optimise sound for all seating positions:

1. Repeatedly press the **MODE** button until **POS ALL** is displayed.
2. Rotate the volume control knob to cycle through **POS F-LEFT** (front left), **POS F-RIGHT** (front right), **POS REAR**, and **POS FRONT** until the desired setting is achieved.

Following approximately five seconds of no further actions or adjustments, the audio system will return to the previous display.

Mode level 2

Press and hold **MODE** button until **TA VOLUME** is displayed, then repeatedly press and release to set the following displays as require

- **VOICE** (adjust Voice Activation volume).
- **VOICE TRAIN A.**
- **VOICE TRAIN B.**
- **CLOCK SET.**

Press and hold **MODE** button to