


4-34 On the road

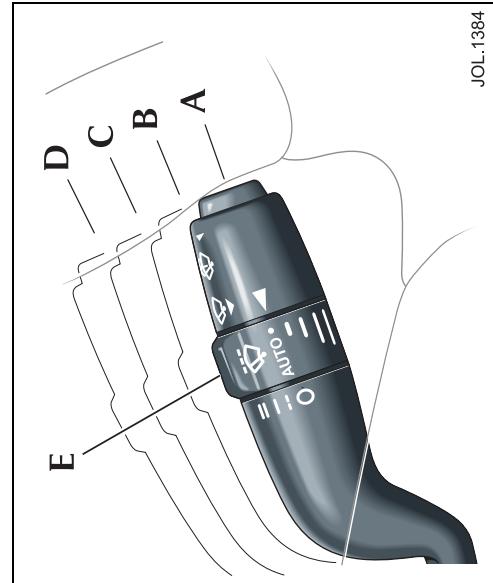

Wipers and washers

The stalk functions are as follows:

Position **(A)**:

The windscreen wipers are Off and parked.

First position **(B)**:

Intermittent wipe.

Second position **(C)**:

Slow wiper operation.

Third position **(D)**:

High speed wiper operation.

Wipers and washers

The windscreen wipers and screen wash functions are controlled by the right-hand column stalk switch and only operate with the ignition in position 'II'.

Rain sensitive wiper control

When AUTO, (turn the rotary collar [E] to AUTO) and intermittent wipe is selected, the wipers will automatically operate to clear the windscreens when rain falls on to the windscreens, or when moisture is present.

For the wipers to operate, the ignition switch must be in position 'II'.

Note: When starting a journey with a wet windscreens, the rain sensing wipers will not operate immediately the ignition is switched on, therefore, a flick wipe should be used to clear the windscreens of any moisture.

Caution: Ensure that AUTO is not selected when entering a car wash or damage to the wiper blades/arms can occur.

Intermittent wipe

When intermittent wipe is selected the delay between wipes can be varied.

Turn the collar (E) to vary the delay from 3 seconds to 18 seconds.

Flick wipe

Pull the column switch towards the steering wheel for a single wipe. Holding the column switch in this position will operate the wiper continuously at slow speed until released.