


Rear Seat Cushion 76.70.37

Removal

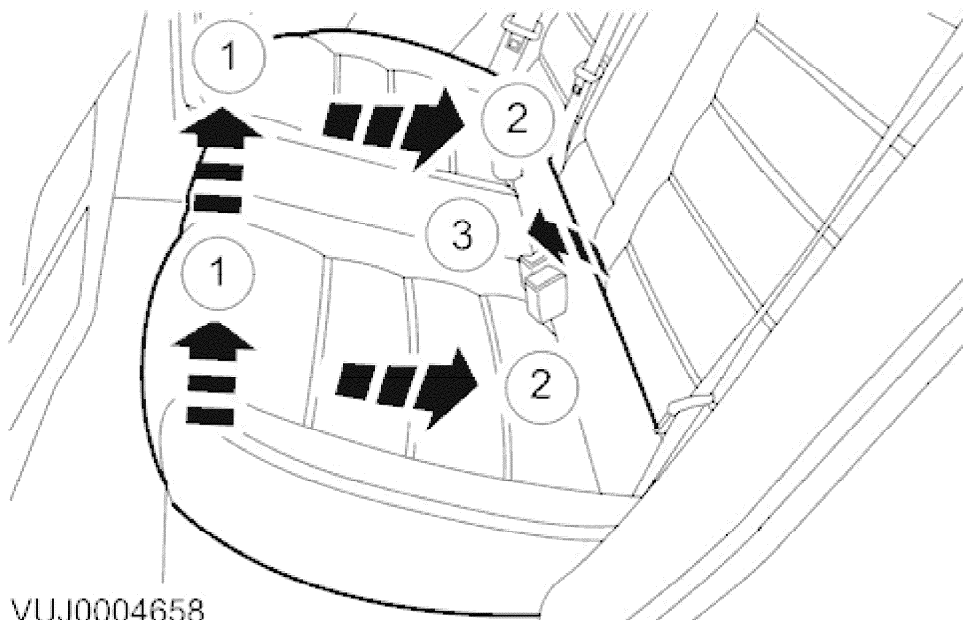

1. NOTE:

Remove and discard old retaining clips.

Remove the rear seat cushion.

1. Detach the rear seat cushion front retaining clips.
2. Slide the rear seat cushion out of the retaining hooks.
3. Remove the rear seat cushion.

Installation

1. NOTE:

Make sure the safety belt buckles are located through the cushion.

NOTE:

Install new seat cushion front retaining clips

To install, reverse the removal procedure.