



Rear Seat Backrest 76.70.38

Removal

1. Remove the rear seat cushion. For additional information, refer to <<Rear Seat Cushion>>.

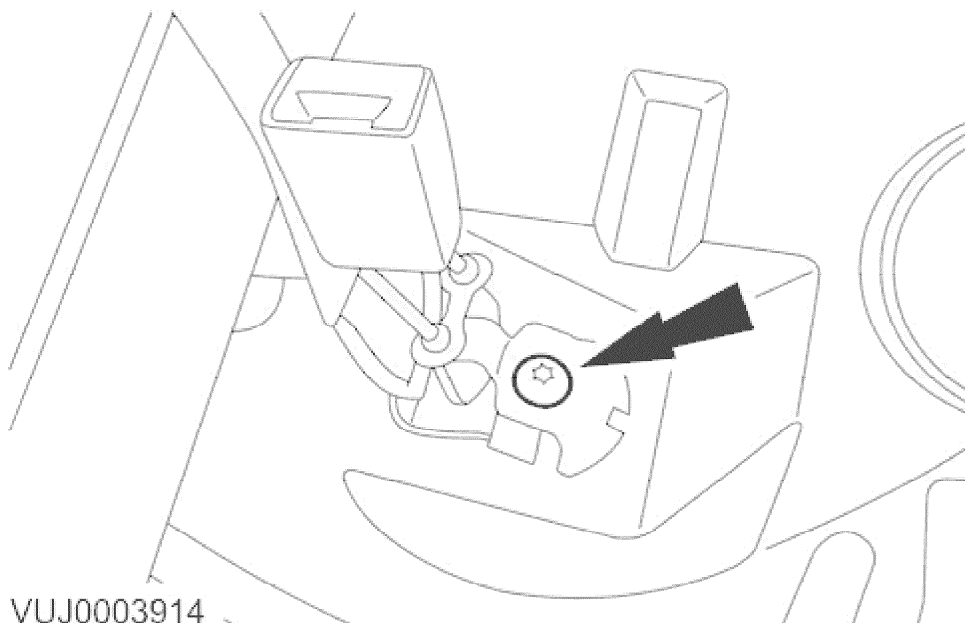


2. Remove the rear center safety belt and buckle.
 - Remove the retaining bolt.

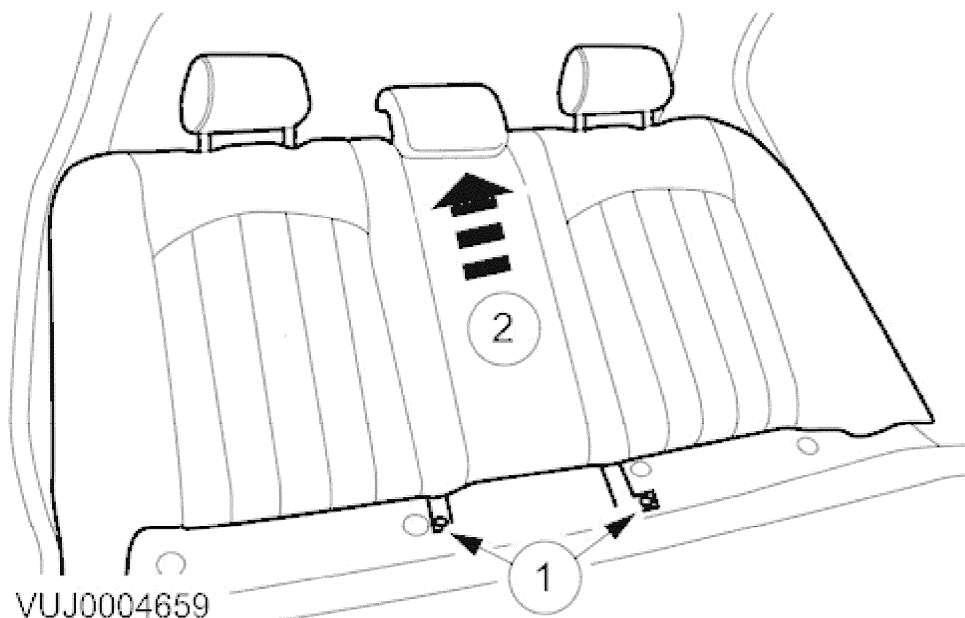

3. Remove the rear seat backrest.
 1. Remove the retaining bolts.
 2. Remove the rear seat backrest.


Installation

2002 X-TYPE - Seating - 501-10

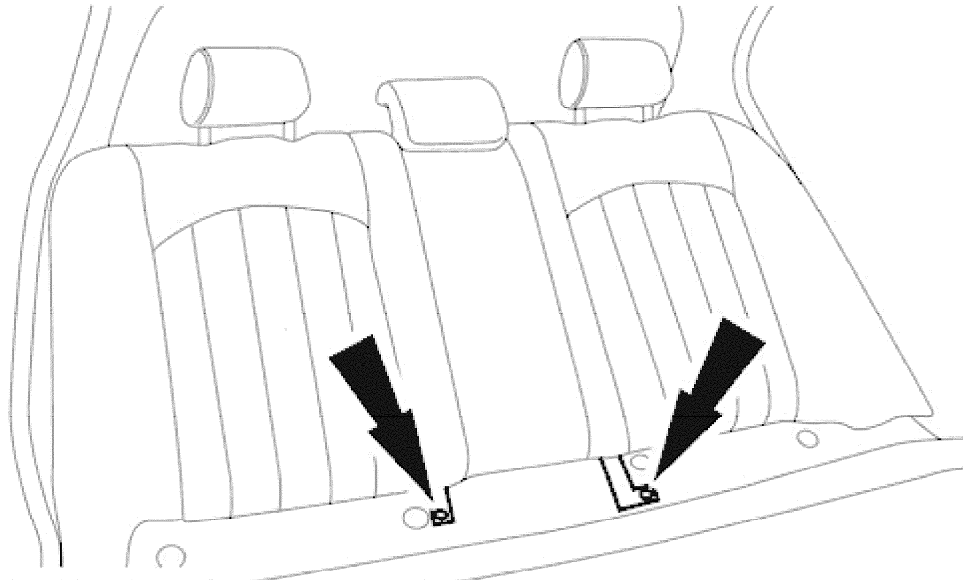

VUJ0004767

1. To install, reverse the removal procedure.
 - Tighten to 55 Nm.

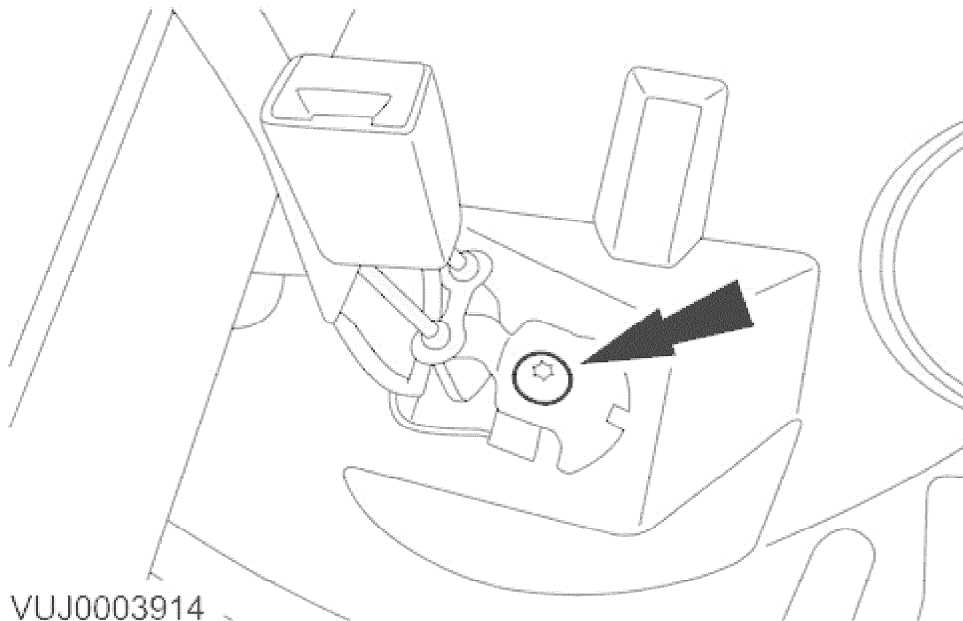

VUJ0003914

2. Tighten to 55 Nm.