


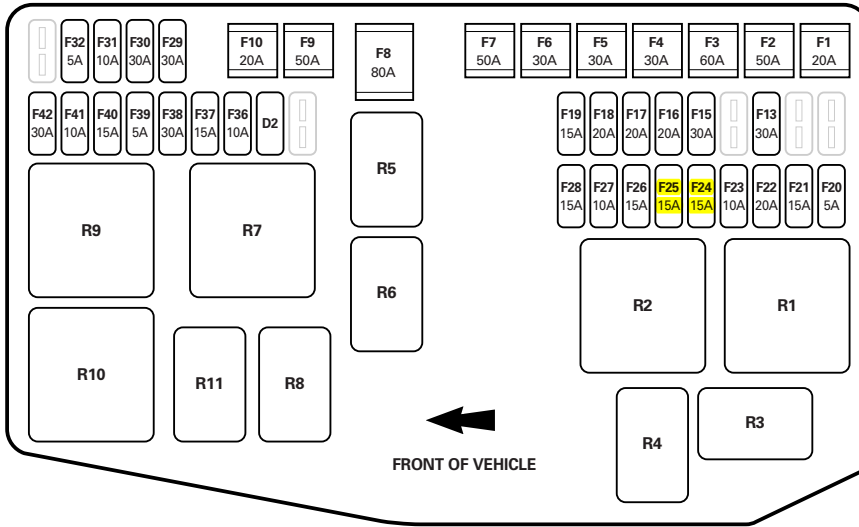


POWER DISTRIBUTION FUSE BOX



- R1 WINDSHIELD WIPER MOTOR RELAY
- R2 WINDSHIELD HEATER RELAY
- R3 HORN RELAY
- R4 ACCESSORY POWER RELAY
- R5 POWER WASH PUMP RELAY
- R6 A/C COMPRESSOR CLUTCH RELAY
- R7 EMS CONTROL RELAY
- R8 TCM RELAY
- R9 DIP BEAM RELAY
- R10 STARTER RELAY
- R11 THROTTLE MOTOR RELAY (2.5L & 3.0L); FUEL PUMP RELAY (2.0L)

CENTRAL JUNCTION FUSE BOX

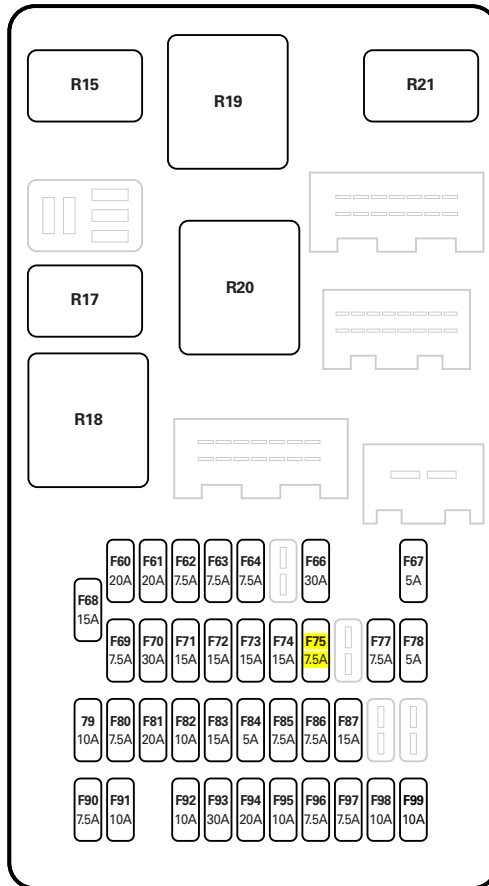

- R15 MAIN BEAM / FRONT FOG RELAY
- R16 NOT USED
- R17 REVERSE LAMPS RELAY
- R18 IGNITION RELAY
- R19 HEATED REAR WINDOW RELAY
- R20 A/C BLOWER RELAY
- R21 BATTERY SAVER RELAY