



VUJ0004061

Item	Part Number	Description
1	—	Upper coolant hose
2	—	Water pump
3	—	Coolant expansion tank
4	—	Coolant pressure cap
5	—	Thermostat
6	—	Engine oil cooler
7	—	Engine block heater (cold climate market vehicles only)
8	—	Engine block drain plug

• WARNINGS:

 Never remove the coolant pressure cap under any circumstances while the engine is operating. Failure to follow this instruction may result in personal injury.

To avoid having scalding hot coolant or steam blow out of the cooling system, use extreme care when removing the coolant pressure cap from a hot cooling system. Wait until the engine has cooled, then wrap a thick cloth around the coolant pressure cap and turn it slowly until the pressure begins to release. Step back while the pressure is released from the system. When certain all the pressure has been released (still with a cloth) turn and remove the coolant pressure cap from the coolant expansion tank. Failure to follow these instructions may result in personal injury.