

ENGINE COMPARTMENT FUSE BOX

| Fuse No | Rating (amps) | Fuse Colour | Circuit |
|---------|---------------|-------------|---|
| F1 | 40A | Orange | Petrol PCM. |
| F2 | - | - | - |
| F3 | - | - | - |
| F4 | - | - | - |
| F5 | 40A | Orange | ABS pump. |
| F6 | 30A | Green | Power wash pump. |
| F7 | 50A | Red | Cigar lighter. |
| F8 | 30A | Green | All wheel drive. |
| F9 | 50A | Red | Engine management system. |
| F10 | - | - | - |
| F11 | - | - | - |
| F12 | - | - | - |
| F13 | 30A | Green | Wipers. |
| F14 | 30A | Green | Starter solenoid. |
| F15 | 40A | Orange | Front screen heater - LH. |
| F16 | 40A | Orange | Front screen heater - RH. |
| F17 | - | - | - |
| F18 | 60A | Aqua | Glow plugs (diesel only). |
| F19 | 5A | Tan | Adaptive cruise control. FLS. |
| F20 | 15A | Blue | Horn. |
| F21 | 25A | Clear | ABS valves. |
| F22 | - | - | - |
| F23 | 5A | Tan | STR monitor. |
| F24 | - | - | - |
| F25 | 10A | Red | ABS. |
| F26 | 10A | Red | Engine management system, ECM, Transmission control module. |
| F27 | 5A | Tan | Secondary air injection. |
| F28 | 5A | Tan | Adaptive front lighting - LH. |

| Fuse No | Rating (amps) | Fuse Colour | Circuit |
|---------|-------------------|------------------------|--|
| F29 | 5A | Tan | Adaptive front lighting - RH. |
| F30 | 20A | Yellow | HEGO/emissions. |
| F31 | 20A | Yellow | Auxiliary power socket - rear. |
| F32 | 20A | Yellow | Cigar lighter. |
| F33 | 20A | Yellow | HEGO/emissions. |
| F34 | 20A | Yellow | HEGO/emissions. |
| F35 | 5A | Tan | Air conditioning compressor clutch. |
| F36 | 15A | Blue | Engine management system 5 (V6 diesel only). |
| F37 | 15A | Blue | Ignition coils. |
| F38 | 5A | Tan | Power steering. |
| F39 | 5A | Tan | Headlamp levelling system. |
| F40 | 15A | Blue | Water pump (supercharged vehicles only). |
| F41 | 5A 10A 20A | Tan Red Yellow | Engine management system 1 (V6 diesel only). Engine management system 1 (petrol). Engine management system 1 (diesel only). |
| F42 | 10A 20A 30A | Red Yellow Green | Engine management system 2 (V8 petrol only). Engine management system 2 (I4 diesel only). Engine management system 2 (V6 petrol and V6 diesel only). |
| F43 | 5A 10A | Tan Red | Engine management system 3 (diesel only). Engine management system 3 (petrol only). |
| F44 | 5A 10A 15A | Tan Red Blue | Engine management system 4 (V6 diesel only). Engine management system 4 (I4 diesel only). Engine management system 4 (V8 petrol only). |
| F45 | 100A | Violet | Radiator cooling fan (diesel and V8 petrol only). |

PASSENGER COMPARTMENT FUSE BOX

| Fuse No | Rating (amps) | Fuse Colour | Circuit |
|---------|---------------|-------------|------------------------------------|
| F1 | - | - | - |
| F2 | - | - | - |
| F3 | 20A | Yellow | Driver's seat adjustment. |
| F4 | 20A | Yellow | Driver's seat adjustment. |
| F5 | 20A | Yellow | Left side rear door controls. |
| F6 | - | - | - |
| F7 | - | - | - |
| F8 | - | - | - |
| F9 | 20A | Yellow | Front passenger's seat adjustment. |
| F10 | 20A | Yellow | Front passenger's seat adjustment. |
| F11 | 20A | Yellow | Right side rear door controls. |
| F12 | - | - | - |
| F13 | - | - | - |
| F14 | - | - | - |
| F15 | 5A | Tan | Footbrake switch. |
| F16 | 5A | Tan | Instrument pack. |
| F17 | - | - | - |
| F18 | 5A | Tan | ICP. |
| F19 | 15A | Blue | Sunroof. |
| F20 | 10A | Red | Driver's seat adjustment. |
| F21 | - | - | - |
| F22 | - | - | - |
| F23 | 10A | Red | Air conditioning. |
| F24 | - | - | - |
| F25 | - | - | - |
| F26 | 10A | Red | Front passenger's seat adjustment. |
| F27 | 20A | Yellow | Driver's heated/climate seat. |
| F28 | - | - | - |

| Fuse No | Rating (amps) | Fuse Colour | Circuit |
|---------|---------------|-------------|--|
| F29 | 20A | Yellow | Front passenger's heated/climate seat. |
| F30 | 5A | Tan | Diagnostics. |
| F31 | 5A | Tan | PATS. |
| F32 | - | - | - |
| F33 | - | - | - |
| F34 | 5A | Tan | Instrument pack. |
| F35 | 5A | Tan | Electric parking brake. |
| F36 | 10A | Red | Column adjust. |

LUGGAGE COMPARTMENT FUSE BOX

| Fuse No | Rating (amps) | Fuse Colour | Circuit |
|---------|---------------|-------------|---------------------------------------|
| F1 | 250A | - | - |
| F2 | - | - | - |
| F3 | 30A | Green | Electric parking brake. |
| F4 | 40A | Orange | Audio system amplifier. |
| F5 | 40A | Orange | Left side retractable seat belt. |
| F6 | - | - | - |
| F7 | - | - | - |
| F8 | - | - | - |
| F9 | 40A | Orange | Electronic differential. |
| F10 | 40A | Orange | Right side retractable seat belt. |
| F11 | - | - | - |
| F12 | - | - | - |
| F13 | 10A | Red | Sportbrake air suspension. |
| F14 | 20A | Yellow | Dual battery module. |
| F15 | 25A | Clear | Sportbrake power operated tailgate. |
| F16 | 25A | Clear | Driver's door module. |
| F17 | 10A | Red | Sportbrake constant variable damping. |
| F18 | 15A | Blue | Accessories. |
| F19 | 5A | Tan | FR receiver. |
| F20 | 5A | Tan | Gateway module. |
| F21 | - | - | - |
| F22 | - | - | - |
| F23 | - | - | - |
| F24 | - | - | - |
| F25 | - | - | - |
| F26 | 25A | Clear | Driver's door module. |
| F27 | - | - | - |
| F28 | 15A | Blue | Accessories. |

| Fuse No | Rating (amps) | Fuse Colour | Circuit |
|---------|---------------|-------------|----------------------------------|
| F29 | - | - | - |
| F30 | 20A | Yellow | Remote function actuator. |
| F31 | 5A | Tan | Remote function actuator. |
| F32 | 5A | Tan | Tyre pressure monitoring system. |
| F33 | 10A | Red | Navigation. |
| F34 | 10A | Red | GSM, CMM. |
| F35 | 5A | Tan | PCV, W2A. |
| F36 | - | - | - |