

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS, Updated/Effective May 1, 2008 ALSO, LISTED TECHNICAL BULLETINS

****THIS IS A REFERENCE GUIDE OF COVERED SELECT EDITION COMPONENTS AND MAY NOT BE AN ALL-INCLUSIVE LIST. JAGUAR CARS RESERVES THE RIGHT TO ADD OR REMOVE COMPONENTS FROM THIS LIST AT ANY TIME WITHOUT PRIOR NOTICE.**

AC BLOWER RH
ACCEL CABLE
ACCELERATOR
ACCELERATOR CABLE
ACCELERATOR PEDAL
ACTUATOR
ACTUATOR AS
ACTUATOR ASSEMBLY
ACTUATOR-DOOR
ACTUATOR-LINK
ACTUATOR-S/CHARGER
ACTUATOR-SPEED CNTRL
ACTUATOR-TRUNK LATCH
AID-REVERSING MODULE
AIR CON RADIATOR
AIR CON UNIT
AIR CON. HARNESS
AIR FLOW METER
AIR PIPE AS
ALTERNATOR
AMP-AUDIO POWER
AMPLIFIER
AMPLIFIER-AIR CON
ANTI LOCK BRAKE MODU
ANTI SKID MODULATOR
ASSY COMP FRT SEAT
ASSY COMP RELAY LEVE
ASSY COMP RESVR BRKT
ASSY LCK BARREL DOOR LH
ASSY-SENDER & OUTLET
ASSY-SENDER & PUMP
AUTO G BOX
AUTO GR BOX
AUTO TRANSMISSION
AUTO-GEARBOX
AXLE
AXLE ASSY LH
AXLE ASSY RH
AXLE SHAFT KIT
AXLE SHAFT R
AXLE-STUB

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

BARREL-DOOR LOCK
BARREL-IGNITION LOCK
BARREL-LOCK
BARREL-TRUNK LOCK
BEARING AND SLEEVE
BEARING-ACCELERATOR
BEARING-CENTRE
BEARING-CLUTCH REL
BEARING-CON ROD
BEARING-CRANK MAIN
BEARING-CRANK THRUST
BEARING-FRT/INT/MAIN
BEARING-HUB
BEARING-INPUT SHAFT
BEARING-MAIN
BEARING-OUTPUT SHAFT
BEARING-PINION
BEARING-RETAINER
BEARING-WATER-PUMP
BLADE-CHAIN TENSIONR
BLEED PIPE
BLOCK-CYLINDER
BLOCK-VALVE
BLOWER-EVAPORATOR
BLOWER-HEATER
BODY-OIL PUMP
BODY-THROTTLE
BODY-WATER-PUMP
BOTTLE-ATMOSP RCOVRY
BOTTLE-DRIER
BOTTLE-RECEIVE DRIER
BOX-JUNCTION
BOX-TRANSFER DRIVE
BRAKE ACTUATOR CABLE
BRAKE ANTI SKID MODU
BRAKE-BOOTER
BRAKE CALIPER
BRAKE PEDAL SWITCH
BRAKE PIPE RHRC -CON
BRAKE-ACTUATOR CABLE
BRG SET MAIN

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

BRIDGE PIPE
CABIN HARNESS
CALIPER-BRAKE
CAM
CAM CHN WHL
CAM CVR GSK
CAM CVR LH
CAM-ACCELERATOR
CAM-ADJUSTMENT
CAM-LIFTING PANEL
CAMSHAFT
CAMSHAFT COVER
CAMSHAFT-INLET
CAM-SLIDE
CANISTER-CARBON
CANISTER-CHARCOAL
CANISTER-CLOSE VALVE
CANISTER-INLET
CARB GASKET
CARBN CANSTR MTG BKT
CARBON CAN ASSY(PRG)
CARRIER
CARRIER-CALIPER
CARRIER-CENTRE
CARRIER-DISC
CARRIER-HUB
CARRIER-IDLER PULLY
CARRIER-MODULE
CARRIER-OIL PIPE
CARRIER-PULLY
CARRIER-SWITCH
CARRIER-TNSION PULLY

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

CD ROM-NAVIGATION
CENTRAL LOCKNG DOLLY
CHAIN DAMPR
CHAIN TENSIONER
CHAIN-OIL PUMP
CHAIN-OIL PUMP
CHAIN-PRIMARY TIMING
CHAIN-SECONDRY TIMNG
CHAIN-TENSIONER
CHAIN-TIMING
CLUSTER-WARNING LAMP
COIL
COIL COVER
COIL-IGNITION
COIL-KEY TRANSPONDER
COIL-MAIN IGNIT 6L
COIL-ON PLUG IGNITON
COLLAR-INLET VALVE
COLLAR-OIL PMP DRIV
COLLAR-RETAINING BRG
COLLER-VALVE
COLUMN-STEERING
COMP PULLEY
COMPLETE ENGINE WORN
COMPRESSOR
COMPRESSOR & CLUTCH
CON ROD BEARING
CONDENSER
CONTROL UNIT-HYDRLIC
CONTROL-MODULE SEAT CONTROL

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

CONVERTER AS
CONVERTER-TORQUE
COOLANT RESEVOIR
CORE-EVAPORATOR
COTTER-VALVE
CRANK PULLY
CRANKSHAFT
CRANKSHFT DAMPER ASY
CRANKSHFT MAIN BEAR
CRANKSHFT UNDERSHIEL
CROWNWHEEL & PINION
CRUISE CONTROL R/FIT
CY HD ASSY WORN UNIT
CYL HEAD ASSY
CYL HEAD ASSY EXCHAN
CYL HEAD STU
CYL HEAD WORN UNIT
CYL LINER
CYL. BLOCK CORE PLUG
CYLINDER
CYLINDER BLOCK
CYLINDER HEAD
CYLINDER HEAD ASSY
CYLINDER-BRKE MASTR
CYLINDER-CLTCH SLAVE
CYLINDER-HOOD LATCH
CYLINDER-HOOD LIFT
DIFFERNTIAL EXCHANGE
DIODE
DOOR HANDLE
DOOR HARNESS
DOOR LATCH
DOOR LOCK
DOOR SWITCHPACK
DOWEL
DOWEL-CYLINDER BLOCK
DOWEL-TIMING COVER
DRIER BOTTL
DRIVE DOG- AUX SHAFT
DRIVE DOG- AUX SHAFT
DRIVE KIT
DRIVE-BELT TENSIONER
DRIVE-DOOR CABLE WITH HANDLE

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

DRIVE-FLEXI
DRIVE-MOTOR AND GEAR
DRIVE-PLANETARY
DRIVEPLATE ASSY
DRIVERS DOOR HARNESS
DRIVER'S SEAT HARNES
DRIVERS SILL HARNESS
DRIVE-STARTER MOTOR
DRVR ST SILL HARNESS
ECU-SECURITY/LOC
ECU-SECURITY/LOCKING
EGR PIPE
ELECT SPEEDO
ELECTRIC ELEMENT
ELEMENT-HEATER
ELEMENT-SEAT HEATER
ENG.HARNES LINK LEAD
ENGINE CONTROL MODUL
ENGINE COVER SPACER
ENGINE CVR FXNG BRKT
ENGINE DIRTY UNIT
ENGINE HARNESS
ENGINE MANAGE.HARNSS
ENGINE MTG R
ENGINE OIL COOL ASSY
ENGINE SUPPO
ENGINE SUPPO
ENGINE WORN UNIT
ENGINE-COMPLETE
ENGINE-SHORT
ENGINE-STRIPPED
EVAP PRES LINK LEAD
EVAPORATOR AND SEAL
EVAPORATOR COVER.
EVEAPORATOR
EX CAMSHAFT
EXCH CD CHANGER
EXCH CD PLAYER
EXCH ENG
EXCH PREM RADIO
EXCH RADIO
EXCHANGE CYL HEAD
EXCHANGE ENGINE 4.2
EXCHANGE RADIO
EXH VALVE
EXH.GAS RECIRC PIPE

DOOR HANDLE IS COVERED ONLY IF
IF THE ROD INSIDE FAILED/
IF BROKEN OFF NOT COVERED

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

EXPANSION TANK
FACIA HARNESS
FACIA VACUUM HARNESS
FAN AND COWL
FAN BLOWER ASSY LH
FAN BLOWER ASSY RH
FAN IMPELLER
FAN SOEED & TEMP C/B
FAN-ALTERNATOR
FAN-COOLING
FAN-DRIVE UNIT
FLANGE-EVAP LOSS
FLYWHEEL
FLYWHEEL ASS
FORWARD HARNESS
FRONT SEAT BELT LH
FRONT SEAT BELT RH
FRT SEAT BELT ASSY
FRT/LFT SIDE WINDOW REGULATOR
FRT/RT SIDE WINDOW REGULATOR
FUEL FEED PIPE
FUEL PUMP
FUEL RAIL
FUEL SENSOR
FUEL TANK ASSY – CORROSION NOT COVERED
FUSEBOX OR MODULE
FUSEBOX-ACCESSORY
FUSEBOX-CUBBY BOX
FUSEBOX-ENGINE BAY
FUSEBOX-HEELBOARD
FUSEBOX-TRUNK MTG
GASKET – BREATHER HOUSING
GASKET (SUMP SNDWICH
GASKET ACCUM.HOUSING
GASKET OIL S
GASKET SET
GASKET SET, HEAD
GASKET VALVE BLOCK
GASKET WATER INLET
GASKET-CAMSHAFT COVR
GASKET-CYLINDER HEAD
GASKET-EXHST MANIFLD
GASKET-INDCTN MANFLD
GASKET-INLET MANIFLD
GASKET-MANIFOLD
GASKET-OIL DELIVERY

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

GASKET-OIL SUCTION
GASKET-SUMP
GASKET-WATER PUMP
GASKET-WTR INLET SPT
GAUGE-BATTERY
GAUGE-BATTERY/FUEL
GAUGE-FILL LEVEL IND
GAUGE-FUEL
GAUGE-OIL PRESSURE
GAUGE-SPEEDO/TACHO
GAUGE-TEMPERATURE
GEAR
GEAR CONTROL LEVER CABLE
GEAR STEERING
GEARBOX
GEARBOX ASSY GM AUTO
GEARBOX HARNESS
GEARBOX-FORE AND AFT
GEARBOX-MANUAL
GEARBOX-RECLINE MTR
GEARBOX-RISE & FALL
GEARBOX-RISE & FALL
GEARBOX-SEAT RECLINE
GEAR-DIFF SIDE BEVEL
GEAR-DIFF SIDE RING
GEAR-DIFFERENTIAL
GEAR-DRIVE
GEAR-OUTPUT SHAFT
GEAR-PINION MATE BEV
GEAR-RING
GEAR-SPEEDO DRIVE
GEAR-SUN
GEARWHEEL
GEAR-WIPER MOTOR
GSKET (SUMP SANDWICH
GSKT (TIMING CVR LH)
GSKT (TIMING CVR RH)
GSKT (TIMING CVR TOP
GSKT (WTR PUMP ELBOW
GSKT FUELCP
GUIDE-VALVE
HALFSHAFT
HANDBRAKE
HANDBRAKE ASSY
HANDBRAKE CABLE ADJUST
HANDLE REMOTE CONTROL
HANDSET-TELEPHONE

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

HARNES

HARNES - VAC FACIA

HARNES AIR CON OVER

HARNES ECU TO ENG

HARNES ENG MAN LHD

HARNES ENG MAN RHD

HARNES MOT PHONE

HARNES/CONNECTOR REPAIR

HARNES-BLOCK HEATER

HARNES-BODY

HARNES-CABIN

HARNES-CANISTER

HARNES-DRIVERS SILL

HARNES-ENGINE

HARNES-FORWARD

HARNES-GEARBOX

HARNES-LINK

HARNES-MAIN

HARNES-NAVIGATION

HARNES-PASGNER SILL

HARNES-TRANSMISSION

HD GSKT SET

HEAD-CYLINDER

HEATED SENSOR RELAY

HEATER

HEATER CORE

HEATER-ENGINE BLOCK

HEATER-SEAT CUSION

HEATER-SEAT SQUAB

HIGH MOUNT STOP LIGHT – SHORT

HOLDER BULB

HORN

HORN HIGH N

HORN RELAY

HOUSING

HOUSING AND SLEEVE

HOUSING GASKET

HOUSING-BEARING

HOUSING-BREATHER

HEADLAMP ASSY HID ARE COVERED ON
FOLLOWING MODLES:

X-TYPE – 2002-ON

S-TYPE- 2003-ON

XJ-2004-ON

XK-2007-ON

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

HOUSING-CALIPER
HOUSING-CONNECTOR
HOUSING-CONT MODULE
HOUSING-CONVERTER
HOUSING-DRIVEN GEAR
HOUSING-EXTENSION
HOUSING-G/BOX EXT
HOUSING-OIL SEAL
HOUSING-PISTON TENSN
HOUSING-SHAFT
HOUSING-TENSION PITN
HOUSING-THERMOSTAT
HOUSING-THROTTLE
HOUSING-TORQUE CONVT
HOUSING-TORQUE CONVT
HUB
HUB & BEARING
HUB AND BEARING
I.C.E. HARNESS
IDLER PULLEY
IGN COIL
IGN SWITCH A
IGNITION SWITCH
IGNTN COIL
IMPELLER-WATER PUMP
IMPELLOR
INDICATOR-TIMING
INDUCTION MANIFOLD
INJECTOR-FUEL
INLET CAMSHAFT
INLET MANIFOLD ASSY
INNER HUB BRG
INSTRMTN CLUSTR/PACK
INSTRUMENT PACK
J-GATE/LEVER
JOINT-THROTTLE BODY
JOINT-UNIVERSAL
KEY-TRANSPONDER
KIT-AUXILIARY SHAFT

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

KIT-BEAR & PIST RING
KIT-BEARING-BIG-END
KIT-BLOWER MOTOR
KIT-BRAKE CALIPER
KIT-CALIPER CARRIER
KIT-CALIPER REPAIR
KIT-CALIPER SEALING
KIT-CAM COVER SEAL
KIT-DIFF O/PUT SEAL
KIT-GASKET
KIT-GASKET AND SEAL
KIT-GASKET CYL HEAD
KIT-HARNESS
KIT-HUB BEARING
KIT-HUB BRG+SEAL
KIT-INCLINATION SNSR
KIT-INLET PIPE
KIT-INTRFCE CONNECT
KIT-LINK LEAD
KIT-MAIN BEARING
KIT-MICROSWITCH
KIT-NON RETURN VALVE
KIT-OIL PAN & PIPE
KIT-O-RING
KIT-O-RING AND SEAL
KIT-OUTLET PIPE
KIT-OUTPUT SEAL
KIT-PARKING PAWL
KIT-PINION HOUSING
KIT-PISTON RING
KIT-PISTON SERVICE
KIT-PRE TENSIONER
KIT-PRES WARN SWITCH
KIT-PRESS REGULATOR

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

KIT-PURGE CONTROL
KIT-REP-O/COOL PPE
KIT-RESERVOIR
KIT-RETAINING RING
KIT-SEAL
KIT-SEAL-RACK/PNION
KIT-SECURITY
KIT- SENSOR FIXING
KIT-SERVO PISTON
KIT-SRVO SEAL&GASKET
KIT-STEPPER MOTOR
KIT-STG COL RCH MTR
KIT-STR COL TILT MTR
KIT-THRUST BEARING
KIT-TRANSMTR BUTTONS
KIT-UNIVERSAL JOINT
KIT-VALVE GASKT/SEAL
KIT-VLVE PINION SEAL
KIT-VLVE PLTE & GSKT
KIT-WATER PUMP SEAL
LATCH-BONNET
LATCH-FUEL FILLER
LATCH-HOOD PLATE
LATCH-TRUNK
LEAD-HARNESS
LEAD-LINK
LEAD-LINK TRUNK HARN
LEFT FORWARD HARNESS
LH 4L STEERING VALVE
LHD STEER RACK 4 LTR
LINER-CYLINDER
LINK
LINK HARNES
LINK HARNESS - ALT
LINK HARNESS 6L
LINK LEAD
LINK LEAD ENG MAN SY
LINK LEAD ENG MAN SY

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

LINK LEAD PILOT LGT
LINK-ACTUATOR
LINKAGE
LINK-ANTI ROLL BAR
LINK-CLOCK
LINKLEAD
LINK-LEAD THROTTLE POS SENSOR
LINK-LOCKING
LINK-THROTTLE
LOCK AND ACTUATOR
LOUDSPEAKER
LOW LEVEL SENSOR
MAIN BEARING BOLT
MANFLD GSKT
MANIFLD-IDLE SPEED
MANIFLD-IDLE SPEED
MANIFOLD-INDUCTION
MANIFOLD-INLET
MANUAL TRANSMISSION
MECHANISM-LIFT BLOCK
MECHANISM-RECLINE
MECHANISM-RISE&FALL
MECHANISM-WIPER
METER-AIR FLOW
MICROPROCESSOR
MICROSWITCH
MODULATOR
MODULATOR-ABS
MODULATOR-VACUUM
MODULE
MODULE-AIR CON
MODULE-AUDIO IN/FACE
MODULE-BALLAST
MODULE-BODY PROCESS
MODULE-CDL
MODULE-CENTRAL CNTRL
MODULE-CHIP CONTROL

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

MODULE-CONSOLE SWTCH
MODULE-CONTROL
MODULE-DIM/DIP
MODULE-DIMMER
MODULE-DIODE
MODULE-DOOR
MODULE-DOOR OPEN
MODULE-DRIVE SEAT
MODULE-ELECT CONTROL
MODULE-ENGINE CONTRL
MODULE-FUEL PUMP
MODULE-FUSEBOX
MODULE-GARAGE DOOR
MODULE-GEAR ILLUM
MODULE-HEADRST CNTRL
MODULE-HOOD CONTROL
MODULE-IGNITION
MODULE-IGNITION AMP
MODULE-IGNITION CONT
MODULE-ILLUM CONTROL
MODULE-IMMOBILISER
MODULE-INJ/IGN CONT
MODULE-INSTRMNT DISP
MODULE-INTERFACE
MODULE-INTRUSION
MODULE-KEY TRANSPOND
MODULE-K-RELAY
MODULE-LAMP CONTROL
MODULE-LIGHT SWITCH
MODULE-LIGHTING
MODULE-LOAD DUMP
MODULE-LOAD DUMP/RES
MODULE-MULTI-FUNCT
MODULE-MULTI-FUNCT
MODULE-NAVIGATION
MODULE-OVERSPEED WRN
MODULE-SEAT CONTROL
MODULE-SEAT HEAT
MODULE-SEAT MEMORY
MODULE-SECUR/LOCKING

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

MODULE-SECURITY
MODULE-SECURITY CONT
MODULE-SPEED CONT
MODULE-SPEED WARN
MODULE-SPEEDOMETER
MODULE-STEERING CONT
MODULE-STRG COLUMN
MODULE-SUNROOF CTRL
MODULE-SUNROOF SWTCH
MODULE-SUPPRESSION
MODULE-SWTCHPCK/CLK
MODULE-TEMP WARNING
MODULE-TRANSMISSION
MODULE-TRIP COMPUTER
MODULE-VOICE
MODULE-WIPER LOGIC
MOTOR
MOTOR & BRACKET
MOTOR & FAN
MOTOR & G/BOX-H/REST
MOTOR & MECH-WIPER
MOTOR (SLIDING ROOF)
MOTOR AND ANCHORAGE
MOTOR AND CABLE
MOTOR AND GEAR
MOTOR AND GEARBOX
MOTOR AND PUMP
MOTOR CABLE ANCHORAG
MOTOR COVER
MOTOR STARTER WORN
MOTOR/GEAR-WIPER
MOTOR/MECH-WIPER
MOTOR-AIR CON BLOWER
MOTOR-AIR CON BLOWER
MOTOR-ASPIRATOR
MOTOR-BYPASS SERVO
MOTOR-FORE AND AFT
MOTOR-HEATER BLOWER
MOTOR-RECLINE
MOTOR-RECLINE MECH

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

MOTOR MECH/HEADREST
MOTOR-RISE AND FALL
MOTOR-SEAT SLIDE LUMBER
MOTOR-SERVO
MOTOR-STARTER
MOTOR-STEPPER
MOTOR-SUNROOF
MOTOR-TILT
MOTOR-VARIABLE
MOTOR-WINDOW REGULTR
MOTOR-WINDSCRN WIPER
MOULDED FAN
NAVIGATION
NAVIGATION MODULE
ODOMETER
OIL COOLER PIPE FEED
OIL COOLER RETURN
OIL PUMP GEA
OIL SEAL
OIL SUMP
OIL SUMP ASS
OIL THROWER
OIL-AUTO TRANS
OIL-COMPRESSOR
OIL-PUMP
ON PLUG IGNTION COIL
OPEN CIRUIRT
OPERATING LEVER COMP
OUTER HUB BRG
OUTER SEAL
OUTER SEAL ASSY
OUTLET PIPE
PACK-INSTRUMENT
PACK-REAR ELECTRONIC
PANEL-AIR CON CONTRL
PANEL-AIR CON/RADIO
PAN-SUMP

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

PARK BRAKE HANDGRIP
PAS PUMP
PAS PUMP ASSY
PAS VALVE LHD 4L
PAS VALVE LHD 6L
PAS VALVE RHD 4L
PAS VALVE RHD 6L
PAS VALVE WITH ENERG
PASS SILL HARNESS
PASSENG DOOR HARNESS
PASSENGER SEAT HARNE
PAWL
PAWL-LOCK
PEDAL-ACCELERATOR

ANY PIPES/HOSES WITH RUBBER MATERIAL NOT COVERED BELOW

PIPE
PIPE AND BRACKET-AIR
PIPE AND HOSE-CLUTCH
PIPE ASSY LH
PIPE ASSY RH
PIPE LH
PIPE RH
PIPE VAPOUR U.FLOOR
PIPE/BRACKET-AIR
PIPE/CABLE CLIP QUAD
PIPE-ADAPTOR
PIPE-AIR
PIPE-AIR CON
PIPE-AIR DELIVERY
PIPE-BALANCE
PIPE-BLEED
PIPE-BRAKE VACUUM
PIPE-BREATHER DRAIN
PIPE-BYPASS
PIPE-C/CASE BREATH
PIPE-CONNECTING
PIPE-COOLANT BLEED
PIPE-EGR
PIPE-FEED
PIPE-FILLER

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

PIPE-FUEL
PIPE-FUEL AND BRAKE
PIPE-FUEL FILLER
PIPE-FUEL RETURN
PIPE-GOVERNOR
PIPE-HEATER FEED
PIPE-HYDRAULIC
PIPE-HYDRAULIC BRAKE
PIPE-HYDRAULIC CLTCH
PIPE-INLET
PIPE-OIL
PIPE-OIL COOL RELIEF
PIPE-OIL COOL RETURN
PIPE-OIL COOLER
PIPE-OIL COOLER FEED
PIPE-OIL DELIVERY
PIPE-OIL DRAIN
PIPE-OIL FEED
PIPE-OIL PICKUP
PIPE-OIL RETURN
PIPE-OIL SUCTION
PIPE-OIL VENT
PIPE-OUTLET
PIPE-OVER PRESSURE
PIPE-OVERFLOW
PIPE-PETROL FEED
PIPE-POWER STEERING
PIPE-PRESSURE SENSR
PIPE-PURGE
PIPE-RADIATOR BLEED
PIPE-THRMOSTAT BLEED
PIPE-TRANSFER
PIPE-TWIN PURGE
PIPE-VACUUM
PIPE-VACUUM STUB
PIPE-VAPOUR
PIPE-WATER
PIPE-WATER BYPASS
PIST FRT LH REAR RH
PIST FRT RH REAR LH
PISTON

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

PISTON & LINER ASSY
PISTON AND LINER
PISTON ASSY FRONT RH
PISTON RING
PISTON RINGS SET
PISTON RINGS TOP
PISTON-CALIPER
PISTON-CHAIN TENSIONER
PISTON-DIRECT CLUTCH
PISTON-SERVO
POTENTIOMETER
POTENTIOMETER-THROTTLE
POWER RESISTOR
POWERED SEAT HARNESS
PRESENTER-TELEPHONE
PRINTED CIRCUIT
PROPSHAFT
PROPSHAFT 2 PIECE AUTO
PROPSHAFT 6.0L AUTO
PULLEY
PULLEY-CRANKSHAFT
PULLEY-FAN
PULLEY-JOCKEY
PULLEY-STEERING PUMP
PULLEY-THROTTLE CABLE
PULLEY-WATER PUMP
PULLEY-ALTERNATOR
PULLEY-IDLER
PUMP & GASKET-WATER
PUMP AND CLUTCH-AIR
PUMP STRAINER
PUMP/FILTER-FUEL
PUMP-AIR
PUMP-AIR INJECTION
PUMP-FRONT
PUMP-FUEL
PUMP-HOOD LIFT
PUMP-HYDRAULIC

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

PUMP-LUMBER/IN SEAT
PUMP-OIL
PUMP-POWER STEERING
PUMP-POWERWASH
PUMP-S/CHARGR COOLNT
PUMP-SCREENWASH
PUMP-SPEED CONTROL
PUMP-WASHER
PUMP-WATER
PURGE VALVE
RACK
RACK & MOUNTING ASSY
RACK & MTGS RH WORN
RACK & PINION
RACK & PINION LHD
RACK & PINION WORN
RACK&PINION-STEERING
RACK/PINION ASSY LHD
RACK/PINION LHD WORN
RADIO LINK HARNESS
RAIL
RAIL AND SEAL
RAIL-AIR
RAIL-FUEL
RAIL-SEAL MOUNTING
RAIL-WATER
REAR VAPOUR PIPE
REARWARD HARNESS
REBUILT RADIO
RECEIVER DRIER
RECEPTACLE-ENGN CVR
RECON STRG PUMP
RECTIFIER-ALTERNATOR
RECV DRIER+FAN COWL
REGULATOR
REGULATOR-PRESSURE
REGULATOR-WINDOW
RELAY

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

RELAY MODULE
RELAY-AIR CON
RELAY-ANTI-STALL
RELAY-CHANGE OVER
RELAY-FAN
RELAY-H/LAMP LOG MOD
RELAY-H-MODULE
RELAY-MAIN
RELAY-MICRO
RELAY-M-MODULE
RELAY-MODULE
RELAY-PUMP
RELAY-REVERS INHIBIT
RELAY-STEP
RELAY-TIMER
RELAY-VALVE
RELAY-WATERPROOF
REMAN ENG ECM
RESERVOIR
RESERVOIR-COOLANT
RESERVOIR-SCREENWASH
RESISTOR
RESISTOR-POWER
RHD STEERING RACK 4L
ROD-PARK PAWL ACTUAT
ROD-RESERVOIR SUPPRT
ROTOR-SENSOR
ROTOR-SPEED SENSOR
RR HANDBRAKE ASSY LH
RR HANDBRAKE ASSY RH
RR HARNESS
SCREEN-NAVIGATION
SEAL O PUMP
SEAL-CAMSHAFT COVER
SEAL-COIL COVER
SEAL-CRANKSHAFT OIL
SEAL-ENGINE

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

SEAL-FRONT OIL
SEAL-FRONT PUMP
SEAL-INLET VALVE
SEAL-INNER
SEAL-MAIN COLUMN
SEAL-MANUAL SHAFT
SEAL-O/PUT SHAFT OIL
SEAL-OIL
SEAL-OIL HUB
SEAL-OIL INTER SHAFT
SEAL-OIL PINION
SEAL-OIL TRIPLE LIP
SEAL-RAIL
SEALS KIT.R&P STRG
SEAL-SECONDARY
SEAL-SHAFT
SEAL-THERMOSTAT
SEAL-TIMING COVER
SEAL-VALVE
SEAL-WATER
SEAL-WATER OUTLET
SEAL-WATER PUMP
SEAT HEATER
SEAT SWITCH
SECURITY/LOCKINK MOD
SENDER
SENSOR
SENSOR - T.D.C
SENSOR THROTTLE POS
SENSOR-AID REVERSING
SENSOR-AIR FLOW
SENSOR-AIR TEMP
SENSOR-ASP MOTOR
SENSOR-BRAKE PAD
SENSOR-CAMSHAFT
SENSOR-CATALST MONTR
SENSOR-COOLANT TEMP
SENSOR-CRANKSHAFT
SENSOR-ENG POSITION
SENSOR-ENGINE SPEED
SENSOR-EVAPORATOR
SENSOR-FLUID LEVEL

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

SENSOR-FLYWHEEL
SENSOR-FUEL PRESSURE
SENSOR-FUEL TEMP
SENSOR-IN CAR
SENSOR-INCLINATION
SENSOR-INTRUSION
SENSOR-KNOCK
SENSOR-LOW COOL WARN
SENSOR-LOW LEVEL
SENSOR-MAP
SENSOR-OXYGEN
SENSOR-PARKING REAR
SENSOR-RAIN
SENSOR-RIDE LEVEL
SENSOR-SOLAR
SENSOR-SPEED
SENSOR-SPEED CRKSHFT
SENSOR-SPEEDOMETER
SENSOR-TEMP WARN
SENSOR-TEMPERATURE
SENSOR-THERMAL
SENSOR-WASH RESERV
SENSOR-WHEEL SPEED
SENSOR-YAW RATE
SEPARATATOR-VAPOUR
SERVO-SPEED CONTROL
SET-MAIN BEARING
SET-MOTOR BRUSH
SET-SUPPLMNTY GASKT
SHAFT & NUT-FULCRUUM
SHAFT & STUD-OUTPUT
SHAFT AND RING
SHAFT AND STUD
SHAFT& SPROCKET-AUX
SHAFT-AUXILIARY
SHAFT-AXLE
SHAFT-COUPPLING
SHAFT-DRIVE
SHAFT-FLEXIBLE DRIVE
SHAFT-FULCRUUM
SHAFT-GEARSHIFT

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

SHAFT-IDLER
SHAFT-INPUT
SHAFT-INTERMEDIATE
SHAFT-LINK
SHAFT-MAIN
SHAFT-MANUAL
SHAFT-OPERATING
SHAFT-OUTPUT
SHAFT-PNION MTE CRSS
SHAFT-SPIDER
SHAFT-STEERING WHEEL
SHAFT-STUB AXLE
SHAFT-SUN GEAR
SHAFT-TURBINE
SLIDE-SEAT
SLOENOID-KEYLOCK
SOLAR SENSOR & ALARM
SOLENOID
SOLENOID AND O-RING
SOLOID VLVE
SPEAKER
SPEAKER-AUD WARNING
SPEAKER-TRIMBOARD
SPEEDOMETER
SPEEDOMETER-ELECT
SPROCKET-AUX SHAFT
SPROCKET-CAMSHAFT
SPROCKET-CRANKSHAFT
SPROCKET-OIL PUMP
STARTER MOTOR
STEER RACK & PIN
STEER RACK ASSY RHD
STEER RACK LHD 92MY
STEER RACK LHD XJRS
STEER RACK RHD 90MY
STEER RACK RHD XJR-S
STEERING RACK & MTGS
STRG RACK + MTG
STRG RACK + PINION

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

STRIKER
STRIKER-BONNET LOCK
STRIKER-CRTESEY SWTCH
STRIKER-FUEL FILLER
STRIPPED ENGINE
STRIPPED ENGINE WORN
SUMP GSKT
SUMP PAN
SUMP-OIL
SUPERCHARGER
SUPPRESSOR-ALTERNATR
SUPPRESSOR-IGN COIL
SUPPRESSOR-PUMP
SUPPRESSOR-RELAY
SWITCH DIRECTION
SWITCH MASTER LIGHT
SWITCH PACK
SWITCH REVERSE LAMP
SWITCH TRANSDUCER OIL PRESSURE
TACHO HEAD
TACHOMETER
TANDEM PUMP ASSY
TANK ELEMENT
TANK&PROBE-EXPNSION
TANK/CAP-HEADER
TANK-EXPANSION
TANK-HEADER
TANK-VACUUM
TEMP SENSOR LINKLEAD
TENSIONER DRIVE BELT
TENSIONER-CHAIN
TENSIONER-DRIVE BELT
THERMISTER-EVAP OUT
THERMOCOUPLE
THERMOSTAT
THERMOSTAT 4.0 S-TYPE
THROTTLE-BODY
THRTLE POSITN SENSR
TIMING COVER GASKET
TIMNG COVER GASKET
TORQ CNVRTR
TORQUE CONV WORN UNT
TORQUE CONVERT VALVE
TORQUE CONVERTER
TRANSCEIVER

SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

TRANSCEIVER-GRGE DR
TRANSDUCER - SPEEDO
TRANSDUCER-FUEL INJ
TRANSDUCER-OIL PRESS
TRANSDUCER-SPEED
TRANSDUCER-STEERING
TRANSISTOR-POWER
TRANSMISSION UNIT
TRANSMITTER
TRANSMITTER-KEY FOB
TRANSMITTER-L/POWER
TRANSMITTER-LOW COOL
TRANSMITTER-TEMP
TRUNK HARNESS
TWIN FAN HAR
UNIT-AIR CON
UNIT-AIR CON SERVO
UNIT-FUEL TANK SENDR
UNIT-HYDRAULIC CNTRL
UNIT-INTERFACE
UNIT-LOGIC
UNIT-OVER VOLT INDCT
UNIT-SPD CONTROL
UNIT-SPEED INTERFACE
UNIT-TIMING
UNIT-VACUUM
UNIV JOINT
VACUUM PIPE
VALVE
VALVE AND PINION
VALVE EXHAUS
VALVE SEAT E
VALVE SPRING (INNER)
VALVE SPRING (OUTER)
VALVE V12 ENG XJRS
VALVE V12 ENG XJRS
VALVE-AIR BLEED
VALVE-BYPASS
VALVE-CANISTER CLOSE
VALVE-CHARGE
VALVE-CHECK

SELECT EDITION REFERENCE GUIDE

COVERED COMPONENTS

VALVE-COMPR RELIEF
VALVE-CONTROL
VALVE-DECELERATION
VALVE-EGR
VALVE-EXPANSION
VALVE-EXTRA AIR
VALVE-HEATER
VALVE-HEATER WATER
VALVE-HIGH PRES RELF
VALVE-IDLE AIR
VALVE-INLET
VALVE-NON RETURN
VALVE-OIL DIVERTER
VALVE-PINION
VALVE-PRESSURE
VALVE-PRESSURE CONT
VALVE-PRESSURE DELAY
VALVE-PRESSURE RDCG
VALVE-PRESSURE RELIF
VALVE-PURGE
VALVE-SOLENOID
VALVE-SOLENOID SHIFT
VALVE-VACUUM
VALVE-WATER
WATER PUMP KIT
WATER GAUGE
WATER HEAT REST PIPE
WATER PUMP & GASKET
WATER PUMP COMPLETE
WATER PUMP GASKET
WATEROUTLET
WHEEL BEARING
WHEEL-BLOWER MOTOR
WHEEL-STEERING
WINDOW REGULATOR
WINDOW WASHER RESERVOIR
WIPER RELAY
WIRING REPAIRS ARE COVERED ONLY ON SELECT EDITION COVERED PARTS

TECHNICAL BULLETIN'S COVERED UNDER SELECT EDITION: (not an all inclusive list)

XT303-13- Hissing Noise Drivability issues

XT303-15 – Coolant Leak from Thermostat Housing

XT307-03- Scraping noise 1600RPM 1800-2500 RPM install modified flexplat

XT308-01 – Oil leakage rear output flange of transfer case

XT308-06 – Difficult/High Effort Engagement into 1st or reverse

XT308-08 - Transfer Case shaft oil leak

XT412-02 – Vehicle Fogging/Climate Control Slow to Cool Vehicle

XT413-02 – Multiple Warnings on Instrument Cluster VIN G00001-G25490- X350-XJ

XT501-03 – Front seat rocking-seat track VIN C00001-C75251 X-type 2002 MY

XT501-28- Exterior Front Door Handle Hard to Open – Deflection of Link Rod

S303-24 – V6 Engine MIL Lamp on/DTC P0332

S307-03- Torque Converter Clutch does not lock up missing seal ring

S307-12- Driveline Clunk/Knock when downshifting

S307-16 – 5 Speed Transmissions – Selector Lever VIN L00001-M44997

S307-17- 6 Speed Trans harsh shifts

S307-19 5-speed transmission – erratic or harsh shifts

S307-20 – Inability to Shift Gears-Selector Lever Moves Freely Through J-gate

S501-20 – Loss of Seat Memory Reprogram

S501-23 – Customer intermittently locked out of vehicle after closing

303-57 – Loss of Engine Performance

303-58 – Check Engine MIL – V8 XJ series/XK

303-59 – Chirping Noise from Accessory Drive Belt

303-61 – Fuel Vapor odor in interior – Conv. top models only – V8 XJ Series/XK

307-02- Driveline Clunk/Knock When Downshifting

307-06- Harsh Transmission shifts

TECHNICAL BULLETIN'S COVERED UNDER SELECT EDITION:

307-10- Supercharged Engine (W5A580 Transmission)

501-58 - Head Restraint inoperative – XK VIN A11051-A48682

JTB00029 – Hydraulic Fluid Leak from Convertible Header Rail

JTB00071 – Harsh Transmission Shifts

JTB00072 – Transmission MIL illuminated with DTCs