

POSSIBLE CAUSES
Fuel cap off
Fuel cap seal defective
EVAP system leak (canister damage, pipework damage)
EVAPP valve to ECM drive circuit open circuit, short circuit, high resistance
EVAPP valve power supply circuit open circuit
EVAPP valve to engine purge pipe damaged / blocked / leaking
EVAPP valve operating vacuum hose leak / blockage
EVAPP valve failure
Fuel tank leak