

WARRANTY

Workshop Procedure

CAUTION : a Jaguar Land Rover-approved Midtronics battery power supply must be connected to the vehicle battery during SDD diagnosis/module programming.

CAUTION : ensure all ignition 'ON'/ignition 'OFF' requests are carried out; failure to perform these steps may cause damage to control modules in the vehicle.

NOTE : SDD must be loaded with DVD143.03 v.218 or later.

NOTE : the Engine Control Module (ECM) may also be referred to as Powertrain Control Module (PCM).

1. Connect the Jaguar Land Rover-approved Midtronics battery power supply to the vehicle battery.
2. Turn ignition 'ON' (engine not running).
3. Connect the Symptom Driven Diagnostics (SDD) system to the vehicle and begin a new session.
4. Follow the on-screen prompts, allowing SDD to read the VIN and identify the vehicle and initiating the data collect sequence.
5. Select 'Diagnosis' from the Session Type screen.
6. Select the 'Selected Symptoms' tab, and then select the following:
 ^ Powertrain > Engine system > Engine performance
7. Select the 'Recommendations' tab.
8. Read and close any publication from the list of recommended candidates to expose the 'Extras' tab.
9. Select the 'Extras' tab.
10. From the list of recommended candidates, select Run to perform the 'Configure existing module - Powertrain control module' option.
11. Follow all on-screen instructions to complete this task, ensuring all DTCs are cleared.
12. Exit the current session.
13. Disconnect the SDD and the battery power supply from the vehicle.