

- 1 Side Marker LED GND
- 2 Side Marker LED + (>1) JNC D/12 F25/5 LH Position Lamps
- 3 Indicator LED + (>12)
- 4 Static Bending Lamp LED + (16) JNC D/4 Cornering Light LH
- 5 Level Motor + (>6) JNC D/19 F23/5 AFS Headlamp Levelling
- 6 Level Motor GND
- 7 Level Motor Control Signal
- 8 **Battery. Permanent live.**
- 9 Xenon DIP Beam GND
- 10 Main Beam Flap (>12) JNC D/28 Main Beam LH
- 11 Xenon DIP Beam + (>9) JNC D/38 DIP Beam LH
- 12 Indicator LED + Main Beam Flap GND
- 13 AFS Motor Control Signal
- 14 AFS Motor + (>15) JNC D/40 F50/5 LH Headlamp Motor
- 15 AFS Motor GND
- 16 Static Bending Lamp LED GND

X351 headlamp adapter cable
LH shown, RH similar

Where a pin is not connected a waterproof bung must be fitted to close the way.
Diodes SB540 or similar, Relays rated for min 15A @ 13.5V

Search JaguarForums.com for "xdave X351 2016 LED headlamp retrofit" for more details, parts lists, etc.

WARNING – Untested, for information only. No fitness for any purpose is implied or guaranteed.

- 1 nc
- 2 nc
- 3 Indicator LED + (>12)
- 4 LB Command JNC D/38 O Dipped Beam Signal LH
- 5 Dynamic Levelling Motor IGN (>6) JNC D/19 F23/5
- 6 Dynamic Levelling Motor GND
- 7 Dynamic Levelling Motor DCM
- 8 SIG PWR JNC D/28 O Signal Power LED Driver LH
- 9 Lighting GND
- 10 HB Command (>10) JNC G/27 Mainbeam Shutter LH
- 11 Battery JNE D/3 F22/15 ??permanent??
- 12 Indicator LED + SIG GND
- 13 Dynamic Bending Lamp Motor LIN
- 14 Dynamic Bending Lamp Motor IGN (>15) JNC D/40 F50/5
- 15 Dynamic Bending Lamp Motor GND
- 16 LED LIN Bus JNC E/3 LIN_5

