

## Interior Trim and Ornamentation - Rear Door Trim Panel

Removal and Installation

### Removal


#### NOTES:



Removal steps in this procedure may contain installation details.




RH illustration shown, LH is similar.

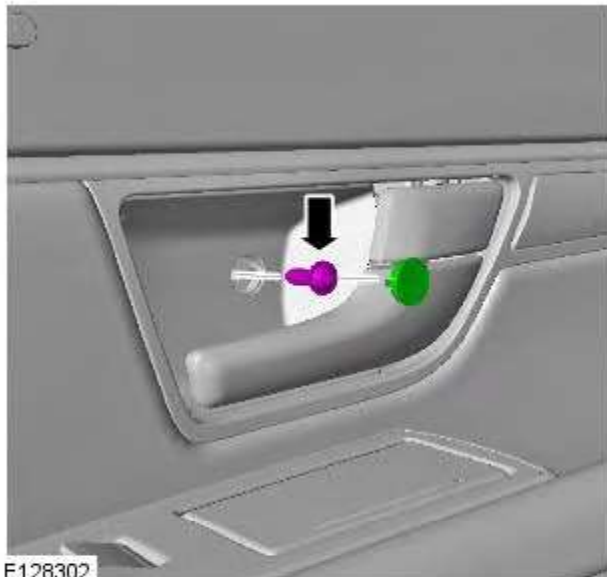

E128302


1. Torque: 3 Nm

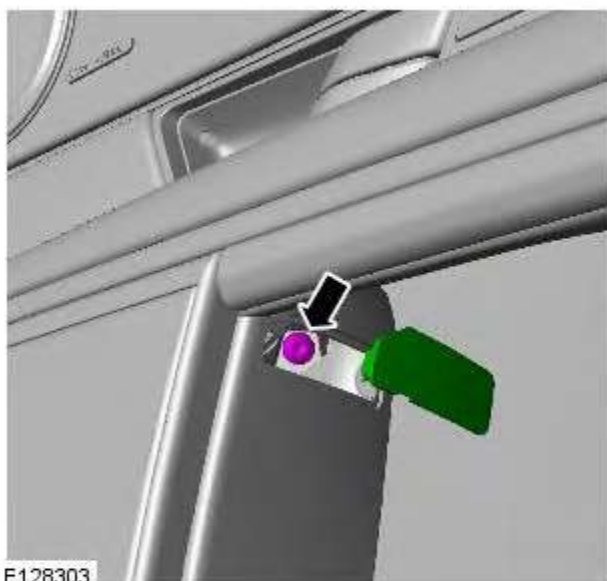


E128303

2. Torque: 6 Nm

3. Torque: 6 Nm

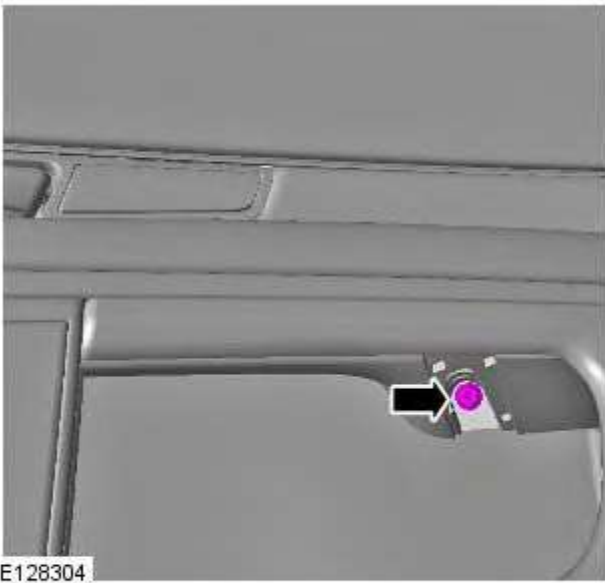

4.

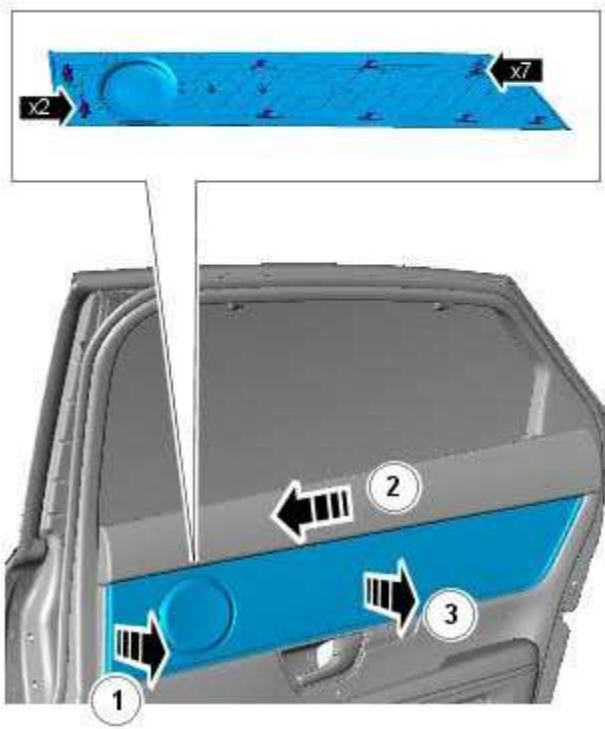

E128305

5. Torque: 3 Nm




E128309

6.




E128310

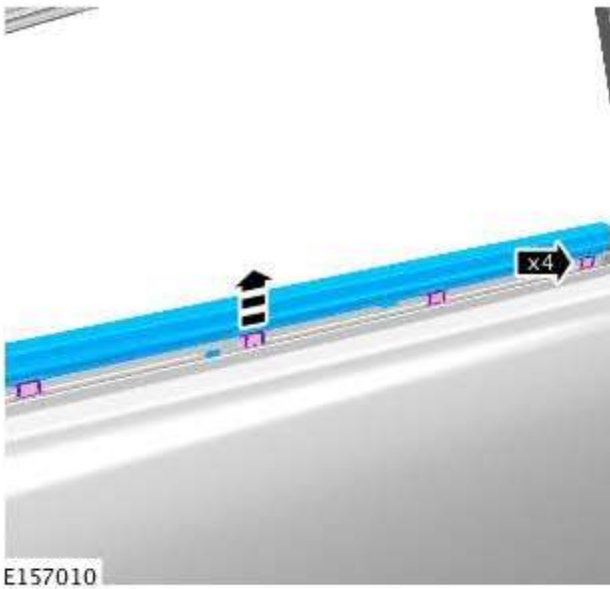


7.  CAUTION: Take extra care not to damage the component.

 NOTE: For vehicles with electric rear door blind.

8.

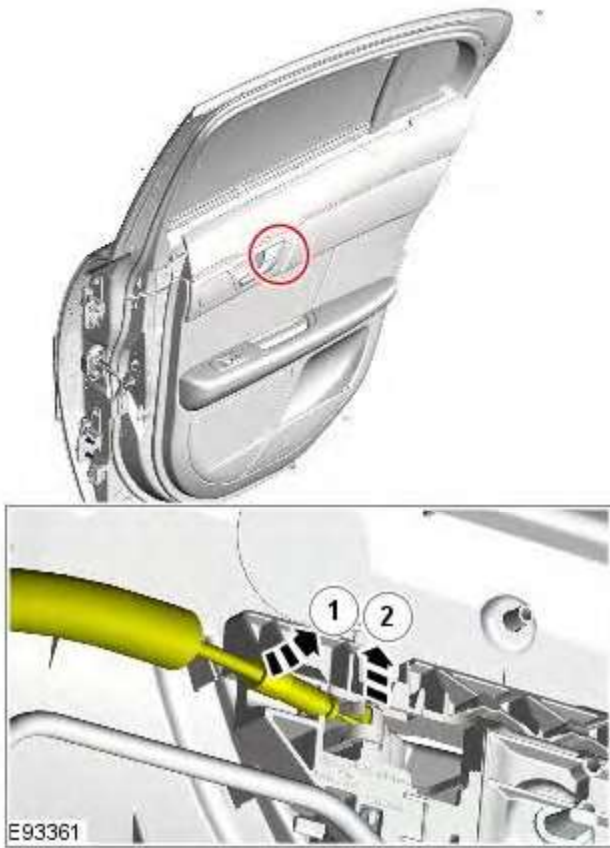


9.

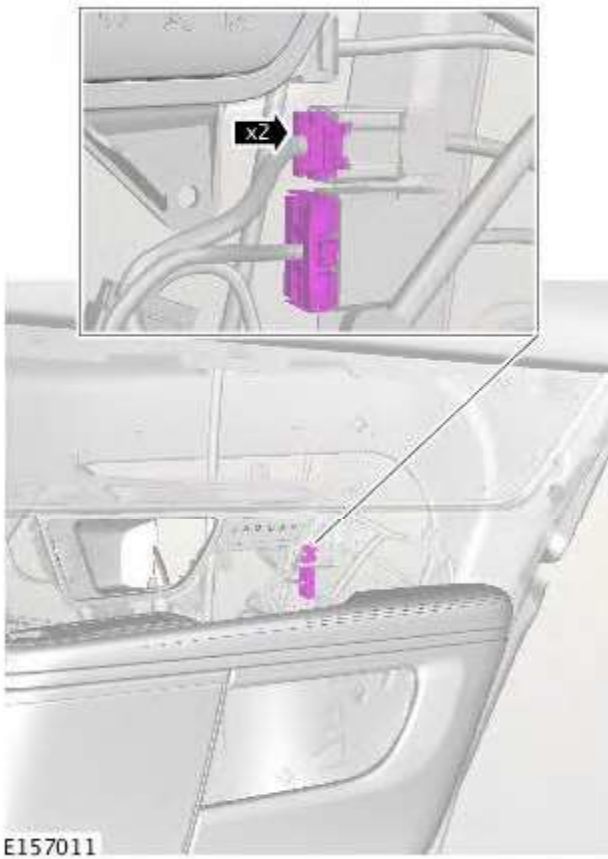

10.







11.  NOTE: Do not disassemble further if the component is removed for access only.



12. Torque: 3 Nm

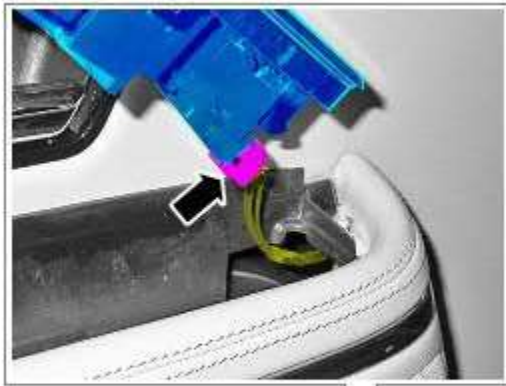


- 13.

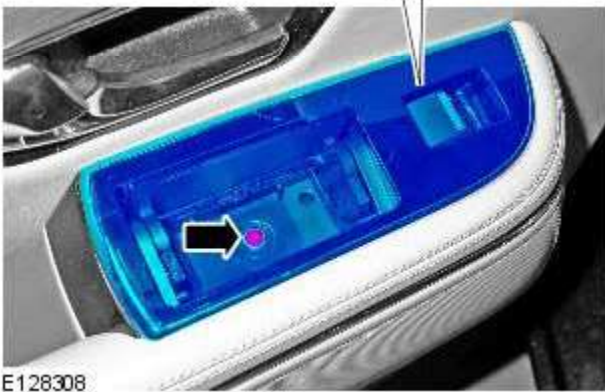





14. Torque: 3 Nm

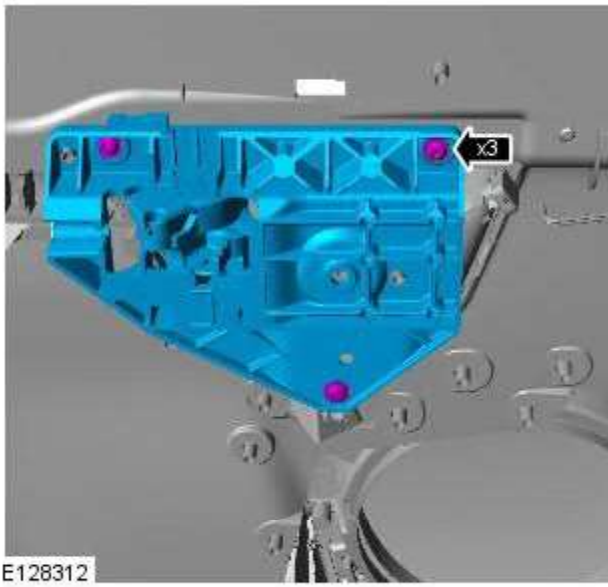


15. Torque: 3 Nm

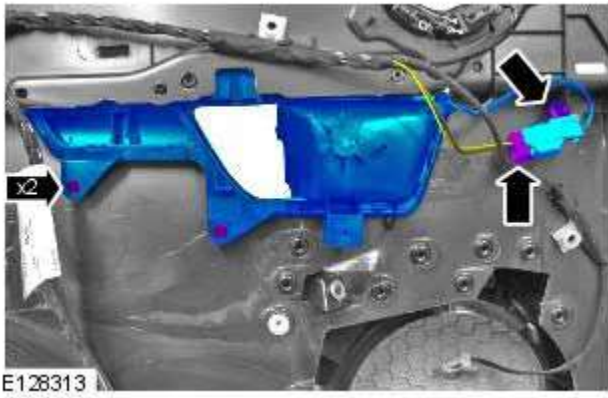

16.

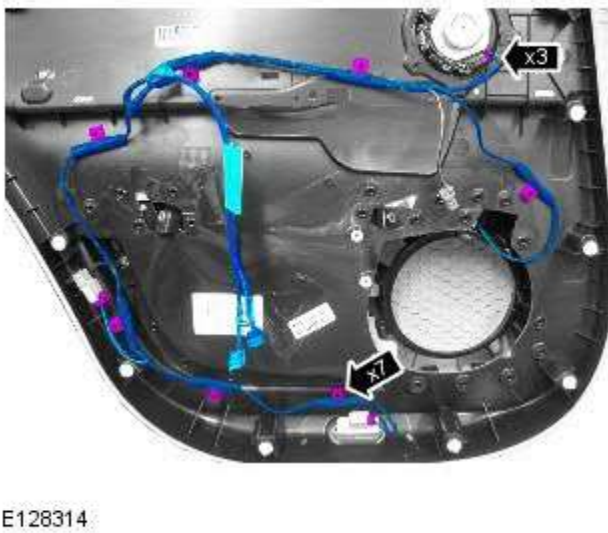

17.

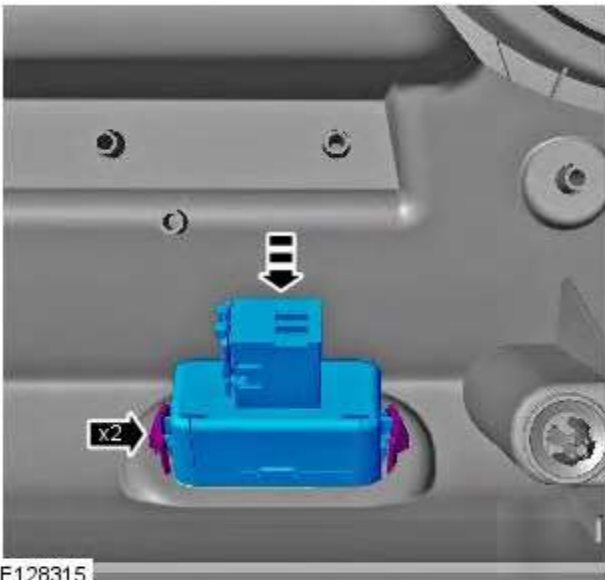

E128315

18. Torque: 5 Nm



E128316



19.



E128317

20.



E128318

## Installation

1. To install, reverse the removal procedure.


## Interior Trim and Ornamentation - Rear Scuff Plate Trim Panel


Removal and Installation


### Removal



NOTE: Removal steps in this procedure may contain installation details.

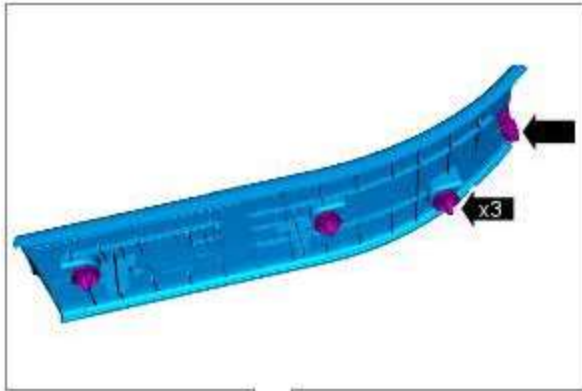

1.  CAUTION: Make sure that the clips are correctly located.

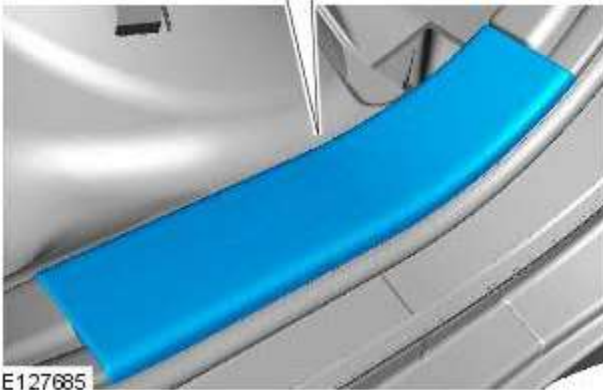

### Installation

1. To install, reverse the removal procedure.