

# Handles, Locks, Latches and Entry Systems - Exterior Front Door Handle

Removal and Installation

## Removal


### NOTES:




Removal steps in this procedure may contain installation details.




Some variation in the illustrations may occur, but the essential information is always correct.


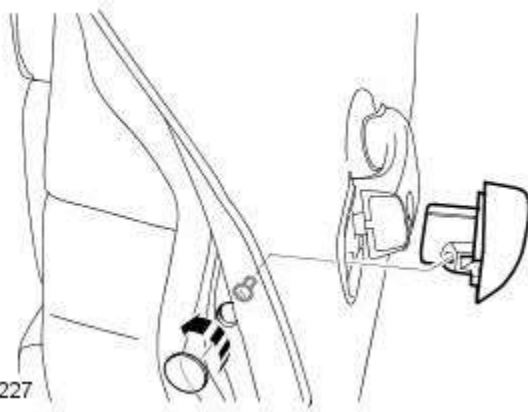


1.  NOTE: Remove the screw sufficiently, only to release the component.


*Torque: 4 Nm*

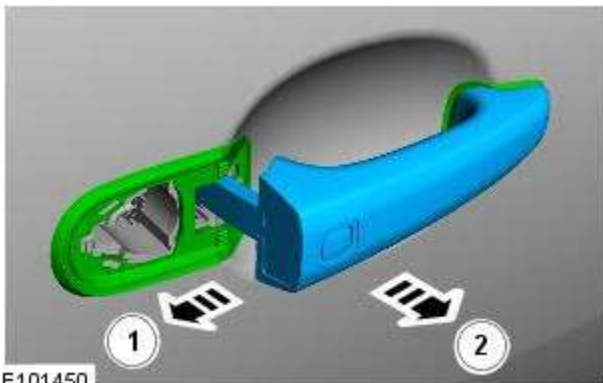

- 2.

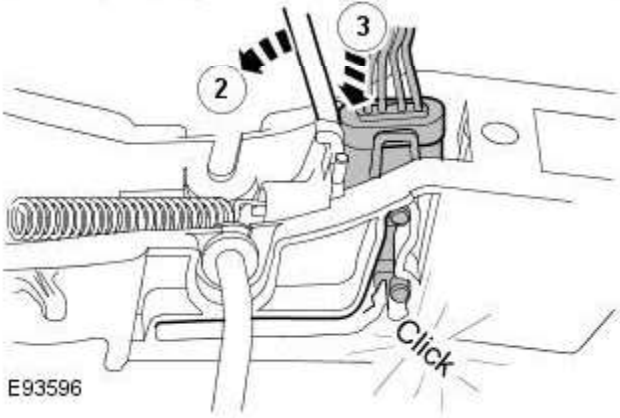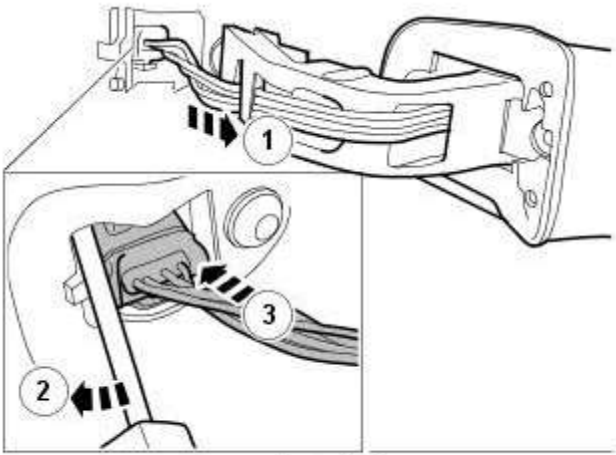

E93596

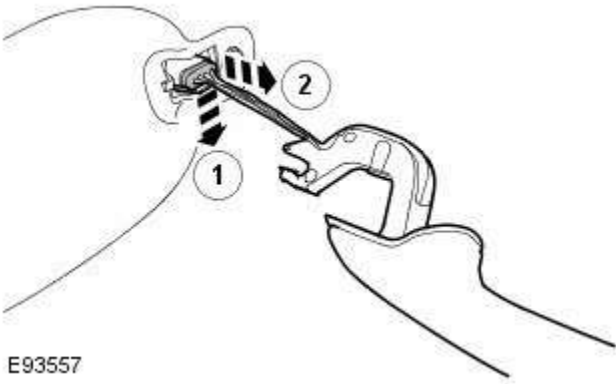


E93557

3.  **CAUTION:** Take extra care not to damage the wiring harnesses.

 **NOTE:** Secure the connection in the service position.

4.

## Installation

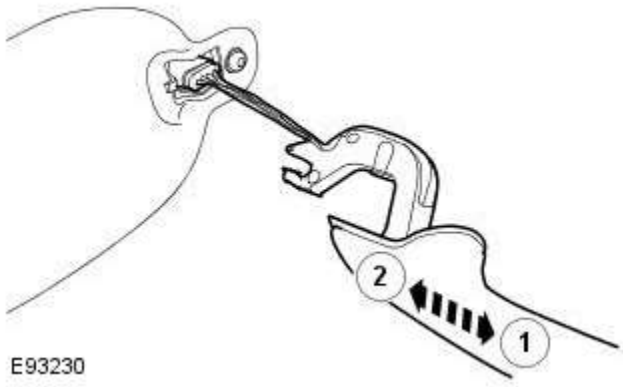

1.  **CAUTION:** Make sure that the wiring harnesses are correctly located.

To install, reverse the removal procedure.

# Handles, Locks, Latches and Entry Systems - Exterior Luggage Compartment Lid Release Switch

Removal and Installation


## Removal




NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Rear Bumper Cover](#) (501-19 Bumpers, Removal and Installation).

2.

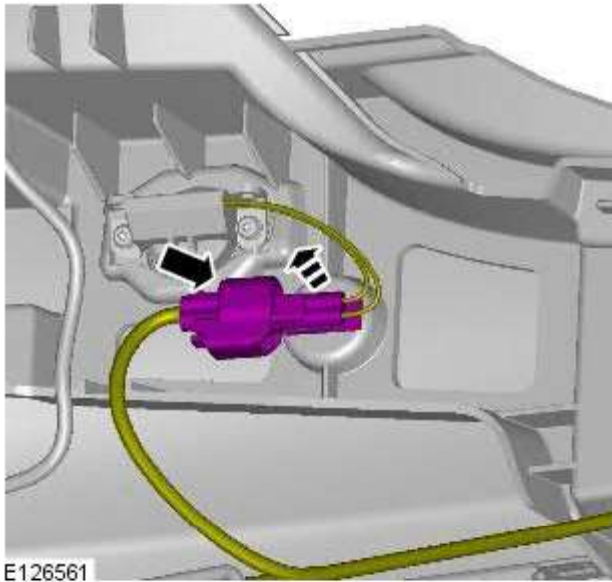

3. Torque: 1.5 Nm

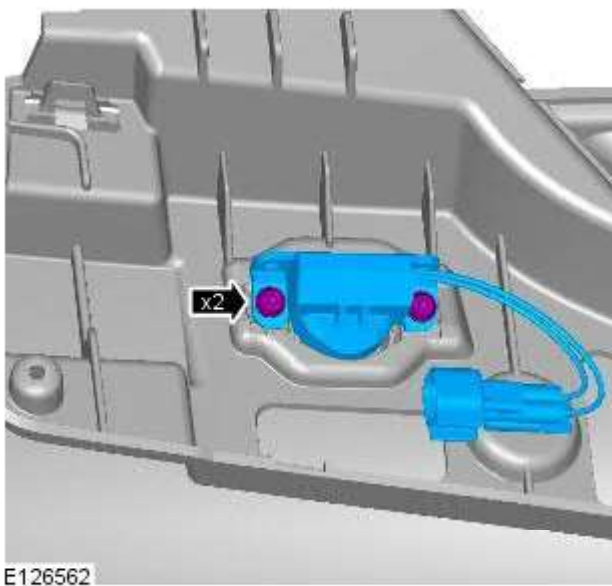

## Installation

1. To install, reverse the removal procedure.