


# Auxiliary Blower Motor Resistor

## Removal


1. Remove the floor console.  
For additional information, refer to Floor Console - Vehicles With: Auxiliary Climate Control (76.25.01)

2. Disconnect the blower motor resistor.

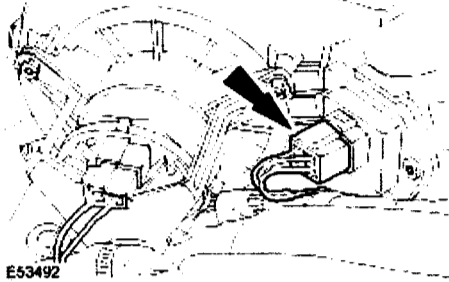

3. Remove the blower motor resistor.

- Remove the blower motor resistor retaining screw.

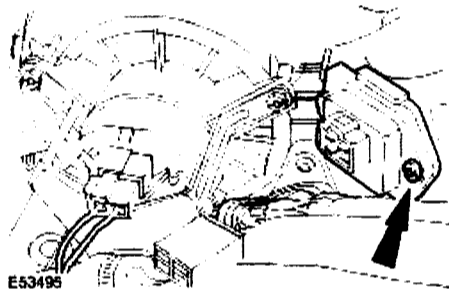

## Installation

1. To install, reverse the removal procedure.