


Steering Column Multifunction Switch LH (86.65.78)

Removal

1 Remove the steering column lower cowl.


▶ Remove the 2 screws.

▶ If installed, disconnect the steering column and foot pedal control switch electrical connector.

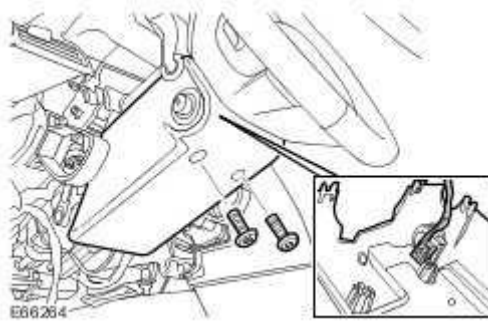


2 . Remove the steering column upper cowl.

▶ Remove the 3 screws.

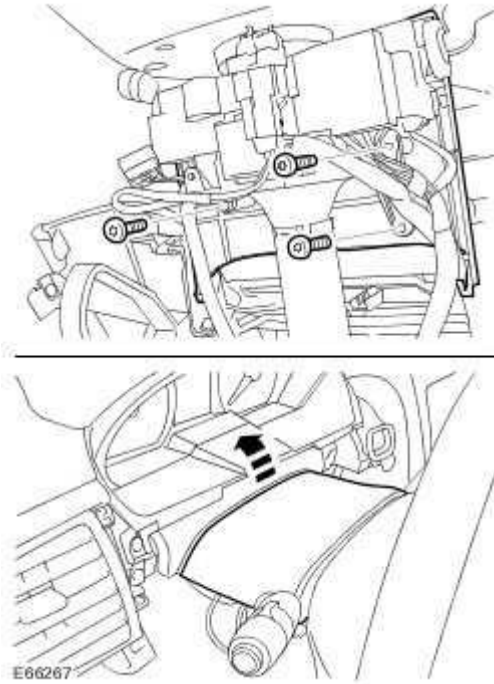

3 . Remove the steering column multifunction switch.

- ▶ Depress the 2 clips.
- ▶ Disconnect the electrical connector.

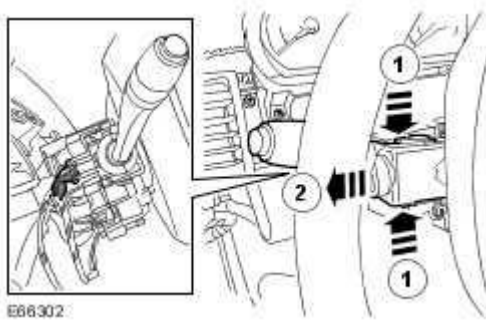

Installation


1.  **CAUTION:** Make sure the electrical harness is not trapped during the installation.

To install, reverse the removal procedure.


Steering Column Multifunction Switch RH (86.65.41)

Removal


- 1 . Remove the instrument panel lower trim.

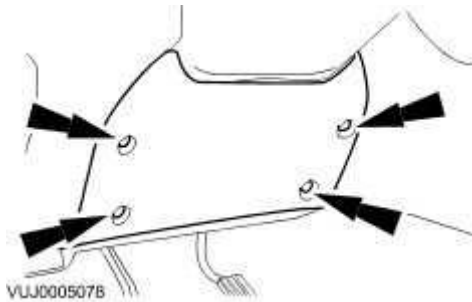


- 2 . Detach the steering column lower shroud.

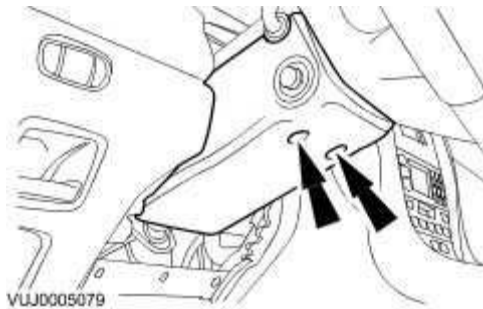


- 3 . Remove the steering column upper shroud.

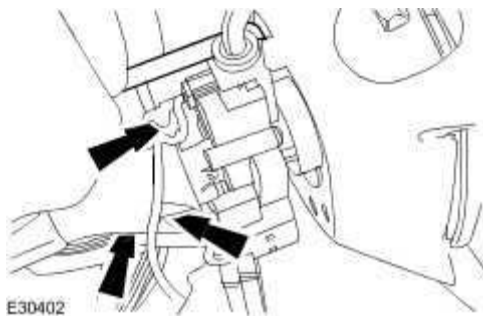

- 4 . Disconnect the steering column multifunction switch RH electrical connector.

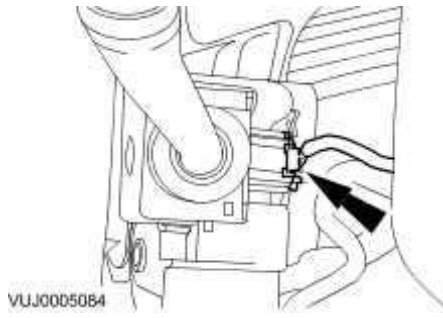

5 . Remove the steering column multifunction switch RH switch.

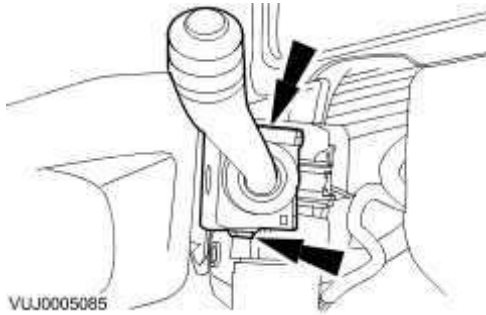

Installation

1 . To install, reverse the removal procedure.

2 . Tighten to 3 Nm.

