

1-6 Introduction



JOL2022a


Menu

Pressing the **MENU** perimeter button will display the system menu screen.

The screen display can be blanked out by touching the **Screen Off** button.

Touch the screen, or press any of the perimeter buttons, to restore the display.

Alternatively, the Jaguar logo can be displayed by touching the **Logo Screen** button.

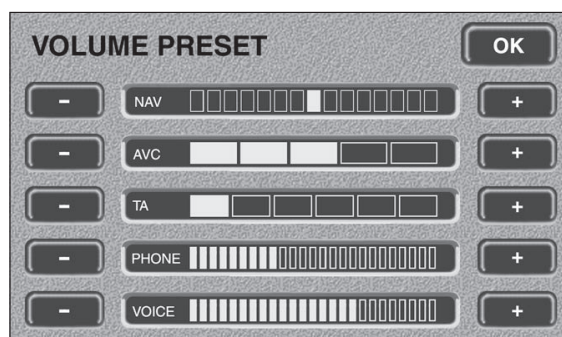

JOL1640

Volume Preset

After touching the **Volume** button, the screen displays the buttons for adjustment of volume associated with the navigation system, JaguarVoice, telephone, traffic announcements and automatic volume control (AVC). Adjustment of AVC varies the rate at which volume is increased or decreased relative to vehicle speed.

Touch and hold the '+' or '-' button to adjust the volume of the selected function.

Note: If any of the volume slides are adjusted to the fully '-' position, then the volume is turned fully off.

Confirm your selection by touching **OK**.



JOL2555

Brightness/Contrast

After touching the **Brightness/Contrast** button, the screen displays the buttons for adjustment of the screen display characteristics. The centre window shows the currently selected navigation view.

Touch the '+' or '-' button to adjust the selected function.

Screen brightness and contrast can also be dimmed for night driving.

This is achieved either manually via the **Day**, **Night** or **Twilight** buttons (independent of the exterior light switch position), or automatically via the **Auto** button (controlled by the exterior light switch position).

Touch the **Default** button to restore the default settings.

Confirm your selection by touching **OK**.