

Guide to Jaguar XJ8 air suspension compressor removal

Removing the Wabco air suspension compressor: This is a guide for Jaguar XJ6, XJ8, XJR X350, Some models may differ slightly.

It is important to be aware of all necessary safety measures while working on your air suspension system. This includes proper lifting and immobilizing of the vehicle if required and isolation of any stored energy to prevent personal injury or property damage.





Basic steps to remove the compressor


1. The Compressor is located on the vehicles LH side behind the Front Bumper
2. Raise vehicle to remove the bumper shroud and driver's side fender well shroud (it may not be necessary to remove the entire fender well shroud) Figure A.



3. Disconnect the two (2) electrical connectors, air inlet hose and air outlet tube fitting (Figures B and C).

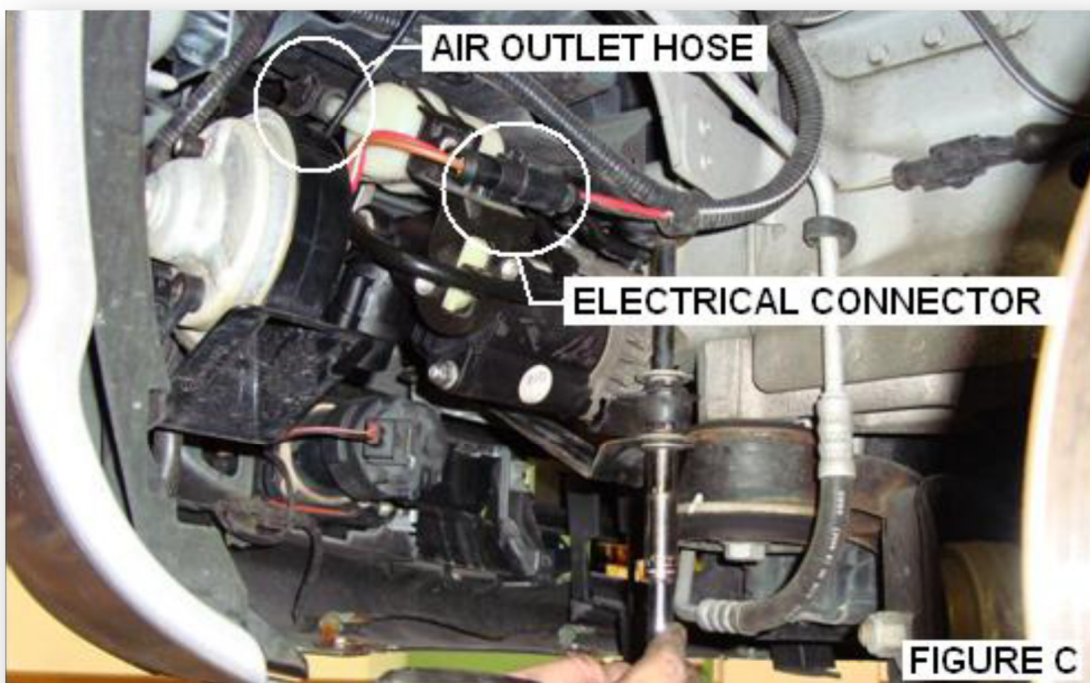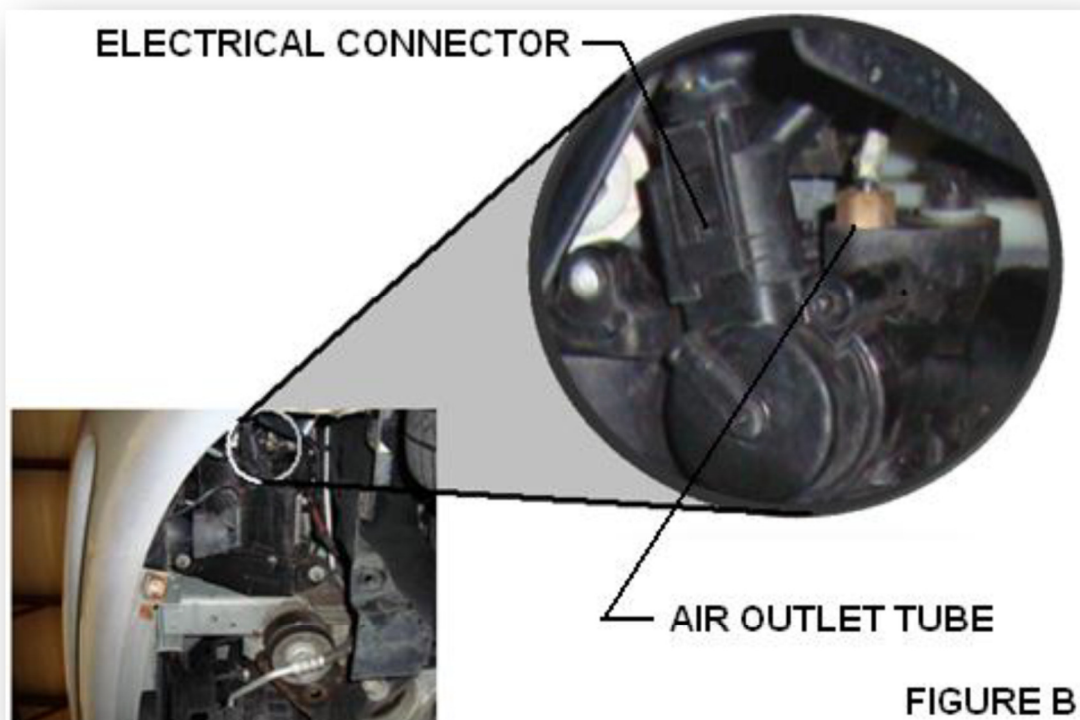

4. Remove the three (3) nuts securing the compressor to the mounting bracket and remove compressor (Figure D).

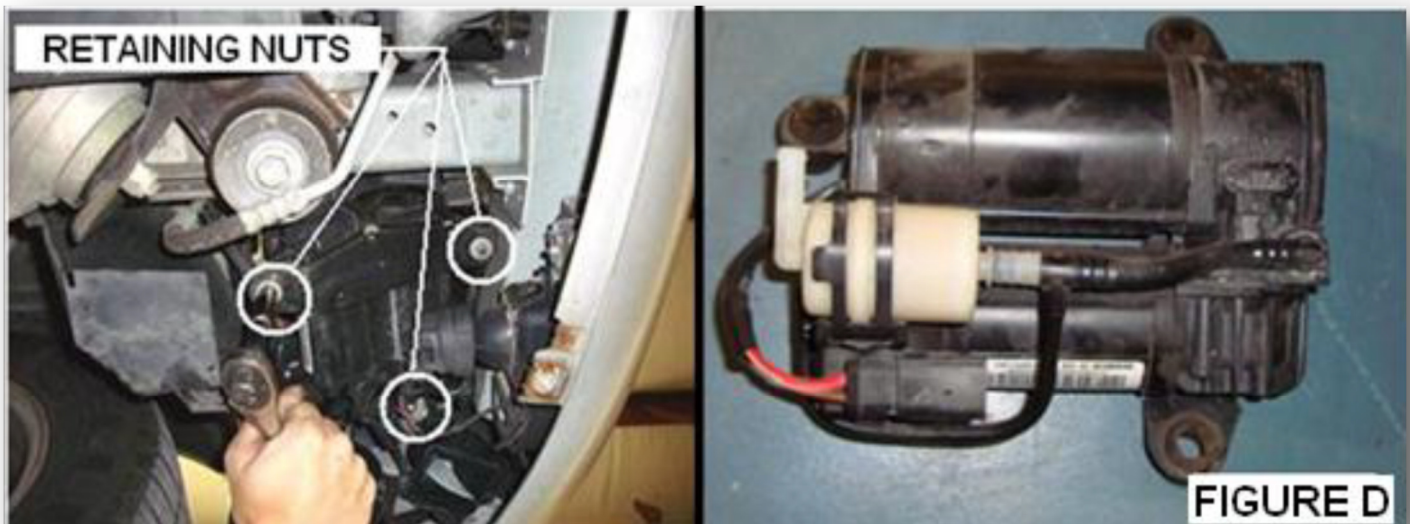

NOTE: TO RELEASE AIR TUBE(S), PRESS DOWN ON THE QUICK RELEASE FITTING COLLAR, WHILE PULLING OUT AIR TUBE(S)

5. Disconnect the two (2) air tubes from the compressor and remove the two (2) screws securing the

