



## Rear Seat Cushion 76.70.37

### Removal

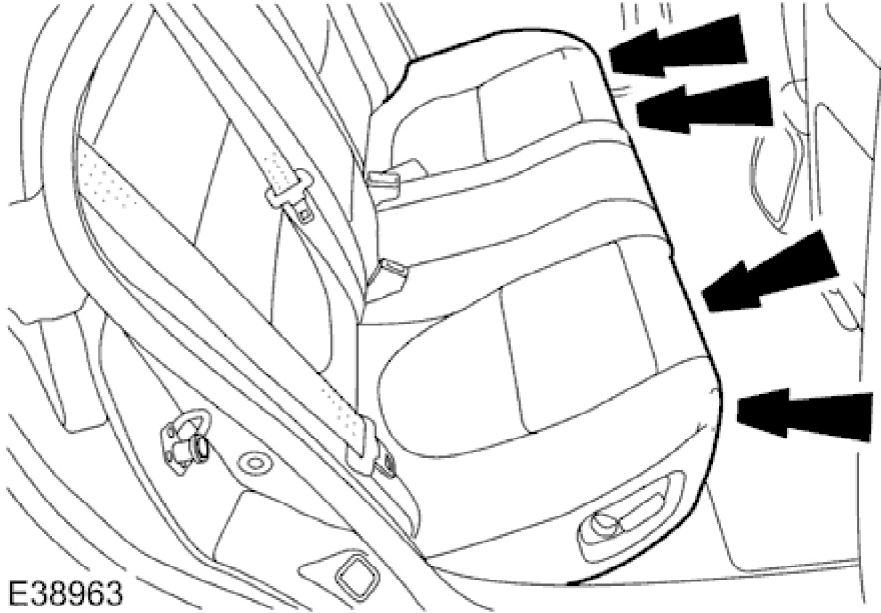


E38963

1. Detach the rear seat cushion.
  - Release the rear seat cushion retaining clips.

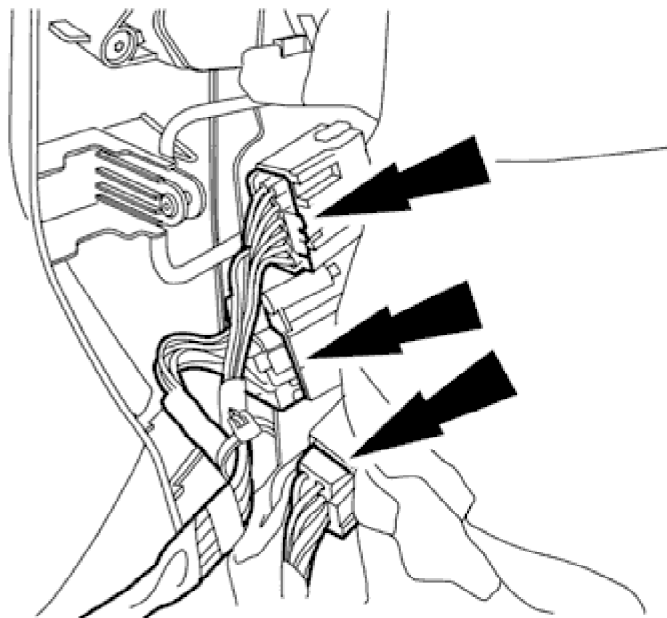

E38964

2. **NOTE:**  
Right-hand shown, left-hand similar.  
Disconnect the rear seat cushion electrical connectors.

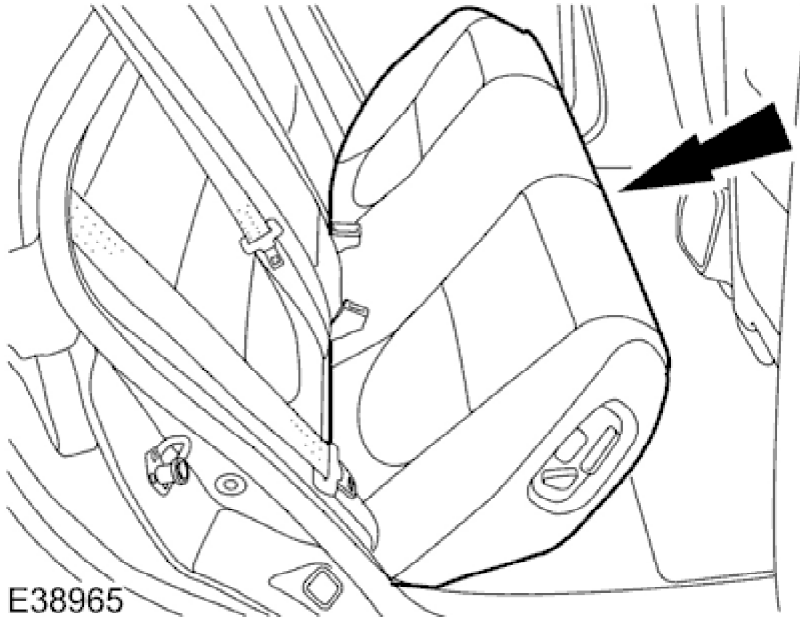

E38965

3. Remove the rear seat cushion.

### Installation

1. **NOTE:**

Make sure the rear seat cushion is correctly located under the rear retaining brackets.

To install, reverse the removal procedure.