


- When the Navigation does not operate normally (nothing appears on the display when the engine is started):

Press in the following order: [NAV] → [▲] → [NAV] → [▲] → [AUDIO] → [AUDIO]

The diagnosis menu screen appears on the display.

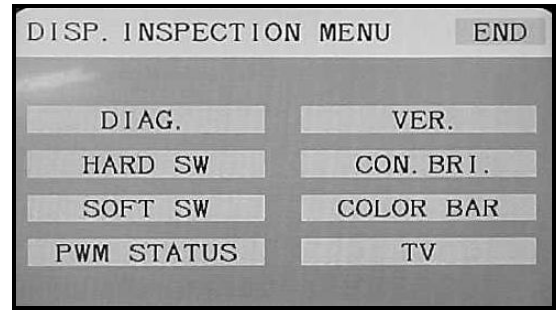


EA6101

<Reference>

Perform the operation described above when a code appears on the compact LCD display.

It is used when only the power to the display panel is turned ON, such as when there is a communication error.

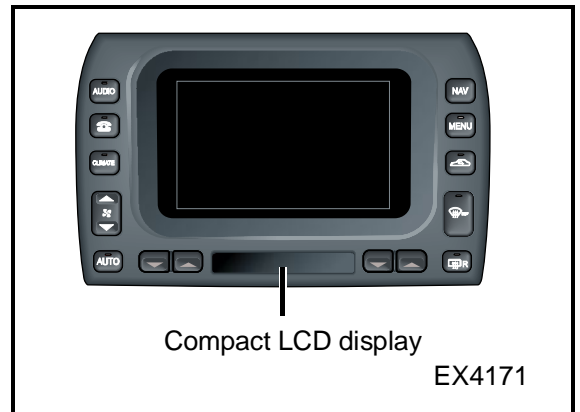


Compact LCD display

EX4171

[Displayed Diagnosis Screen]

1) DIAG.

Tests the system and shows the test results.

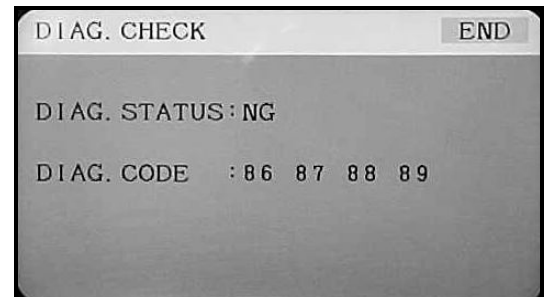

EA6103

2) HARD SW

Checks the operation of the hard switches. When the hard switches located on the right, left, and bottom of the display panel are pressed, the color of the corresponding graphic switch on the screen changes.



EA6104