


Audio System

Switchpack - Audio Mode

The switchpack fitted within the rear armrest forms the main control centre for the RSE system.

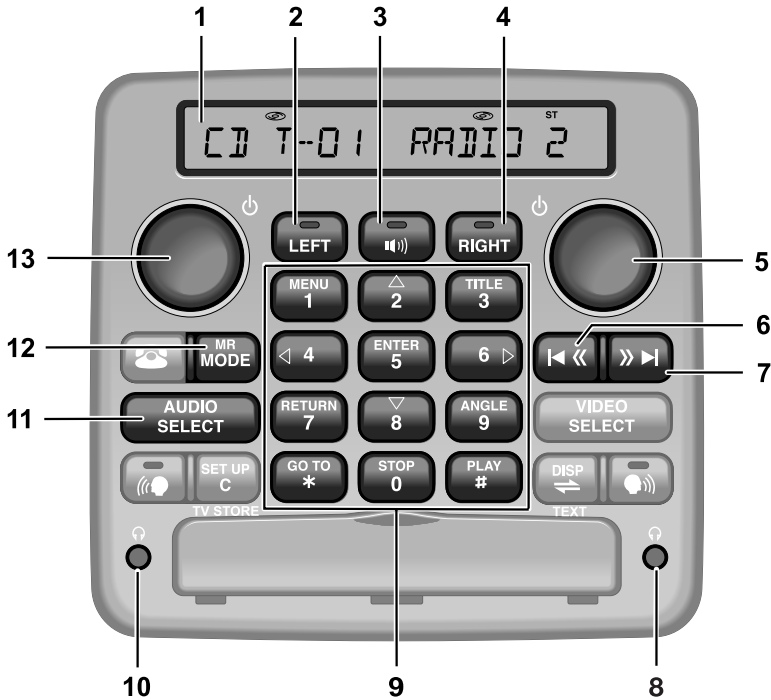

JAG0594

The Audio functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right headphones as priority.
5. Power On/Off and volume control.
6. Skip/seek down/review.
7. Skip/seek up/cue.
8. Right passenger headphone socket.
9. 12-digit numerical keypad.
10. Left passenger headphone socket.
11. Audio source select.
12. Bass, Treble and Balance options.
13. Power On/Off and volume control.


Audio System



Switching On



To switch on the RSE system ensure that the ignition is switched to position **I** or **II** (or the engine is running), then press either the left (**13**) or right (**5**) rotary control (refer to switchpack illustration on page 14).

Note: *If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the RSE system has been locked from the audio head unit allowing control only from the front. Please refer to Owner's handbook for information on switching the RSE controls on or off.*



Control Priority

Operation of the various functions listed later in this section are affected by your choice of output priority. To make changes to the audio system as a whole first, press the  button to select cabin mode and change the settings for the entire cabin.

To change the audio settings for the left or right rear passenger headphones (where fitted) first, press either the  or  button. The headphone sockets are shown as **10** and **8** on the switchpack illustration, page 14. The area that will be affected by your choice of volume level is indicated by the Red light illuminated on the chosen switch.

Note: *To improve audio performance via the headphones, switch off the rear cabin speakers by pressing and holding the  button whilst in headphone mode. To switch the speakers back on press and hold the  button.*

Audio Source

Select the desired audio source using the  button. Press the  button repeatedly in short presses until the desired source is shown on the switchpack display screen. You will be able to select from the tuner (AM/FM etc.), CD (depending on which option has been fitted), CD changer (where fitted) as well as the DVD player or auxiliary inputs.

Volume

Rotate the rotary volume control (shown as **5** and **13** on the switchpack illustration, page 14) to select the desired volume level which will be shown on the switchpack display screen.


When in cabin mode using either volume control will increase/decrease the volume level. With headphones connected (where fitted) the left and right volume controls will alter the volume for the left and right headphones.




WARNING:

Ensure that the volume level is moderate when using headphones, as excessive volume levels can cause hearing damage.

Mute

If JaguarVoice is **not** fitted, the  button will act as a mute button.

To mute audio press the  button.

Audio System

Balance and Tone

To refine the selected sound source, press the **MR MODE** button to scroll through bass, treble and balance options whilst using the optional headphones. When listening to the selected sound source through the cabin speakers you can scroll through the additional options for adjusting Fade, SUB and DSP.

The adjustment mode will be displayed on the switchpack display screen and can then be adjusted by turning the volume control knob up or down.

Further information on these settings and their effects can be found in the Audio Systems or Touch-screen Display Handbook.

Tuner Controls

Band selection

To select the required band (AM, FM etc), press the **AUDIO SELECT** button repeatedly in short presses until the desired band is displayed.

Note: Only one band can be selected for all audio outputs. It is not possible to select different bands for the front and rear.

Preset station selection

To select a preset station press and release the desired preset number on the numerical keypad (shown as **9** on the switchpack illustration, page 14). The system can recall up to nine stations for FM and nine stations for AM.

Note: Storing frequencies can only be carried out from the audio head unit, please refer to the Owner's Handbook for further information.

Manual tuning

To manually tune to a station, press and hold either the **»|** button or **|«** to seek up or down to the next available station.

RDS

The settings and control of RDS are accessed from the audio head unit. Please refer to the Owner's Handbook for further information.

CD and CD Changer

Playing/stopping a CD

Ensure that your CD or CD changer magazine (where fitted) is correctly inserted. For more information please refer to the Owner's Handbook.

Once the CD or CD changer magazine has been inserted, press the **AUDIO SELECT** button repeatedly until **CD** or **CDC** (as required) is selected. Once selected the chosen disc will play automatically.

To stop playing the disc select another audio source.

Fast forward/rewind

Whilst the disc is playing, press and hold the **»|** button to fast forward, and the **|«** button to rewind.

Random track and repeat functions

It is not possible to select or cancel the random track select or repeat functions via the switchpack. Random track select and/or repeat must be set/cancelled via the audio head unit, please refer to the Owner's Handbook for further information.

Audio System

CD changer random disc and disc repeat functions

It is not possible to select or cancel the random disc select or disc repeat functions via the switchpack. Random disc select and disc repeat must be set/cancelled via the audio head unit, please refer to the Owner's Handbook for further information.

Note: *If another disc is manually selected random disc select will be cancelled.*

CD changer direct disc select

When in CDC mode to manually change to another CD from those inserted in the CD changer, input the desired disc number using the numerical keypad (shown as **9** on the switchpack illustration, page 14).

Eject

It is not possible to eject a CD or CD changer cassette via the switchpack.

Pause


It is not possible to pause a CD manually via the switchpack.

Audio System

Note: *For further information and explanation of the subjects covered in this section it is recommended that you read the Owner's Handbook.*

DVD/VCD Player

Switchpack - DVD/VCD Mode

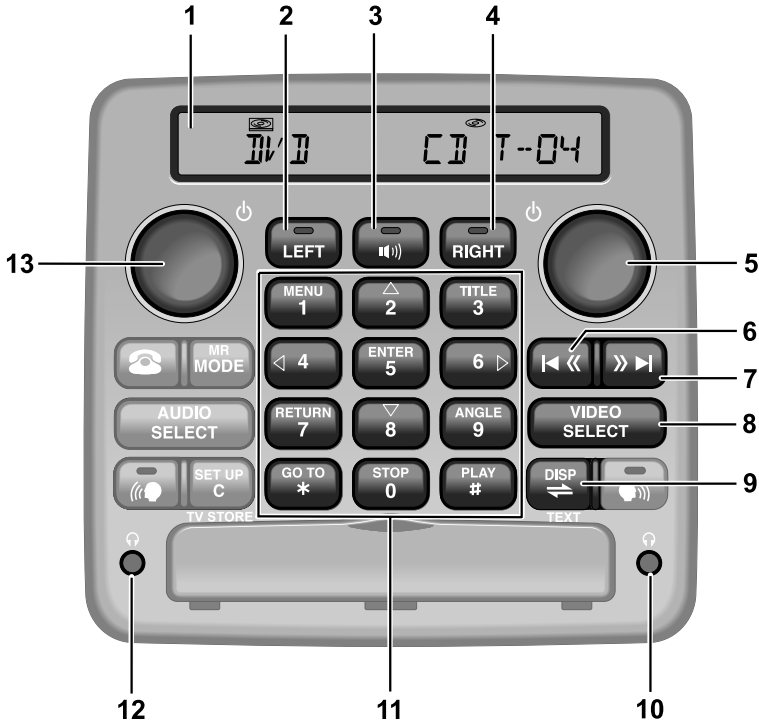

JAG0614

The DVD functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left screen/headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right screen/headphones as priority.
5. Power On/Off and volume control.
6. Skip/seek down and reverse/rewind.
7. Skip/seek up and forward/fast forward.
8. Select video source.
9. Switch between **PAL** and **NTSC** formats.
10. Right passenger headphone socket.
11. 12-digit numerical keypad.
12. Left passenger headphone socket.
13. Power On/Off and volume control.

DVD/VCD Player

Switching On


To switch on the RSE system ensure that the ignition is switched to position **I** or **II** (or the engine is running), then press either the left (**13**) or right (**5**) rotary control (refer to switchpack illustration on page 18).

Note: If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the RSE system has been locked from the audio head unit allowing control only from the front. Please refer to the Owner's Handbook for information on locking/unlocking.


Caution: When rear seat passengers are entering or leaving the vehicle it is important that they do not hold the head rest to ease entry/exit. This may damage the Video Display Screens.




1. The Video Display Screens fitted to the rear of the front seat head restraints are **NOT** touch-screens. Avoid contact with the screen wherever possible.
2. It is not possible to remove the front seat head restraints from the seat assembly.
3. Only clean the screens using the Jaguar approved cleaning materials available from your Jaguar Dealer.

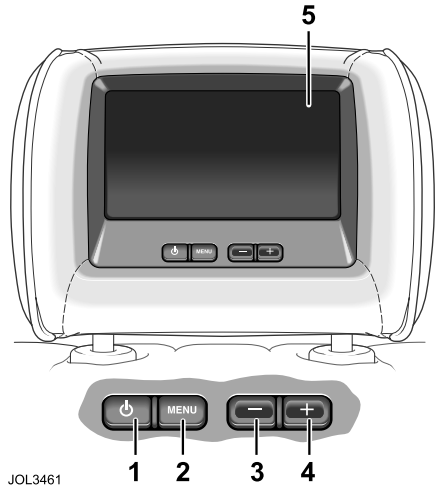Video Display Screens



1. Power On/Off (LCD screen).
2. Select on-screen menu (for display options).
3. Decrease/left. Used to navigate on-screen menu (for display options).
4. Increase/right. Used to navigate on-screen menu (for display options).
5. Video Display Screen.

In order to view any video source it is necessary to switch on the screen or screens as required. To do this press the  button.

Once a picture is displayed (see following information), press and hold the  button to display the on-screen menu. From this menu you will be able to adjust such settings as the brightness and contrast by using the  and the  buttons to navigate and alter the settings.

DVD/VCD Player

Note: It is recommended that the setting **AUTO** (if available) should be used for each of the options. If a setting is chosen manually ensure that it is reset to **AUTO** once the current session is finished.

Video Source Selection

Before selecting the desired video source you must select **LEFT** or **RIGHT**. If the system is already in cabin mode, or the **IR** button is pressed, **SELECT L/R** will be shown on the switchpack display. To listen to the audio for the video source selected it will be necessary to connect the headphones (using the connectors shown as **10** and **12** on the switchpack illustration, page 18).

Once the source and settings have been made for the first side chosen (left or right), the same procedure must be followed for the other side, if required.


To select a video source, press the **VIDEO SELECT** button momentarily. Press repeatedly to scroll through the options (DVD, AUX 1, AUX 2) depending on the options fitted to your vehicle.

Once the required video source is shown on the switchpack display there will be a short delay before the audio signal is heard.

Note: It is possible to select an alternative audio source to that which accompanies the video source.

DVD/VCD Player

DVD Player (where fitted)

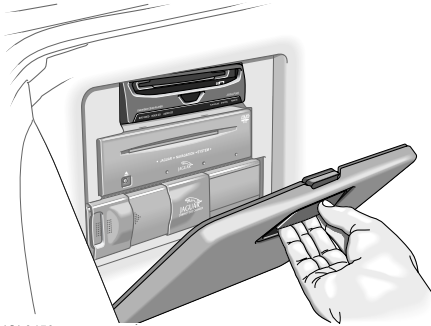

JOL3458

Note:

1. The DVD player will play 8 cm or 12 cm DVDs, Video CDs (VCDs) and audio CDs. Video CDs (VCDs) will have less options available from their menus.
2. The DVD player will only play pre-recorded discs. It is not compatible with DVD-ROMs, DVD-RAMs, CD-ROMs, recordable, re-writable, or photo CDs.

Caution: When playing a DVD for long periods it is recommended that the engine is running. Playing a DVD with the engine not running may cause the vehicle's battery to discharge, preventing the engine from starting.

Disc region codes

Most discs are coded to allow them to play only in the region in which they are sold. Some are coded to allow them to play in any region. Consult the information/packaging of your DVD/VCD disc to check for region encoding.


Note: The DVD player fitted to your Jaguar vehicle will only play discs marked with the region code for the area in which your vehicle was purchased, or discs coded for all regions.

It is not possible to play discs marked with region code 5.

If an incorrect region code disc is inserted the message **REGION CODE VIOLATION** will be displayed on the video display screen/s.

DVD/VCD Player

Inserting/Ejecting a DVD/VCD

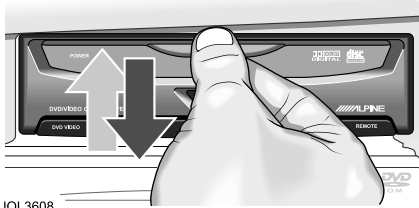

JOL3608

Note: The ignition switch must be in position I or II to insert or eject a DVD.

To insert or eject a DVD/VCD it will be necessary to open the flap covering the insertion slot on the DVD player. If the flap is already open it will be necessary to first close the flap, and then open it.


Insert the DVD/VCD into the DVD player located in the luggage compartment with the label facing upwards.

Note: When ejecting a disc there will be a delay (typically up to 7 seconds) before the disc is released. The length of the delay will depend upon the DVD players current status.

Caution: Do not use force to insert a disc into the DVD player. The player will automatically draw in the disc unless a disc is already loaded or a fault has occurred.

1. Ensure that any disc inserted into the DVD player is clean.
2. Do not expose the DVD player to moisture.
3. Do not place any device emitting a magnetic field near to the DVD player.

4. Do not insert any object other than the recommended discs into the DVD player for any reason.

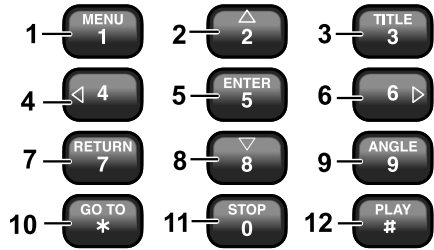

JOL3517

Additional numerical keypad functions

1. Display on-screen menu.
2. Menu navigation up.
3. Depending on disc format, displays **TITLE** menu.
4. Menu navigation left.
5. Select/enter highlighted option.
6. Menu navigation right.
7. Returns to previous display/choice.
8. Menu navigation down.
9. Switches viewing angle (depending on disc format).
10. Displays chapter or title selection menus.
11. Stops movie play.
12. Starts movie play.

DVD/VCD Player

Playing a DVD

Starting and stopping a movie

Once a DVD has been selected as the video source and a DVD has been inserted into the DVD player, press the **PLAY #** button to start the movie.

Note: Some discs may play automatically upon insertion.

To stop the movie, press and release the **STOP 0** button and **PRE-STOP** will be displayed. Provided that the DVD is not ejected, the switchpack turned off, or the ignition switched off, when the **PLAY #** button is pressed the movie will recommence from the position at which it was stopped.

If you wish to stop the movie completely, press the **STOP 0** button a second time when in **PRE-STOP**.

Note: The pre-stop function cannot be used for DVDs and VCDs with Playback Control (PBC). For DVDs and VCDs with Playback Control (PBC) when the **STOP 0** button is pressed the menu will appear.

Menus

Note:

1. Some DVDs and VCDs movies with Playback Control (PBC) will display an on-screen menu automatically as soon as **DVD** is selected if a DVD is already in the DVD player. If **DVD** has been selected but no DVD inserted then the menu may appear upon insertion of the DVD. To display the on-screen menu manually, press the **MENU 1** button.

2. DVD status and menus will be displayed on the Video Display Screen/s and not on the switchpack display.

Navigating menus

Once the on-screen menu is displayed, to navigate the menu options, press and release the **2** button to move up, the **8** button to move down, the **4** button to move left, the **6** button to move right, and the **5** button to select/enter the highlighted option.



Note:

1. The numeric keypad (shown as **11** on the switchpack illustration, page 18) cannot be used to input numbers whilst in the DVD menu.
2. Some discs may not allow access to menus at certain points during play. If this happens the invalid operation symbol **⊘** will be displayed. Normal play will resume after a few seconds.

DVD/VCD Player


 
Functions Available During a Movie

Fast forward/reverse

During a movie, press and hold the  button to fast forward, or the  button to fast reverse. During fast forward/reverse no sound or subtitles are available.

Note: *If the DVD or VCD has Playback Control (PBC) the menu screen may appear during fast forward/reverse.*


Chapter/track up and down


During a movie, press and release the  button to move forward to the next chapter/track, or the  button to move back to the preceding chapter/track.

Note: *If the DVD or VCD has Playback Control (PBC) the menu screen may appear during fast forward/reverse.*

Multiple angle views



Some DVDs are recorded from more than one angle allowing the viewer to switch between angles whilst viewing.

To switch between angles, press and release the  button.



The angle of view will change each time you press and release the  button.



Note: *There may be a delay whilst changing view angles.*



Subtitles

To show or hide the on-screen subtitles, simultaneously press the  button and the  button.

Navigating by title, chapter, time, or track number

To view the movie from a specific title number, press and release the  button. From the on-screen menu, select **TITLE** and input the number of the required title by pressing and holding each number required until the correct number is displayed. Press the  button to start playing the movie from the selected title number.

To view the movie from a specific chapter number or time, press and release the  button. From the on-screen menu, select **CHAPTER** or **TIME** and input the number of the required chapter by pressing and holding each number required until the correct number is displayed. Press the  button to start playing the movie from the selected chapter number or time.

If playing a VCD (Video CD), to view the movie from a specific track number, press and release the  button. From the on-screen menu, select **TRACK** and input the number of the required track by pressing and holding each number required until the correct number is displayed. Press the  button to start playing the movie from the selected track number.


Note:

1. *You can only navigate in this way through discs on which title, chapter or track numbers have been recorded.*
2. *You cannot search by track number when viewing a VCD that has Playback Control (PBC) enabled.*

DVD/VCD Player


 

 


Picture format

The DVD player is capable of playing DVDs or VCDs recorded in either PAL or NTSC formats.

To switch between formats, press and hold the  button (for 8 seconds)

Note: *If the incorrect format has been selected **VIDEO SYSTEM SIGNAL IS NOT CORRECT** will be displayed.*

Viewing preferences

The factory default settings for the following options can be changed by pressing and releasing the  button to enter the menu, and pressing and releasing the  button to move up, the  button to move down, the  button to move left, the  button to move right, and the  button to select/enter the highlighted option.

Language

The language used for audio output, subtitles and menus.

The factory default settings are, Audio-Original, Subtitles-Auto, Menu-Auto.

Video display screen size

The screen aspect ratio can be selected from 4:3 Letterbox, 4:3 Pan Scan and 16:9 Widescreen. The default setting is 16:9.

Country code

This is set prior to leaving the factory for the regional default value.

Rating level

This setting will restrict the movies viewable to rear passengers based on the censors age restrictions for the DVD or VCD. The default is set to **OFF**, if you require a censorship level enter the menu and choose the appropriate level.

Note:

1. *For further information on the country code and rating levels that are used in your area please consult the information supplied with your movie, or the movie vendor.*
2. *Rating level protection is not available with all DVD discs.*



WARNING:

You should ensure that when children have access to the RSE system they are supervised at all times and only view/listen to media suitable for their age group.

Down sampling

This option is set to default **ON**, changing the setting to **OFF** will have no effect on the high output quality.

Digital out

This option is set to default **AUTO**, changing the setting will have no effect on the high output quality.

LED indicator

This option will allow the indicator LEDs on the front panel of the DVD player to be switched on or off. The default setting is **ON**.

DVD/VCD Player

Custom set up


Within custom set up you will be able to turn **ON** or **OFF** the **CLOSED CAPTION** function. **CLOSED CAPTION** displays a scene description on the Video Display Screens for the hard of hearing.

Note:

1. **CLOSED CAPTION** describes background noise and should not be confused with subtitles which display dialogue.
2. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Auxiliary Inputs

Switchpack - Auxiliary Inputs

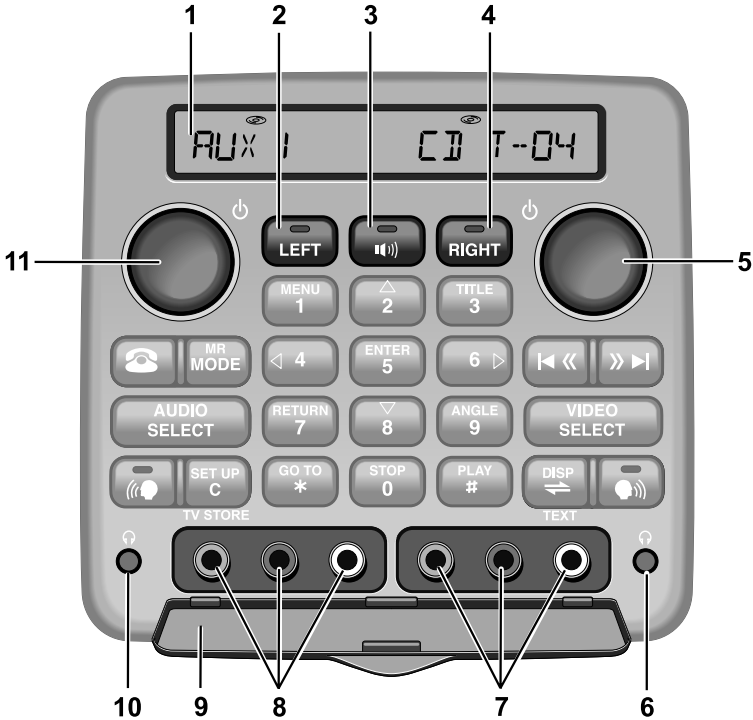

JAG0615

The switchpack fitted within the rear armrest forms the main control centre for the RSE system.

The Auxiliary Input functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Select left screen/headphones as priority.
3. Select cabin mode or mute/demute rear speakers.
4. Select right screen/headphones as priority.

5. Power On/Off and volume control.
6. Right passenger headphone socket.
7. Auxiliary sockets AUX 2.
8. Auxiliary sockets AUX 1.
9. Access flap.
10. Left passenger headphone socket.
11. Power On/Off and volume control.

Auxiliary Inputs

Auxiliary Inputs

Note: *Take care when opening and closing the access flap.*

Connecting auxiliary input devices

The two auxiliary input points (shown as **7** and **8** on the switchpack illustration, page 27) will allow separate external devices to be used by the right and left rear seat passengers, or one device can be used by both rear seat passengers.

There are three separate sockets for each auxiliary input. The White socket is for left audio channel, the Red socket is for right audio channel, and the Yellow socket is for video.

To play an audio source it will be necessary to connect the White lead for mono, or the White and Red leads for stereo. For a video source it will also be necessary to connect the Yellow lead.

Auxiliary input devices

Rear seat passengers may wish to use such devices as games consoles, personal cassette/CD/MiniDisc/DVD players, access suitable material stored on a memory stick or playback recorded film from a camcorder.

Caution:

1. **Ensure that any auxiliary input devices are suitable for use within a vehicle before using them.**
2. **Ensure that you have read and understood the warranty information supplied with any auxiliary input devices that are used.**
3. **Any auxiliary input devices that are used will require their own power source or a suitable adapter to use power from your vehicle. Power supplies, transformers, adapter leads etc. must be purchased separately and should be fitted professionally to ensure safe operation, and avoid damage to the vehicles electrical system.**



WARNING:

Auxiliary input devices may generate heat whilst operating. Do not place devices on the vehicles upholstery or carpets.

1. **Ensure that you have read the operating instructions for any input devices that are used, and follow any safety precautions that are recommended by the manufacturers.**
2. **Do not leave any auxiliary input devices where they can be seen if the vehicle is left unattended.**
3. **Do not place any auxiliary input devices in a position where they can move or cause a hazard whilst the vehicle is in motion.**
4. **Loose objects within the passenger compartment can cause death or injury in the event of an accident or sudden braking. Ensure that all auxiliary input devices are securely fixed in position.**

JaguarVoice

Switchpack - JaguarVoice Mode

The switchpack fitted within the rear armrest forms the main control centre for the RSE system.



JAG0616

The JaguarVoice functions are operated using the above highlighted buttons:

1. Switchpack Display Screen.
2. Power On/Off and volume control.
3. Activate JaguarVoice (where fitted).
4. Activate JaguarVoice (where fitted).
5. Power On/Off and volume control.

JaguarVoice


Switching On

To switch on the RSE system ensure that the ignition is switched to position **I** or **II** (or the engine is running), then press either the left (5) or right (2) rotary control (refer to switchpack illustration on page 29).


Note: If after switching on **SYSTEM LOCKED** is displayed on the switchpack display screen, the RSE system has been locked from the audio head unit allowing control only from the front. Please refer to the Owner's Handbook for information on locking/unlocking.

Entering a Voice Command


It is only possible to operate the JaguarVoice system when ignition position **II** has been selected.


Note: It is possible to enter a voice command from the rear without first switching on the RSE system. To do this press the  button. The switchpack will turn on and show **LISTENING** on the switchpack display. If the command is related to the audio system the switchpack will remain on. If not, it will shut down once the command session is completed.

In cabin mode

When in cabin mode, press the  button. The cabin speakers will be muted and **LISTENING** will be shown on the switchpack display. The voice command can now be entered. Any changes made in cabin mode will affect the settings for the cabin.

Using headphones (where fitted)

When in using headphones (where fitted), press the  button on the required side. **LISTENING** will be shown on the switchpack display and both the cabin speakers, and the headphones on the relevant side will be muted. The voice command can now be entered.

Note: The tell tale light on the  buttons will not illuminate whilst using them to enter voice commands.

Voice training

Voice training is not available from the RSE system.

Voice in use

If an attempt is made to use the voice system whilst another vehicle occupant is using the system the switchpack display will show **VOICE IN USE**.

Volume control

If the volume level is adjusted whilst operating the voice system via the switchpack the new volume level will be memorized in the audio head unit.

For further information (including a command list) please refer to the Owner's Handbook.

Index

Audio source	15	JaguarVoice	
Audio system.	14, 17	entering a voice command.	30
Auxiliary inputs		using headphones	30
auxiliary input devices.	28	voice in use	30
connecting auxiliary input devices	28	voice training	30
Balance and Tone	16	volume control	30
CD, MiniDisc and CD changer		Mute	15
CD changer direct disc select.	17	Switching on	
CD changer random disc and disc		audio	15
repeat functions	17	DVD/VCD player.	19
eject.	17	JaguarVoice	30
fast forward/rewind	16	Switchpack	
pause.	17	audio	14
playing/stopping a CD or MiniDisc	16	auxiliary inputs.	27
random track and repeat functions.	16	DVD/VCD player.	18
Control priority	15	JaguarVoice	29
DVD/VCD player	13, 21	System components	12
chapter/track up and down.	24	Tuner controls	
country code	25	band selection	16
custom set up	26	manual tuning	16
digital out.	25	preset station selection	16
disc region codes	21	RDS	16
down sampling	25	Video Display Screens	13, 19
fast forward/reverse	24	video source selection.	20
functions available during a movie	24	Volume control	
inserting/ejecting a DVD/VCD	22	audio	15
language	25		
LED indicator.	25		
menus - navigating	23		
multiple angle views	24		
navigating by title, chapter, time, or			
track number.	24		
picture format	25		
rating level.	25		
starting and stopping a movie.	23		
subtitles.	24		
video display screen size	25		
viewing preferences	25		
Introduction.	11		