



REAR SEAT ENTERTAINMENT

Publication Part No. **JJM 18 46 21 801**

This handbook forms part of the Owner literature supplied with your new vehicle. The **Quick start** section is designed to rapidly familiarise the driver with the initial set up and also explain some of the unique features. Please take the time to study the operating instructions with your vehicle as soon as you can.

Important

The information contained in this handbook covers all vehicle derivatives and optional equipment. Some of the options may not be fitted to your vehicle unless they formed part of the original vehicle specification. Therefore some parts of this handbook may not apply to your vehicle. Furthermore, due to printing cycles, it may include descriptions of options before they become generally available.

The options, hardware and software in your vehicle are from the available specifications for the market in which the vehicle was intended for sale. If your vehicle is to be used in another geographical area you may have to modify the vehicle specification to suit local conditions. Jaguar Cars Limited is not responsible for the cost of any modifications.

The information contained in this publication was correct when it went to print. Vehicle design changes may have been made after this handbook was printed. When this occurs a handbook supplement is added to the literature pack. Subsequent updates can be viewed on the Jaguar Internet site at; **www.ownerinfo.jaguar.com**.

In the interest of development, the right is reserved to change specifications, design or equipment at any time without notice and without incurring any obligations. This publication, or part thereof, may not be reproduced nor translated without our approval. Errors and omissions excepted.

© Jaguar Cars Limited 2007

All rights reserved.

Published by Jaguar Cars Technical Communications

Handbook Contents

Quick Start

Quick Start 5

Introduction

System Information 11

System Components. 12

System Operation

Audio System 14

DVD/VCD Player 18

Auxiliary Inputs 27

JaguarVoice. 29

Quick Start

Introduction

The Rear Seat Entertainment (RSE) fitted to your vehicle allows you to control all of the available audio and video signals via the switchpack fitted within the rear armrest.

The control options allow rear seat passengers to control the output for the vehicle interior as a whole, or independently for left or right headphones and video screens.

Note: For complete operation and safety information refer to the individual sections of this handbook.

Switching On



WARNING:

Do not run the engine in enclosed spaces such as a garage as there is a danger of carbon monoxide poisoning.

Ensure that the ignition is switched to position I or II (or the engine is running)


Caution: Always run the engine during prolonged use of the Rear Seat Entertainment, otherwise the vehicles battery may become discharged, preventing the engine from starting.

Operating Modes

There are two modes of operation/control:

1. **Cabin (speakers) mode** - controls the output from the speakers inside the vehicle.
2. **Headphone mode** - controls the output from the left or right headphones.

Cabin (speakers) mode

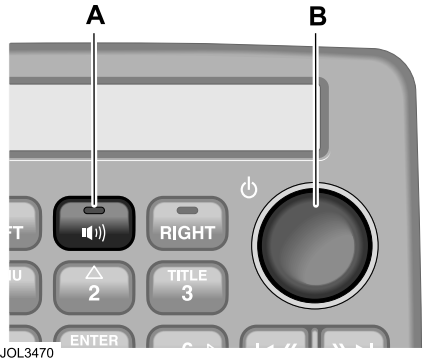

Press the rotary control (B) to switch on.

Press button (A) to select cabin mode.

When in cabin mode, all subsequent key presses on the switchpack will control the audio output to the cabin speakers.

Rotate the control (B) to alter the volume level.

When the system is in cabin mode the LED will illuminate on button (A), and the switchpack display will show a single display.


Quick Start

Headphone mode

Headphone mode controls the operation of left and right headphones (where supplied).

In headphone mode the tell-tale LED on the **LEFT** or **RIGHT** buttons (**D**) or (**F**) will indicate which side is currently being controlled. The switchpack display will be split into two - showing left and right settings.

Left headphones

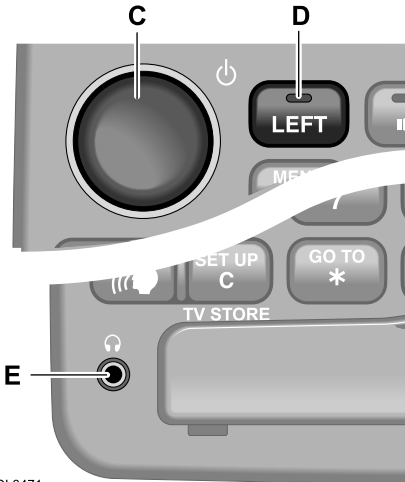

JOL3471

Plug the headphones into (**E**), the left headphone connector.

Press the rotary control (**C**) to switch on.

Press button (**D**) to select **LEFT** headphone mode.

Rotate the control to alter the volume level.

Right headphones



JOL3472

Plug the headphones into (**G**), the right headphone connector.

Press the rotary control (**B**) to switch on.

Press button (**F**) to select **RIGHT** headphone mode.

Rotate the control to alter the volume level.

Tip: Check the switchpack display and tell-tale LEDs to verify which mode the system is in.

Quick Start

System Locked

If **SYSTEM LOCKED** is displayed on the switchpack display the system has been locked from the front audio unit.

There are two levels of lockout:

1. **Off** - prevents any operation from the rear.
2. **Headphones only** - allows control and use of the rear headphones, but not cabin (speakers) mode.

See Owner's Handbook for more information.

Audio Selection




JOL3474

Press button (H) repeatedly until the name of the audio source that you wish to listen to is shown on the switchpack display.

Tip: Using the **AUDIO SELECT** button will change only the audio, and will not alter the selection of video media shown on the video display screens.

See **Video Selection**, page 9.

Radio Controls

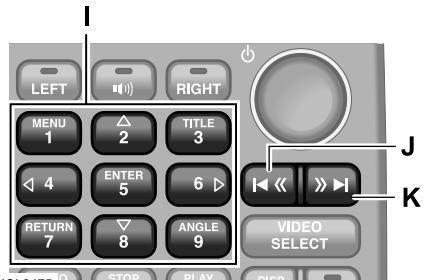

JOL3475

Press and release button (K) to seek up, or button (J) to seek down, to the next station.


Press and release a number from (I) to select a preset station from 1 - 9.

Tip: Storing preset stations can only be carried out from the front audio unit.

See Owner's Handbook for more information.

Quick Start

CD Controls

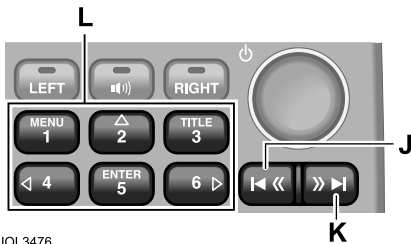

JOL3476


Once a CD has been inserted and selected as the audio source, play will commence automatically. To stop play select another audio source.

Press and hold button (J) or (K) to fast rewind/fast forward. Press and release button (J) or (K) to skip forward/backward to the next/previous track.

If a CD changer is fitted and selected as the audio source, use buttons (L) to change the disc selected (1 - 6).

See *Owner's Handbook* for more information.

Auxiliary Inputs

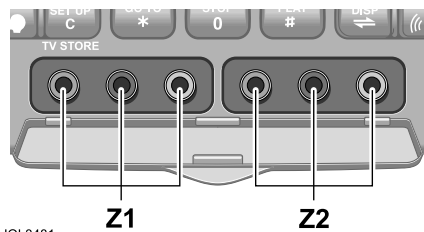


JOL3481

- Z1** AUX 1 connectors for suitable auxiliary input devices (e.g. games console).
- Z2** AUX 2 connectors for suitable auxiliary input devices (e.g. games console).

Quick Start

Video Display Screens

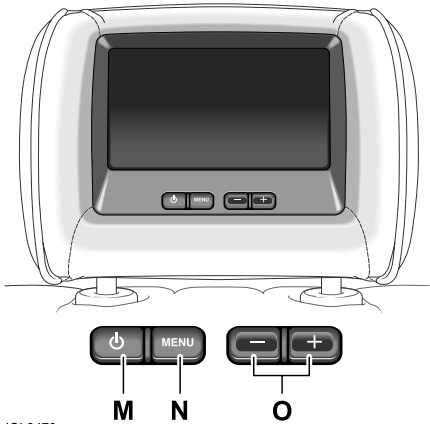

JOL3473


Press button **(M)** to switch on the video display screen.

If adjustments are required, press button **(N)** to display the screen settings menu. Once the settings menu is displayed press button **(N)** repeatedly to scroll through the options.

Press buttons **(O)** to alter the settings.

Video Selection

Left or right selection

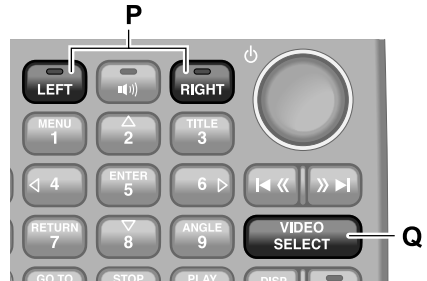


JOL3477

Press one of the **(P)** buttons to select **LEFT** or **RIGHT** screen.

Press button **(Q)** repeatedly until the name of the video source that you wish to view is shown on the switchpack display.

Transferring audio to cabin (speakers)

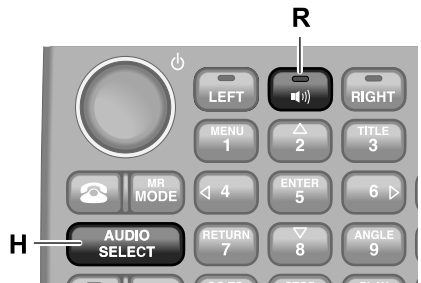

JOL3482

Press button **(R)** to select cabin (speakers) mode.


Then press button **(H)** repeatedly until the name of the video source is displayed.

Quick Start

DVD Controls

Caution: When playing a DVD for long periods it is recommended that the engine is running. Playing a DVD with the engine not running may cause the vehicle's battery to discharge, preventing the engine from starting.

Inserting/ejecting a disc

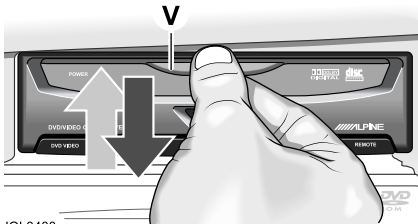

JOL3480

Note: The ignition switch must be in position **I** or **II** to insert or eject a DVD.


To insert a DVD into the DVD player push the flap (**V**) down and insert the disc with the playing side facing down (label up).

Caution: Do not use force to insert the disc, it will be drawn in by the player.

To eject a disc from the DVD player open the flap (**V**) and wait for the disc to be ejected (depending on the DVD player's status this may take 7 seconds).

Caution: To prevent accidental damage to the DVD player's mechanism the flap (**V**) should be closed following inserting or ejecting a disc.

Playing a movie

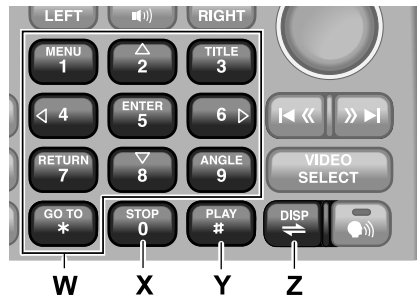

JOL3483

Press button (**Y**) to start movie.

Press button (**X**) to stop movie.

Use buttons (**W**) for DVD operation and control when playing a movie.

Picture format

The DVD player is capable of playing DVDs or VCDs recorded in either PAL or NTSC formats.

To switch between formats press and hold button (**Z**) (for 8 seconds).

Note: If the incorrect format has been selected **VIDEO SYSTEM SIGNAL IS NOT CORRECT** will be displayed.

Front Audio Control

To recover control to the **front** audio unit after playing a DVD:

- Press the associated BAND or CD switch on the front audio unit.

See **Audio Selection**, page 7.