

Fig. 11.10**COMPONENTS**

Component	Connector(s)	Connector Description	Location
REAR CENTER CONSOLE SWITCH PACK	TL89	8-WAY / BLACK	REAR CENTER CONSOLE
REAR ELECTRONIC MODULE	CR4	20-WAY / BLACK	TRUNK / RH REAR
	CR11	26-WAY / NATURAL	
	CR12	12-WAY / BLACK	
	CR13	22-WAY / BLACK	
	CR71	17-WAY / BLACK	
	CR73	4-WAY / BLACK	
REAR SEAT BACK HEATER – LH	SL4	20-WAY / BLACK	LH REAR SEAT BACK
REAR SEAT BACK HEATER – RH	SR4	20-WAY / BLACK	RH REAR SEAT BACK
REAR SEAT CUSHION HEATERS – LH	LS4	4-WAY / BLACK	LH REAR SEAT CUSHION
REAR SEAT CUSHION HEATERS – RH	RS4	4-WAY / BLACK	RH REAR SEAT CUSHION

HARNESS IN-LINE CONNECTORS

Connector	Connector Description / Location	Location
LS1	22-WAY / BLACK / CABIN HARNESS TO LH REAR SEAT HARNESS	CABIN / BELOW LH REAR SEAT
LS11	6-WAY / GREY / CABIN HARNESS TO LH REAR SEAT MOTOR HARNESS	CABIN / BELOW LH REAR SEAT
RS11	6-WAY / GREY / CABIN HARNESS TO REAR SEAT HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
SL4	20-WAY / BLACK / LH REAR SEAT HARNESS TO LH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / RH SIDE
SR4	20-WAY / BLACK / RH REAR SEAT HARNESS TO RH REAR SEAT MOTOR HARNESS	CABIN / BELOW REAR SEAT / LH SIDE
TL28	16-WAY / GREY / CABIN HARNESS TO TELEMATICS HARNESS	CABIN / BELOW CENTER CONSOLE / RH SIDE

GROUNDS

Ground	Location
G17	CABIN / BELOW REAR SEAT / RH SIDE
G18	CABIN / BELOW REAR SEAT / RH SIDE
G24	TRUNK / RH REAR / REAR ELECTRONIC MODULE

Refer to the front of this book for detailed information and illustrations regarding the location and identification of harnesses, relays, fuses, grounds, control modules and control module pins.

