

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS, Updated/Effective May 1, 2008 ALSO, LISTED TECHNICAL BULLETINS**

**\*\*THIS IS A REFERENCE GUIDE OF COVERED SELECT EDITION COMPONENTS AND MAY NOT BE AN ALL-INCLUSIVE LIST. JAGUAR CARS RESERVES THE RIGHT TO ADD OR REMOVE COMPONENTS FROM THIS LIST AT ANY TIME WITHOUT PRIOR NOTICE.**

AC BLOWER RH  
ACCEL CABLE  
ACCELERATOR  
ACCELERATOR CABLE  
ACCELERATOR PEDAL  
ACTUATOR  
ACTUATOR AS  
ACTUATOR ASSEMBLY  
ACTUATOR-DOOR  
ACTUATOR-LINK  
ACTUATOR-S/CHARGER  
ACTUATOR-SPEED CNTRL  
ACTUATOR-TRUNK LATCH  
AID-REVERSING MODULE  
AIR CON RADIATOR  
AIR CON UNIT  
AIR CON. HARNESS  
AIR FLOW METER  
AIR PIPE AS  
ALTERNATOR  
AMP-AUDIO POWER  
AMPLIFIER  
AMPLIFIER-AIR CON  
ANTI LOCK BRAKE MODU  
ANTI SKID MODULATOR  
ASSY COMP FRT SEAT  
ASSY COMP RELAY LEVE  
ASSY COMP RESVR BRKT  
ASSY LCK BARREL DOOR LH  
ASSY-SENDER & OUTLET  
ASSY-SENDER & PUMP  
AUTO G BOX  
AUTO GR BOX  
AUTO TRANSMISSION  
AUTO-GEARBOX  
AXLE  
AXLE ASSY LH  
AXLE ASSY RH  
AXLE SHAFT KIT  
AXLE SHAFT R  
AXLE-STUB

# SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

BARREL-DOOR LOCK  
BARREL-IGNITION LOCK  
BARREL-LOCK  
BARREL-TRUNK LOCK  
BEARING AND SLEEVE  
BEARING-ACCELERATOR  
BEARING-CENTRE  
BEARING-CLUTCH REL  
BEARING-CON ROD  
BEARING-CRANK MAIN  
BEARING-CRANK THRUST  
BEARING-FRT/INT/MAIN  
BEARING-HUB  
BEARING-INPUT SHAFT  
BEARING-MAIN  
BEARING-OUTPUT SHAFT  
BEARING-PINION  
BEARING-RETAINER  
BEARING-WATER-PUMP  
BLADE-CHAIN TENSIONR  
BLEED PIPE  
BLOCK-CYLINDER  
BLOCK-VALVE  
BLOWER-EVAPORATOR  
BLOWER-HEATER  
BODY-OIL PUMP  
BODY-THROTTLE  
BODY-WATER-PUMP  
BOTTLE-ATMOSP RCOVRY  
BOTTLE-DRIER  
BOTTLE-RECEIVE DRIER  
BOX-JUNCTION  
BOX-TRANSFER DRIVE  
BRAKE ACTUATOR CABLE  
BRAKE ANTI SKID MODU  
BRAKE-BOOTER  
BRAKE CALIPER  
BRAKE PEDAL SWITCH  
BRAKE PIPE RHRC -CON  
BRAKE-ACTUATOR CABLE  
BRG SET MAIN

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

BRIDGE PIPE  
CABIN HARNESS  
CALIPER-BRAKE  
CAM  
CAM CHN WHL  
CAM CVR GSK  
CAM CVR LH  
CAM-ACCELERATOR  
CAM-ADJUSTMENT  
CAM-LIFTING PANEL  
CAMSHAFT  
CAMSHAFT COVER  
CAMSHAFT-INLET  
CAM-SLIDE  
CANISTER-CARBON  
CANISTER-CHARCOAL  
CANISTER-CLOSE VALVE  
CANISTER-INLET  
CARB GASKET  
CARBN CANSTR MTG BKT  
CARBON CAN ASSY(PRG)  
CARRIER  
CARRIER-CALIPER  
CARRIER-CENTRE  
CARRIER-DISC  
CARRIER-HUB  
CARRIER-IDLER PULLY  
CARRIER-MODULE  
CARRIER-OIL PIPE  
CARRIER-PULLY  
CARRIER-SWITCH  
CARRIER-TNSION PULLY

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

CD ROM-NAVIGATION  
CENTRAL LOCKNG DOLLY  
CHAIN DAMPR  
CHAIN TENSIONER  
CHAIN-OIL PUMP  
CHAIN-OIL PUMP  
CHAIN-PRIMARY TIMING  
CHAIN-SECONDRY TIMNG  
CHAIN-TENSIONER  
CHAIN-TIMING  
CLUSTER-WARNING LAMP  
COIL  
COIL COVER  
COIL-IGNITION  
COIL-KEY TRANSPONDER  
COIL-MAIN IGNIT 6L  
COIL-ON PLUG IGNITON  
COLLAR-INLET VALVE  
COLLAR-OIL PMP DRIV  
COLLAR-RETAINING BRG  
COLLER-VALVE  
COLUMN-STEERING  
COMP PULLEY  
COMPLETE ENGINE WORN  
COMPRESSOR  
COMPRESSOR & CLUTCH  
CON ROD BEARING  
CONDENSER  
CONTROL UNIT-HYDRLIC  
CONTROL-MODULE SEAT CONTROL

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

CONVERTER AS  
CONVERTER-TORQUE  
COOLANT RESEVOIR  
CORE-EVAPORATOR  
COTTER-VALVE  
CRANK PULLY  
CRANKSHAFT  
CRANKSHFT DAMPER ASY  
CRANKSHFT MAIN BEAR  
CRANKSHFT UNDERSHIEL  
CROWNWHEEL & PINION  
CRUISE CONTROL R/FIT  
CY HD ASSY WORN UNIT  
CYL HEAD ASSY  
CYL HEAD ASSY EXCHAN  
CYL HEAD STU  
CYL HEAD WORN UNIT  
CYL LINER  
CYL. BLOCK CORE PLUG  
CYLINDER  
CYLINDER BLOCK  
CYLINDER HEAD  
CYLINDER HEAD ASSY  
CYLINDER-BRKE MASTR  
CYLINDER-CLTCH SLAVE  
CYLINDER-HOOD LATCH  
CYLINDER-HOOD LIFT  
DIFFERNTIAL EXCHANGE  
DIODE  
DOOR HANDLE  
DOOR HARNESS  
DOOR LATCH  
DOOR LOCK  
DOOR SWITCHPACK  
DOWEL  
DOWEL-CYLINDER BLOCK  
DOWEL-TIMING COVER  
DRIER BOTTL  
DRIVE DOG- AUX SHAFT  
DRIVE DOG- AUX SHAFT  
DRIVE KIT  
DRIVE-BELT TENSIONER  
DRIVE-DOOR CABLE WITH HANDLE

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

DRIVE-FLEXI  
DRIVE-MOTOR AND GEAR  
DRIVE-PLANETARY  
DRIVEPLATE ASSY  
DRIVERS DOOR HARNESS  
DRIVER'S SEAT HARNES  
DRIVERS SILL HARNESS  
DRIVE-STARTER MOTOR  
DRVR ST SILL HARNESS  
ECU-SECURITY/LOC  
ECU-SECURITY/LOCKING  
EGR PIPE  
ELECT SPEEDO  
ELECTRIC ELEMENT  
ELEMENT-HEATER  
ELEMENT-SEAT HEATER  
ENG.HARNES LINK LEAD  
ENGINE CONTROL MODUL  
ENGINE COVER SPACER  
ENGINE CVR FXNG BRKT  
ENGINE DIRTY UNIT  
ENGINE HARNESS  
ENGINE MANAGE.HARNSS  
ENGINE MTG R  
ENGINE OIL COOL ASSY  
ENGINE SUPPO  
ENGINE SUPPO  
ENGINE WORN UNIT  
ENGINE-COMPLETE  
ENGINE-SHORT  
ENGINE-STRIPPED  
EVAP PRES LINK LEAD  
EVAPORATOR AND SEAL  
EVAPORATOR COVER.  
EVEAPORATOR  
EX CAMSHAFT  
EXCH CD CHANGER  
EXCH CD PLAYER  
EXCH ENG  
EXCH PREM RADIO  
EXCH RADIO  
EXCHANGE CYL HEAD  
EXCHANGE ENGINE 4.2  
EXCHANGE RADIO  
EXH VALVE  
EXH.GAS RECIRC PIPE

DOOR HANDLE IS COVERED ONLY IF  
IF THE ROD INSIDE FAILED/  
IF BROKEN OFF NOT COVERED

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

EXPANSION TANK  
FACIA HARNESS  
FACIA VACUUM HARNESS  
FAN AND COWL  
FAN BLOWER ASSY LH  
FAN BLOWER ASSY RH  
FAN IMPELLER  
FAN SOEED & TEMP C/B  
FAN-ALTERNATOR  
FAN-COOLING  
FAN-DRIVE UNIT  
FLANGE-EVAP LOSS  
FLYWHEEL  
FLYWHEEL ASS  
FORWARD HARNESS  
FRONT SEAT BELT LH  
FRONT SEAT BELT RH  
FRT SEAT BELT ASSY  
FRT/LFT SIDE WINDOW REGULATOR  
FRT/RT SIDE WINDOW REGULATOR  
FUEL FEED PIPE  
FUEL PUMP  
FUEL RAIL  
FUEL SENSOR  
FUEL TANK ASSY – CORROSION NOT COVERED  
FUSEBOX OR MODULE  
FUSEBOX-ACCESSORY  
FUSEBOX-CUBBY BOX  
FUSEBOX-ENGINE BAY  
FUSEBOX-HEELBOARD  
FUSEBOX-TRUNK MTG  
GASKET – BREATHER HOUSING  
GASKET (SUMP SNDWICH  
GASKET ACCUM.HOUSING  
GASKET OIL S  
GASKET SET  
GASKET SET, HEAD  
GASKET VALVE BLOCK  
GASKET WATER INLET  
GASKET-CAMSHAFT COVR  
GASKET-CYLINDER HEAD  
GASKET-EXHST MANIFLD  
GASKET-INDCTN MANFLD  
GASKET-INLET MANIFLD  
GASKET-MANIFOLD  
GASKET-OIL DELIVERY

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

GASKET-OIL SUCTION  
GASKET-SUMP  
GASKET-WATER PUMP  
GASKET-WTR INLET SPT  
GAUGE-BATTERY  
GAUGE-BATTERY/FUEL  
GAUGE-FILL LEVEL IND  
GAUGE-FUEL  
GAUGE-OIL PRESSURE  
GAUGE-SPEEDO/TACHO  
GAUGE-TEMPERATURE  
GEAR  
GEAR CONTROL LEVER CABLE  
GEAR STEERING  
GEARBOX  
GEARBOX ASSY GM AUTO  
GEARBOX HARNESS  
GEARBOX-FORE AND AFT  
GEARBOX-MANUAL  
GEARBOX-RECLINE MTR  
GEARBOX-RISE & FALL  
GEARBOX-RISE & FALL  
GEARBOX-SEAT RECLINE  
GEAR-DIFF SIDE BEVEL  
GEAR-DIFF SIDE RING  
GEAR-DIFFERENTIAL  
GEAR-DRIVE  
GEAR-OUTPUT SHAFT  
GEAR-PINION MATE BEV  
GEAR-RING  
GEAR-SPEEDO DRIVE  
GEAR-SUN  
GEARWHEEL  
GEAR-WIPER MOTOR  
GSKET (SUMP SANDWICH  
GSKT (TIMING CVR LH)  
GSKT (TIMING CVR RH)  
GSKT (TIMING CVR TOP  
GSKT (WTR PUMP ELBOW  
GSKT FUELCP  
GUIDE-VALVE  
HALFSHAFT  
HANDBRAKE  
HANDBRAKE ASSY  
HANDBRAKE CABLE ADJUST  
HANDLE REMOTE CONTROL  
HANDSET-TELEPHONE



# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

HARNES  
HARNES - VAC FACIA  
HARNES AIR CON OVER  
HARNES ECU TO ENG  
HARNES ENG MAN LHD  
HARNES ENG MAN RHD  
HARNES MOT PHONE  
HARNES/CONNECTOR REPAIR  
HARNES-BLOCK HEATER  
HARNES-BODY  
HARNES-CABIN  
HARNES-CANISTER  
HARNES-DRIVERS SILL  
HARNES-ENGINE  
HARNES-FORWARD  
HARNES-GEARBOX  
HARNES-LINK  
HARNES-MAIN  
HARNES-NAVIGATION  
HARNES-PASGNER SILL  
HARNES-TRANSMISSION  
HD GSKT SET  
HEAD-CYLINDER  
HEATED SENSOR RELAY  
HEATER  
HEATER CORE  
HEATER-ENGINE BLOCK  
HEATER-SEAT CUSION  
HEATER-SEAT SQUAB  
HIGH MOUNT STOP LIGHT – SHORT  
HOLDER BULB  
HORN  
HORN HIGH N  
HORN RELAY  
HOUSING  
HOUSING AND SLEEVE  
HOUSING GASKET  
HOUSING-BEARING  
HOUSING-BREATHER

HEADLAMP ASSY HID ARE COVERED ON  
FOLLOWING MODLES:  
X-TYPE – 2002-ON  
S-TYPE- 2003-ON  
XJ-2004-ON  
XK-2007-ON

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

HOUSING-CALIPER  
HOUSING-CONNECTOR  
HOUSING-CONT MODULE  
HOUSING-CONVERTER  
HOUSING-DRIVEN GEAR  
HOUSING-EXTENSION  
HOUSING-G/BOX EXT  
HOUSING-OIL SEAL  
HOUSING-PISTON TENSN  
HOUSING-SHAFT  
HOUSING-TENSION PITN  
HOUSING-THERMOSTAT  
HOUSING-THROTTLE  
HOUSING-TORQUE CONVT  
HOUSING-TORQUE CONVT  
HUB  
HUB & BEARING  
HUB AND BEARING  
I.C.E. HARNESS  
IDLER PULLEY  
IGN COIL  
IGN SWITCH A  
IGNITION SWITCH  
IGNTN COIL  
IMPELLER-WATER PUMP  
IMPELLOR  
INDICATOR-TIMING  
INDUCTION MANIFOLD  
INJECTOR-FUEL  
INLET CAMSHAFT  
INLET MANIFOLD ASSY  
INNER HUB BRG  
INSTRMTN CLUSTR/PACK  
INSTRUMENT PACK  
J-GATE/LEVER  
JOINT-THROTTLE BODY  
JOINT-UNIVERSAL  
KEY-TRANSPONDER  
KIT-AUXILIARY SHAFT

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

KIT-BEAR & PIST RING  
KIT-BEARING-BIG-END  
KIT-BLOWER MOTOR  
KIT-BRAKE CALIPER  
KIT-CALIPER CARRIER  
KIT-CALIPER REPAIR  
KIT-CALIPER SEALING  
KIT-CAM COVER SEAL  
KIT-DIFF O/PUT SEAL  
KIT-GASKET  
KIT-GASKET AND SEAL  
KIT-GASKET CYL HEAD  
KIT-HARNESS  
KIT-HUB BEARING  
KIT-HUB BRG+SEAL  
KIT-INCLINATION SNSR  
KIT-INLET PIPE  
KIT-INTRFCE CONNECT  
KIT-LINK LEAD  
KIT-MAIN BEARING  
KIT-MICROSWITCH  
KIT-NON RETURN VALVE  
KIT-OIL PAN & PIPE  
KIT-O-RING  
KIT-O-RING AND SEAL  
KIT-OUTLET PIPE  
KIT-OUTPUT SEAL  
KIT-PARKING PAWL  
KIT-PINION HOUSING  
KIT-PISTON RING  
KIT-PISTON SERVICE  
KIT-PRE TENSIONER  
KIT-PRES WARN SWITCH  
KIT-PRESS REGULATOR

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

KIT-PURGE CONTROL  
KIT-REP-O/COOL PPE  
KIT-RESERVOIR  
KIT-RETAINING RING  
KIT-SEAL  
KIT-SEAL-RACK/PNION  
KIT-SECURITY  
KIT- SENSOR FIXING  
KIT-SERVO PISTON  
KIT-SRVO SEAL&GASKET  
KIT-STEPPER MOTOR  
KIT-STG COL RCH MTR  
KIT-STR COL TILT MTR  
KIT-THRUST BEARING  
KIT-TRANSMTR BUTTONS  
KIT-UNIVERSAL JOINT  
KIT-VALVE GASKT/SEAL  
KIT-VLVE PINION SEAL  
KIT-VLVE PLTE & GSKT  
KIT-WATER PUMP SEAL  
LATCH-BONNET  
LATCH-FUEL FILLER  
LATCH-HOOD PLATE  
LATCH-TRUNK  
LEAD-HARNESS  
LEAD-LINK  
LEAD-LINK TRUNK HARN  
LEFT FORWARD HARNESS  
LH 4L STEERING VALVE  
LHD STEER RACK 4 LTR  
LINER-CYLINDER  
LINK  
LINK HARNES  
LINK HARNESS - ALT  
LINK HARNESS 6L  
LINK LEAD  
LINK LEAD ENG MAN SY  
LINK LEAD ENG MAN SY

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

LINK LEAD PILOT LGT  
LINK-ACTUATOR  
LINKAGE  
LINK-ANTI ROLL BAR  
LINK-CLOCK  
LINKLEAD  
LINK-LEAD THROTTLE POS SENSOR  
LINK-LOCKING  
LINK-THROTTLE  
LOCK AND ACTUATOR  
LOUDSPEAKER  
LOW LEVEL SENSOR  
MAIN BEARING BOLT  
MANFLD GSKT  
MANIFLD-IDLE SPEED  
MANIFLD-IDLE SPEED  
MANIFOLD-INDUCTION  
MANIFOLD-INLET  
MANUAL TRANSMISSION  
MECHANISM-LIFT BLOCK  
MECHANISM-RECLINE  
MECHANISM-RISE&FALL  
MECHANISM-WIPER  
METER-AIR FLOW  
MICROPROCESSOR  
MICROSWITCH  
MODULATOR  
MODULATOR-ABS  
MODULATOR-VACUUM  
MODULE  
MODULE-AIR CON  
MODULE-AUDIO IN/FACE  
MODULE-BALLAST  
MODULE-BODY PROCESS  
MODULE-CDL  
MODULE-CENTRAL CNTRL  
MODULE-CHIP CONTROL

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

MODULE-CONSOLE SWTCH  
MODULE-CONTROL  
MODULE-DIM/DIP  
MODULE-DIMMER  
MODULE-DIODE  
MODULE-DOOR  
MODULE-DOOR OPEN  
MODULE-DRIVE SEAT  
MODULE-ELECT CONTROL  
MODULE-ENGINE CONTRL  
MODULE-FUEL PUMP  
MODULE-FUSEBOX  
MODULE-GARAGE DOOR  
MODULE-GEAR ILLUM  
MODULE-HEADRST CNTRL  
MODULE-HOOD CONTROL  
MODULE-IGNITION  
MODULE-IGNITION AMP  
MODULE-IGNITION CONT  
MODULE-ILLUM CONTROL  
MODULE-IMMOBILISER  
MODULE-INJ/IGN CONT  
MODULE-INSTRMNT DISP  
MODULE-INTERFACE  
MODULE-INTRUSION  
MODULE-KEY TRANSPOND  
MODULE-K-RELAY  
MODULE-LAMP CONTROL  
MODULE-LIGHT SWITCH  
MODULE-LIGHTING  
MODULE-LOAD DUMP  
MODULE-LOAD DUMP/RES  
MODULE-MULTI-FUNCT  
MODULE-MULTI-FUNCT  
MODULE-NAVIGATION  
MODULE-OVERSPEED WRN  
MODULE-SEAT CONTROL  
MODULE-SEAT HEAT  
MODULE-SEAT MEMORY  
MODULE-SECUR/LOCKING

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

MODULE-SECURITY  
MODULE-SECURITY CONT  
MODULE-SPEED CONT  
MODULE-SPEED WARN  
MODULE-SPEEDOMETER  
MODULE-STEERING CONT  
MODULE-STRG COLUMN  
MODULE-SUNROOF CTRL  
MODULE-SUNROOF SWTCH  
MODULE-SUPPRESSION  
MODULE-SWTCHPCK/CLK  
MODULE-TEMP WARNING  
MODULE-TRANSMISSION  
MODULE-TRIP COMPUTER  
MODULE-VOICE  
MODULE-WIPER LOGIC  
MOTOR  
MOTOR & BRACKET  
MOTOR & FAN  
MOTOR & G/BOX-H/REST  
MOTOR & MECH-WIPER  
MOTOR (SLIDING ROOF)  
MOTOR AND ANCHORAGE  
MOTOR AND CABLE  
MOTOR AND GEAR  
MOTOR AND GEARBOX  
MOTOR AND PUMP  
MOTOR CABLE ANCHORAG  
MOTOR COVER  
MOTOR STARTER WORN  
MOTOR/GEAR-WIPER  
MOTOR/MECH-WIPER  
MOTOR-AIR CON BLOWER  
MOTOR-AIR CON BLOWER  
MOTOR-ASPIRATOR  
MOTOR-BYPASS SERVO  
MOTOR-FORE AND AFT  
MOTOR-HEATER BLOWER  
MOTOR-RECLINE  
MOTOR-RECLINE MECH

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

MOTOR MECH/HEADREST  
MOTOR-RISE AND FALL  
MOTOR-SEAT SLIDE LUMBER  
MOTOR-SERVO  
MOTOR-STARTER  
MOTOR-STEPPER  
MOTOR-SUNROOF  
MOTOR-TILT  
MOTOR-VARIABLE  
MOTOR-WINDOW REGULTR  
MOTOR-WINDSCRN WIPER  
MOULDED FAN  
NAVIGATION  
NAVIGATION MODULE  
ODOMETER  
OIL COOLER PIPE FEED  
OIL COOLER RETURN  
OIL PUMP GEA  
OIL SEAL  
OIL SUMP  
OIL SUMP ASS  
OIL THROWER  
OIL-AUTO TRANS  
OIL-COMPRESSOR  
OIL-PUMP  
ON PLUG IGNTION COIL  
OPEN CIRUIRT  
OPERATING LEVER COMP  
OUTER HUB BRG  
OUTER SEAL  
OUTER SEAL ASSY  
OUTLET PIPE  
PACK-INSTRUMENT  
PACK-REAR ELECTRONIC  
PANEL-AIR CON CONTRL  
PANEL-AIR CON/RADIO  
PAN-SUMP



# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

PARK BRAKE HANDGRIP  
PAS PUMP  
PAS PUMP ASSY  
PAS VALVE LHD 4L  
PAS VALVE LHD 6L  
PAS VALVE RHD 4L  
PAS VALVE RHD 6L  
PAS VALVE WITH ENERG  
PASS SILL HARNESS  
PASSENG DOOR HARNESS  
PASSENGER SEAT HARNE  
PAWL  
PAWL-LOCK  
PEDAL-ACCELERATOR

### **ANY PIPES/HOSES WITH RUBBER MATERIAL NOT COVERED BELOW**

PIPE  
PIPE AND BRACKET-AIR  
PIPE AND HOSE-CLUTCH  
PIPE ASSY LH  
PIPE ASSY RH  
PIPE LH  
PIPE RH  
PIPE VAPOUR U.FLOOR  
PIPE/BRACKET-AIR  
PIPE/CABLE CLIP QUAD  
PIPE-ADAPTOR  
PIPE-AIR  
PIPE-AIR CON  
PIPE-AIR DELIVERY  
PIPE-BALANCE  
PIPE-BLEED  
PIPE-BRAKE VACUUM  
PIPE-BREATHER DRAIN  
PIPE-BYPASS  
PIPE-C/CASE BREATH  
PIPE-CONNECTING  
PIPE-COOLANT BLEED  
PIPE-EGR  
PIPE-FEED  
PIPE-FILLER

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

PIPE-FUEL  
PIPE-FUEL AND BRAKE  
PIPE-FUEL FILLER  
PIPE-FUEL RETURN  
PIPE-GOVERNOR  
PIPE-HEATER FEED  
PIPE-HYDRAULIC  
PIPE-HYDRAULIC BRAKE  
PIPE-HYDRAULIC CLTCH  
PIPE-INLET  
PIPE-OIL  
PIPE-OIL COOL RELIEF  
PIPE-OIL COOL RETURN  
PIPE-OIL COOLER  
PIPE-OIL COOLER FEED  
PIPE-OIL DELIVERY  
PIPE-OIL DRAIN  
PIPE-OIL FEED  
PIPE-OIL PICKUP  
PIPE-OIL RETURN  
PIPE-OIL SUCTION  
PIPE-OIL VENT  
PIPE-OUTLET  
PIPE-OVER PRESSURE  
PIPE-OVERFLOW  
PIPE-PETROL FEED  
PIPE-POWER STEERING  
PIPE-PRESSURE SENSR  
PIPE-PURGE  
PIPE-RADIATOR BLEED  
PIPE-THRMOSTAT BLEED  
PIPE-TRANSFER  
PIPE-TWIN PURGE  
PIPE-VACUUM  
PIPE-VACUUM STUB  
PIPE-VAPOUR  
PIPE-WATER  
PIPE-WATER BYPASS  
PIST FRT LH REAR RH  
PIST FRT RH REAR LH  
PISTON

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

PISTON & LINER ASSY  
PISTON AND LINER  
PISTON ASSY FRONT RH  
PISTON RING  
PISTON RINGS SET  
PISTON RINGS TOP  
PISTON-CALIPER  
PISTON-CHAIN TENSIONER  
PISTON-DIRECT CLUTCH  
PISTON-SERVO  
POTENTIOMETER  
POTENTIOMETER-THROTTLE  
POWER RESISTOR  
POWERED SEAT HARNESS  
PRESENTER-TELEPHONE  
PRINTED CIRCUIT  
PROPSHAFT  
PROPSHAFT 2 PIECE AUTO  
PROPSHAFT 6.0L AUTO  
PULLEY  
PULLEY-CRANKSHAFT  
PULLEY-FAN  
PULLEY-JOCKEY  
PULLEY-STEERING PUMP  
PULLEY-THROTTLE CABLE  
PULLEY-WATER PUMP  
PULLEY-ALTERNATOR  
PULLEY-IDLER  
PUMP & GASKET-WATER  
PUMP AND CLUTCH-AIR  
PUMP STRAINER  
PUMP/FILTER-FUEL  
PUMP-AIR  
PUMP-AIR INJECTION  
PUMP-FRONT  
PUMP-FUEL  
PUMP-HOOD LIFT  
PUMP-HYDRAULIC

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

PUMP-LUMBER/IN SEAT  
PUMP-OIL  
PUMP-POWER STEERING  
PUMP-POWERWASH  
PUMP-S/CHARGR COOLNT  
PUMP-SCREENWASH  
PUMP-SPEED CONTROL  
PUMP-WASHER  
PUMP-WATER  
PURGE VALVE  
RACK  
RACK & MOUNTING ASSY  
RACK & MTGS RH WORN  
RACK & PINION  
RACK & PINION LHD  
RACK & PINION WORN  
RACK&PINION-STEERING  
RACK/PINION ASSY LHD  
RACK/PINION LHD WORN  
RADIO LINK HARNESS  
RAIL  
RAIL AND SEAL  
RAIL-AIR  
RAIL-FUEL  
RAIL-SEAL MOUNTING  
RAIL-WATER  
REAR VAPOUR PIPE  
REARWARD HARNESS  
REBUILT RADIO  
RECEIVER DRIER  
RECEPTACLE-ENGN CVR  
RECON STRG PUMP  
RECTIFIER-ALTERNATOR  
RECV DRIER+FAN COWL  
REGULATOR  
REGULATOR-PRESSURE  
REGULATOR-WINDOW  
RELAY

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

RELAY MODULE  
RELAY-AIR CON  
RELAY-ANTI-STALL  
RELAY-CHANGE OVER  
RELAY-FAN  
RELAY-H/LAMP LOG MOD  
RELAY-H-MODULE  
RELAY-MAIN  
RELAY-MICRO  
RELAY-M-MODULE  
RELAY-MODULE  
RELAY-PUMP  
RELAY-REVERS INHIBIT  
RELAY-STEP  
RELAY-TIMER  
RELAY-VALVE  
RELAY-WATERPROOF  
REMAN ENG ECM  
RESERVOIR  
RESERVOIR-COOLANT  
RESERVOIR-SCREENWASH  
RESISTOR  
RESISTOR-POWER  
RHD STEERING RACK 4L  
ROD-PARK PAWL ACTUAT  
ROD-RESERVOIR SUPPRT  
ROTOR-SENSOR  
ROTOR-SPEED SENSOR  
RR HANDBRAKE ASSY LH  
RR HANDBRAKE ASSY RH  
RR HARNESS  
SCREEN-NAVIGATION  
SEAL O PUMP  
SEAL-CAMSHAFT COVER  
SEAL-COIL COVER  
SEAL-CRANKSHAFT OIL  
SEAL-ENGINE

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

SEAL-FRONT OIL  
SEAL-FRONT PUMP  
SEAL-INLET VALVE  
SEAL-INNER  
SEAL-MAIN COLUMN  
SEAL-MANUAL SHAFT  
SEAL-O/PUT SHAFT OIL  
SEAL-OIL  
SEAL-OIL HUB  
SEAL-OIL INTER SHAFT  
SEAL-OIL PINION  
SEAL-OIL TRIPLE LIP  
SEAL-RAIL  
SEALS KIT.R&P STRG  
SEAL-SECONDARY  
SEAL-SHAFT  
SEAL-THERMOSTAT  
SEAL-TIMING COVER  
SEAL-VALVE  
SEAL-WATER  
SEAL-WATER OUTLET  
SEAL-WATER PUMP  
SEAT HEATER  
SEAT SWITCH  
SECURITY/LOCKINK MOD  
SENDER  
SENSOR  
SENSOR - T.D.C  
SENSOR THROTTLE POS  
SENSOR-AID REVERSING  
SENSOR-AIR FLOW  
SENSOR-AIR TEMP  
SENSOR-ASP MOTOR  
SENSOR-BRAKE PAD  
SENSOR-CAMSHAFT  
SENSOR-CATALST MONTR  
SENSOR-COOLANT TEMP  
SENSOR-CRANKSHAFT  
SENSOR-ENG POSITION  
SENSOR-ENGINE SPEED  
SENSOR-EVAPORATOR  
SENSOR-FLUID LEVEL

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

SENSOR-FLYWHEEL  
SENSOR-FUEL PRESSURE  
SENSOR-FUEL TEMP  
SENSOR-IN CAR  
SENSOR-INCLINATION  
SENSOR-INTRUSION  
SENSOR-KNOCK  
SENSOR-LOW COOL WARN  
SENSOR-LOW LEVEL  
SENSOR-MAP  
SENSOR-OXYGEN  
SENSOR-PARKING REAR  
SENSOR-RAIN  
SENSOR-RIDE LEVEL  
SENSOR-SOLAR  
SENSOR-SPEED  
SENSOR-SPEED CRKSHFT  
SENSOR-SPEEDOMETER  
SENSOR-TEMP WARN  
SENSOR-TEMPERATURE  
SENSOR-THERMAL  
SENSOR-WASH RESERV  
SENSOR-WHEEL SPEED  
SENSOR-YAW RATE  
SEPARATATOR-VAPOUR  
SERVO-SPEED CONTROL  
SET-MAIN BEARING  
SET-MOTOR BRUSH  
SET-SUPPLMNTY GASKT  
SHAFT & NUT-FULCRUUM  
SHAFT & STUD-OUTPUT  
SHAFT AND RING  
SHAFT AND STUD  
SHAFT& SPROCKET-AUX  
SHAFT-AUXILIARY  
SHAFT-AXLE  
SHAFT-COUPPLING  
SHAFT-DRIVE  
SHAFT-FLEXIBLE DRIVE  
SHAFT-FULCRUUM  
SHAFT-GEARSHIFT

# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

SHAFT-IDLER  
SHAFT-INPUT  
SHAFT-INTERMEDIATE  
SHAFT-LINK  
SHAFT-MAIN  
SHAFT-MANUAL  
SHAFT-OPERATING  
SHAFT-OUTPUT  
SHAFT-PNION MTE CRSS  
SHAFT-SPIDER  
SHAFT-STEERING WHEEL  
SHAFT-STUB AXLE  
SHAFT-SUN GEAR  
SHAFT-TURBINE  
SLIDE-SEAT  
SLOENOID-KEYLOCK  
SOLAR SENSOR & ALARM  
SOLENOID  
SOLENOID AND O-RING  
SOLOID VLVE  
SPEAKER  
SPEAKER-AUD WARNING  
SPEAKER-TRIMBOARD  
SPEEDOMETER  
SPEEDOMETER-ELECT  
SPROCKET-AUX SHAFT  
SPROCKET-CAMSHAFT  
SPROCKET-CRANKSHAFT  
SPROCKET-OIL PUMP  
STARTER MOTOR  
STEER RACK & PIN  
STEER RACK ASSY RHD  
STEER RACK LHD 92MY  
STEER RACK LHD XJRS  
STEER RACK RHD 90MY  
STEER RACK RHD XJR-S  
STEERING RACK & MTGS  
STRG RACK + MTG  
STRG RACK + PINION



# SELECT EDITION REFERENCE GUIDE

## COVERED COMPONENTS

STRIKER  
STRIKER-BONNET LOCK  
STRIKER-CRTEZY SWTCH  
STRIKER-FUEL FILLER  
STRIPPED ENGINE  
STRIPPED ENGINE WORN  
SUMP GSKT  
SUMP PAN  
SUMP-OIL  
SUPERCHARGER  
SUPPRESSOR-ALTERNATR  
SUPPRESSOR-IGN COIL  
SUPPRESSOR-PUMP  
SUPPRESSOR-RELAY  
SWITCH DIRECTION  
SWITCH MASTER LIGHT  
SWITCH PACK  
SWITCH REVERSE LAMP  
SWITCH TRANSDUCER OIL PRESSURE  
TACHO HEAD  
TACHOMETER  
TANDEM PUMP ASSY  
TANK ELEMENT  
TANK&PROBE-EXPNSION  
TANK/CAP-HEADER  
TANK-EXPANSION  
TANK-HEADER  
TANK-VACUUM  
TEMP SENSOR LINKLEAD  
TENSIONER DRIVE BELT  
TENSIONER-CHAIN  
TENSIONER-DRIVE BELT  
THERMISTER-EVAP OUT  
THERMOCOUPLE  
THERMOSTAT  
THERMOSTAT 4.0 S-TYPE  
THROTTLE-BODY  
THRTLE POSITN SENSR  
TIMING COVER GASKET  
TIMNG COVER GASKET  
TORQ CNVRTR  
TORQUE CONV WORN UNT  
TORQUE CONVERT VALVE  
TORQUE CONVERTER  
TRANSCEIVER

# SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS

TRANSCEIVER-GRGE DR  
TRANSDUCER - SPEEDO  
TRANSDUCER-FUEL INJ  
TRANSDUCER-OIL PRESS  
TRANSDUCER-SPEED  
TRANSDUCER-STEERING  
TRANSISTOR-POWER  
TRANSMISSION UNIT  
TRANSMITTER  
TRANSMITTER-KEY FOB  
TRANSMITTER-L/POWER  
TRANSMITTER-LOW COOL  
TRANSMITTER-TEMP  
TRUNK HARNESS  
TWIN FAN HAR  
UNIT-AIR CON  
UNIT-AIR CON SERVO  
UNIT-FUEL TANK SENDR  
UNIT-HYDRAULIC CNTRL  
UNIT-INTERFACE  
UNIT-LOGIC  
UNIT-OVER VOLT INDCT  
UNIT-SPD CONTROL  
UNIT-SPEED INTERFACE  
UNIT-TIMING  
UNIT-VACUUM  
UNIV JOINT  
VACUUM PIPE  
VALVE  
VALVE AND PINION  
VALVE EXHAUS  
VALVE SEAT E  
VALVE SPRING (INNER)  
VALVE SPRING (OUTER)  
VALVE V12 ENG XJRS  
VALVE V12 ENG XJRS  
VALVE-AIR BLEED  
VALVE-BYPASS  
VALVE-CANISTER CLOSE  
VALVE-CHARGE  
VALVE-CHECK

# **SELECT EDITION REFERENCE GUIDE COVERED COMPONENTS**

VALVE-COMPR RELIEF  
VALVE-CONTROL  
VALVE-DECELERATION  
VALVE-EGR  
VALVE-EXPANSION  
VALVE-EXTRA AIR  
VALVE-HEATER  
VALVE-HEATER WATER  
VALVE-HIGH PRES RELF  
VALVE-IDLE AIR  
VALVE-INLET  
VALVE-NON RETURN  
VALVE-OIL DIVERTER  
VALVE-PINION  
VALVE-PRESSURE  
VALVE-PRESSURE CONT  
VALVE-PRESSURE DELAY  
VALVE-PRESSURE RDCG  
VALVE-PRESSURE RELIF  
VALVE-PURGE  
VALVE-SOLENOID  
VALVE-SOLENOID SHIFT  
VALVE-VACUUM  
VALVE-WATER  
WATER PUMP KIT  
WATER GAUGE  
WATER HEAT REST PIPE  
WATER PUMP & GASKET  
WATER PUMP COMPLETE  
WATER PUMP GASKET  
WATEROUTLET  
WHEEL BEARING  
WHEEL-BLOWER MOTOR  
WHEEL-STEERING  
WINDOW REGULATOR  
WINDOW WASHER RESERVOIR  
WIPER RELAY  
WIRING REPAIRS ARE COVERED ONLY ON SELECT EDITION COVERED PARTS

# **TECHNICAL BULLETIN'S COVERED UNDER SELECT EDITION: (not an all inclusive list)**

XT303-13- Hissing Noise Drivability issues

XT303-15 – Coolant Leak from Thermostat Housing

XT307-03- Scraping noise 1600RPM 1800-2500 RPM install modified flexplat

XT308-01 – Oil leakage rear output flange of transfer case

XT308-06 – Difficult/High Effort Engagement into 1<sup>st</sup> or reverse

XT308-08 - Transfer Case shaft oil leak

XT412-02 – Vehicle Fogging/Climate Control Slow to Cool Vehicle

XT413-02 – Multiple Warnings on Instrument Cluster VIN G00001-G25490- X350-XJ

XT501-03 – Front seat rocking-seat track VIN C00001-C75251 X-type 2002 MY

XT501-28- Exterior Front Door Handle Hard to Open – Deflection of Link Rod

S303-24 – V6 Engine MIL Lamp on/DTC P0332

S307-03- Torque Converter Clutch does not lock up missing seal ring

S307-12- Driveline Clunk/Knock when downshifting

S307-16 – 5 Speed Transmissions – Selector Lever VIN L00001-M44997

S307-17- 6 Speed Trans harsh shifts

S307-19 5-speed transmission – erratic or harsh shifts

S307-20 – Inability to Shift Gears-Selector Lever Moves Freely Through J-gate

S501-20 – Loss of Seat Memory Reprogram

S501-23 – Customer intermittently locked out of vehicle after closing

303-57 – Loss of Engine Performance

303-58 – Check Engine MIL – V8 XJ series/XK

303-59 – Chirping Noise from Accessory Drive Belt

303-61 – Fuel Vapor odor in interior – Conv. top models only – V8 XJ Series/XK

307-02- Driveline Clunk/Knock When Downshifting

307-06- Harsh Transmission shifts

# **TECHNICAL BULLETIN'S COVERED UNDER SELECT EDITION:**

307-10- Supercharged Engine (W5A580 Transmission)

501-58 - Head Restraint inoperative – XK VIN A11051-A48682

JTB00029 – Hydraulic Fluid Leak from Convertible Header Rail

JTB00071 – Harsh Transmission Shifts

JTB00072 – Transmission MIL illuminated with DTCs