


Buzzer

Thermal switch NC




Connect negative on buzzer to earth  
 Other terminal to 87a on "change/over  
 relay. 86 & 30 to ignition. 85 to thermal  
 switch & other thermal switch terminal  
 to earth.

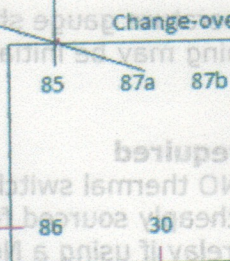

To Ignition source  
 White/Green  
 To Ignition source

To Ignition on source  
 eg Cigar lighter

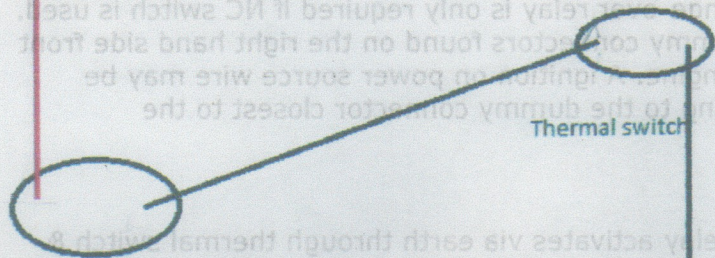

Buzzer

Connect positive on buzzer to  
 ignition source, negative on buzzer  
 to thermal switch. When T/Switch  
 reaches 120c it goes ~~closed~~ **Closed circuit**  
 buzzer activates.

