


**Gearshift Interlock**

The gearshift interlock locks the gear selector in the PARK position unless the ignition switch is in position II (ignition) and the brake is applied. The interlock system also inhibits removal of the ignition key unless the gear selector is in PARK.

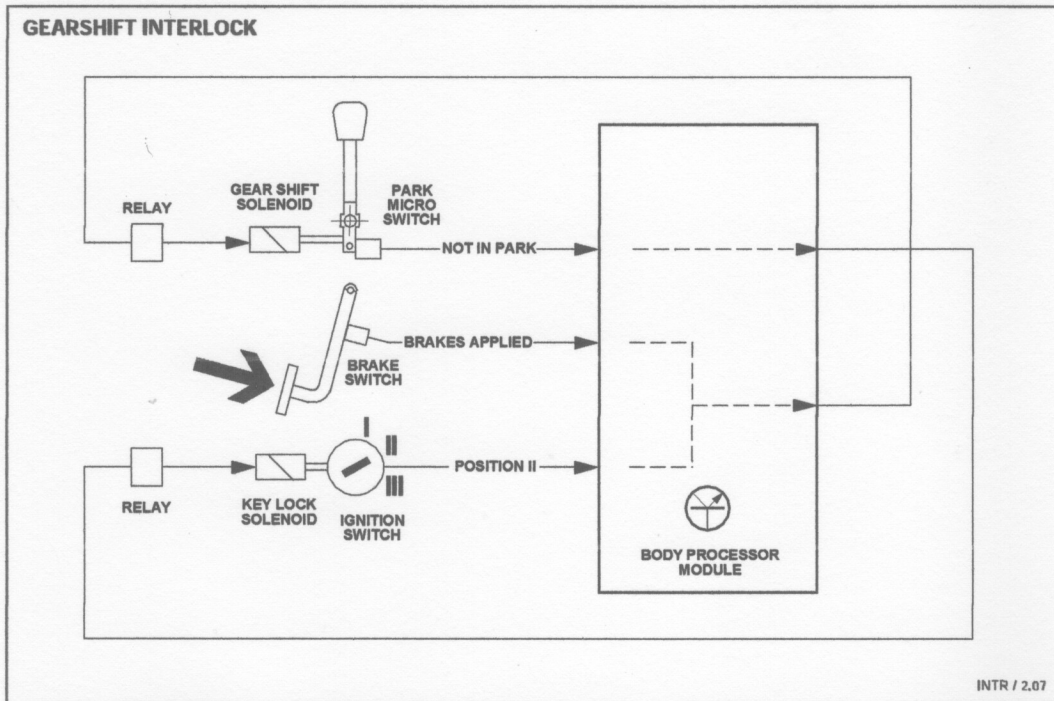

A gearshift interlock override is provided in the gear selector "J" gate. Remove the plastic screw at the left front side of the selector lever to access the release.

**NOTES**

