


15.12.3 Trunk Relays, General Description & Locations

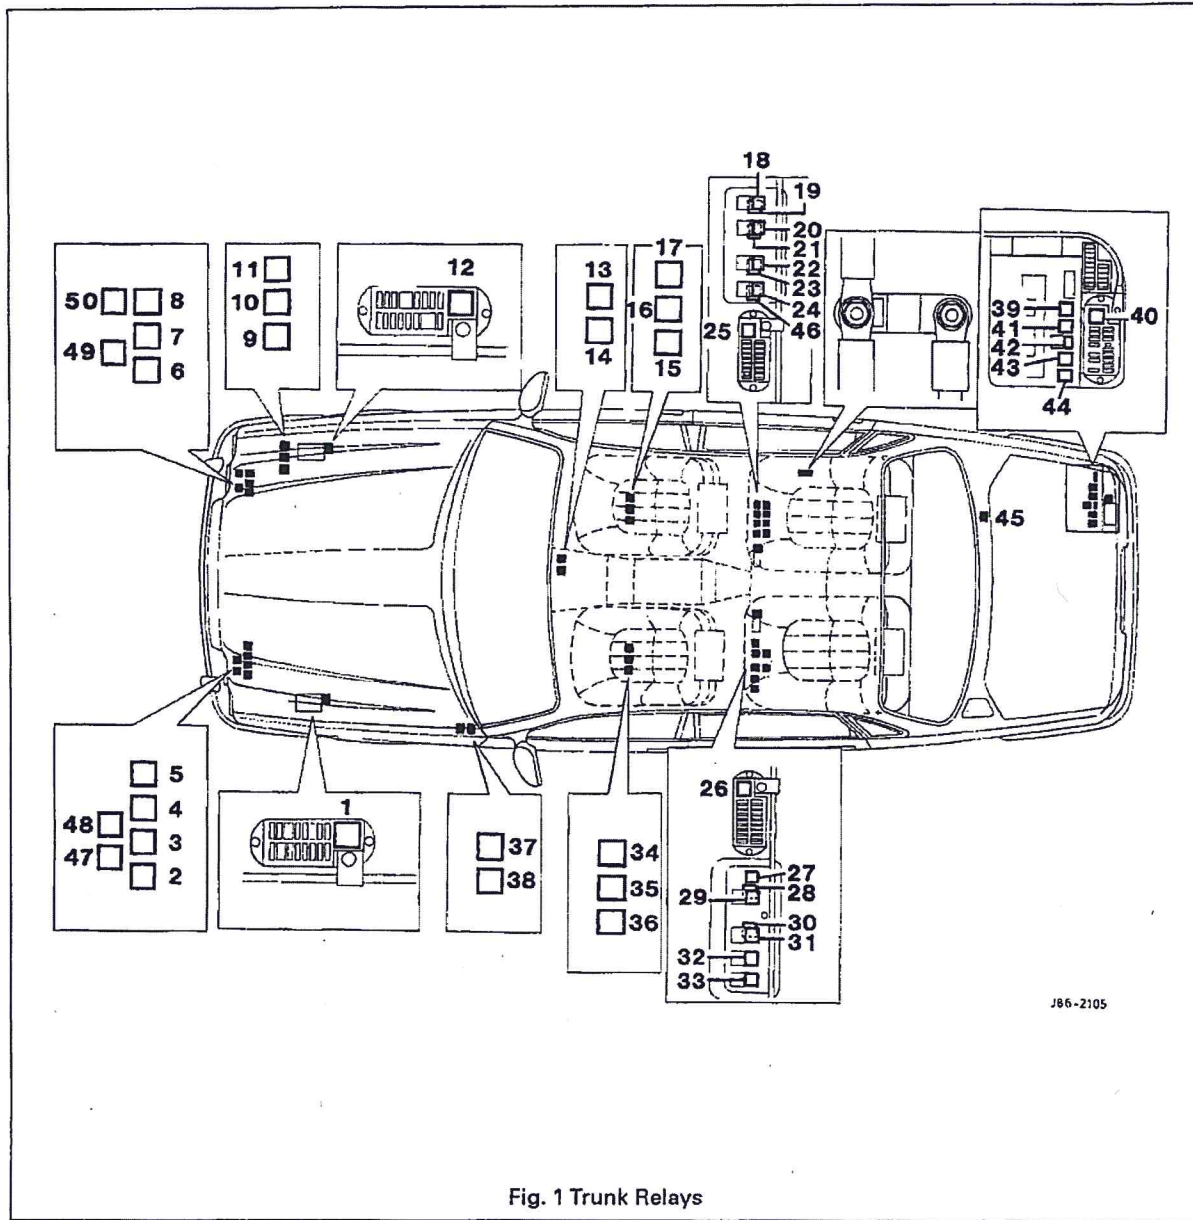

J86-2105

Fig. 1 Trunk Relays

Fig.1, shows all relays located inside the trunk.

To renew and to locate the relays, open the trunk lid, remove the wheel floor carpet board, followed by the carpeted battery/fuse cover and the back panel carpet board.



Key to Fig. 1, Trunk Relays, page 62.

SRO	Relays	Location	Color	AJ16	V12	Number
18.30.30	Fuel Pump (single)	Trunk compartment, inside electrical carrier.	Blue	All Models	All Models	41
18.30.70	Fuel Pump	Trunk compartment, inside electrical carrier.	Blue	Supercharged only	Secondary Fuel Pump	45
86.55.19	Rear Screen Heater	Trunk compartment, inside electrical carrier.	Blue	All Models	All Models	43
86.55.73	Trunk Lid Release	Trunk compartment, inside electrical carrier.	Violet	All Models	All Models	44
86.56.12	Accessory Socket	Trunk compartment, inside electrical carrier.	Blue	All Models	All Models	42
86.56.10	High Mounted Stop Lamp	Trunk compartment, inside electrical carrier.	Blue	Where fitted	Where fitted	39
86.56.11	Fusebox Assembly/ Aux. Positive	Trunk compartment, inside electrical carrier.	Blue	All Models	All Models	40